BALANCE SHAFTS AND CARRIER ASSEMBLY (Continued)

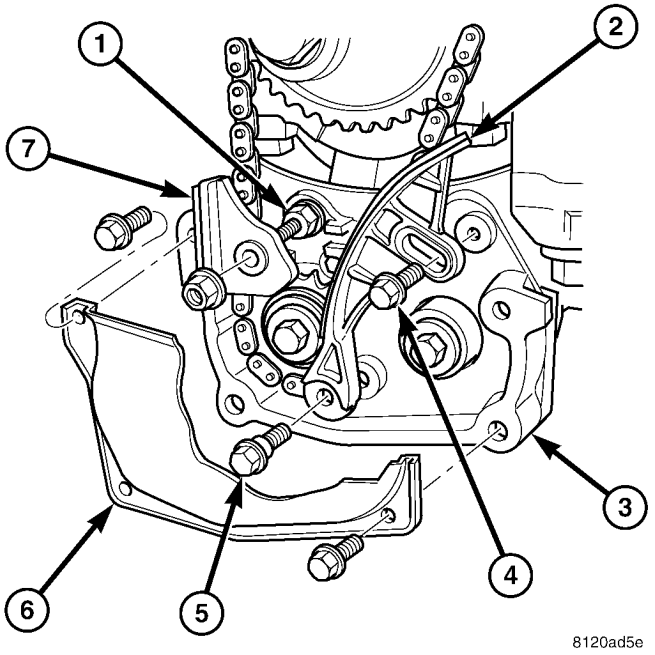


Fig. 109 Chain Cover, Guide and Tensioner

1 - STUD
2 - TENSIONER (ADJUSTER)
3 - GEAR COVER
4 - ADJUSTER SCREW
5 - SHOULDERED PIVOT SCREW
6 - CHAIN COVER (CUTAWAY)
7 - GUIDE

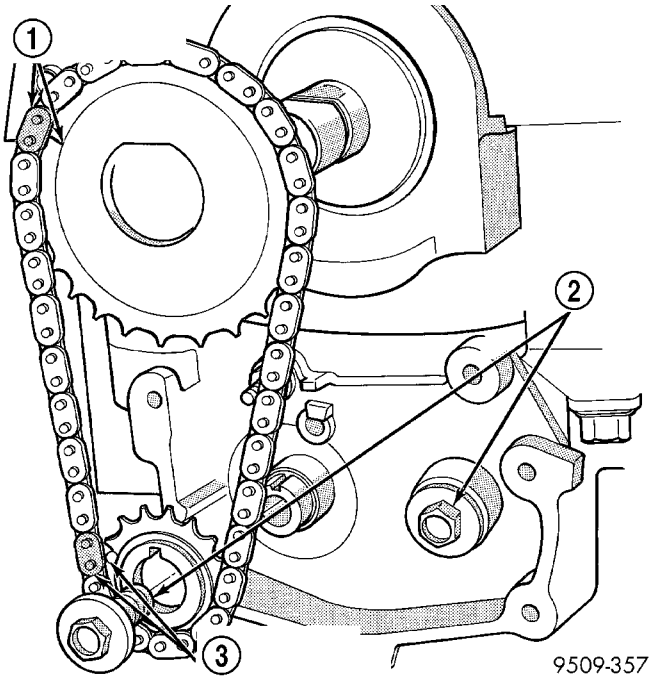


Fig. 110 Drive Chain and Sprockets

1 - NICKEL PLATED LINK AND MARK
2 - GEAR/SPROCKET SCREWS
3 - NICKEL PLATED LINK AND DOT

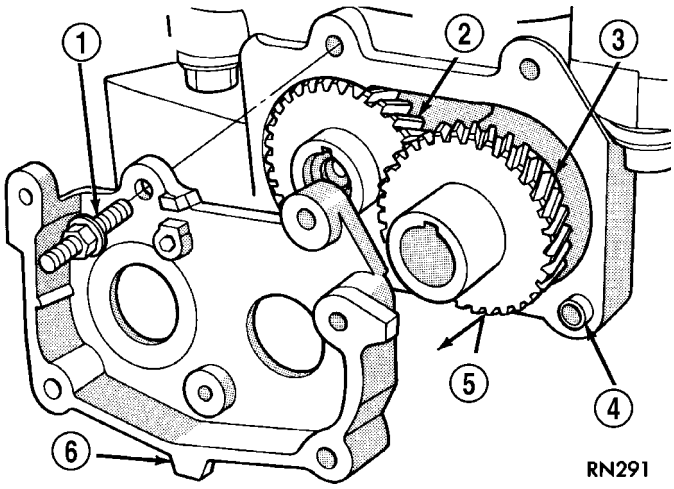


Fig. 111 Gear Cover and Gears

1 - STUD (DOUBLE ENDED)
2 - DRIVE GEAR
3 - DRIVEN GEAR
4 - CARRIER DOWEL
5 - GEAR(S)
6 - GEAR COVER

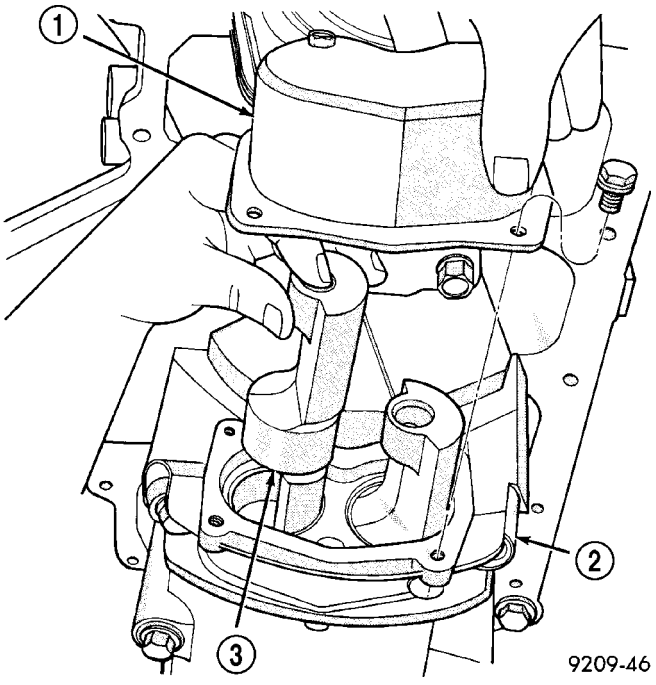


Fig. 112 Balance Shaft(s)—Removal/Installation

1 - REAR COVER
2 - CARRIER
3 - BALANCE SHAFT

(4) Remove screw retaining balance shaft drive sprocket (Fig. 110).

(5) Move balance shaft inboard through drive chain sprocket. Sprocket will hang in lower chain loop.

(6) Remove carrier to crankcase attaching bolts to remove carrier.