BALANCE SHAFTS AND CARRIER ASSEMBLY (Continued)

(13) Install pick-up tube and oil pan (Refer to 9 - ENGINE/LUBRICATION/OIL PAN - INSTALLATION).

(14) Fill engine crankcase with proper oil to correct level.

BALANCE SHAFT CARRIER

DESCRIPTION

The 2.4L engine is equipped with two nodular cast iron balance shafts installed in a cast aluminum carrier attached to the lower cylinder block (Fig. 118).

OPERATION

The balance shafts are driven by the crankshaft via a roller chain and sprockets. The balance shafts are connected by helical gears. The dual counter rotating shafts decrease second order vertical shaking forces caused by component movement.

REMOVAL

(Refer to 9 - ENGINE/VALVE TIMING/BALANCE SHAFT - REMOVAL)

INSTALLATION

(Refer to 9 - ENGINE/VALVE TIMING/BALANCE SHAFT - INSTALLATION)

BALANCE SHAFT CHAIN

REMOVAL

(Refer to 9 - ENGINE/VALVE TIMING/BALANCE SHAFT - REMOVAL)

INSTALLATION

(Refer to 9 - ENGINE/VALVE TIMING/BALANCE SHAFT - INSTALLATION)

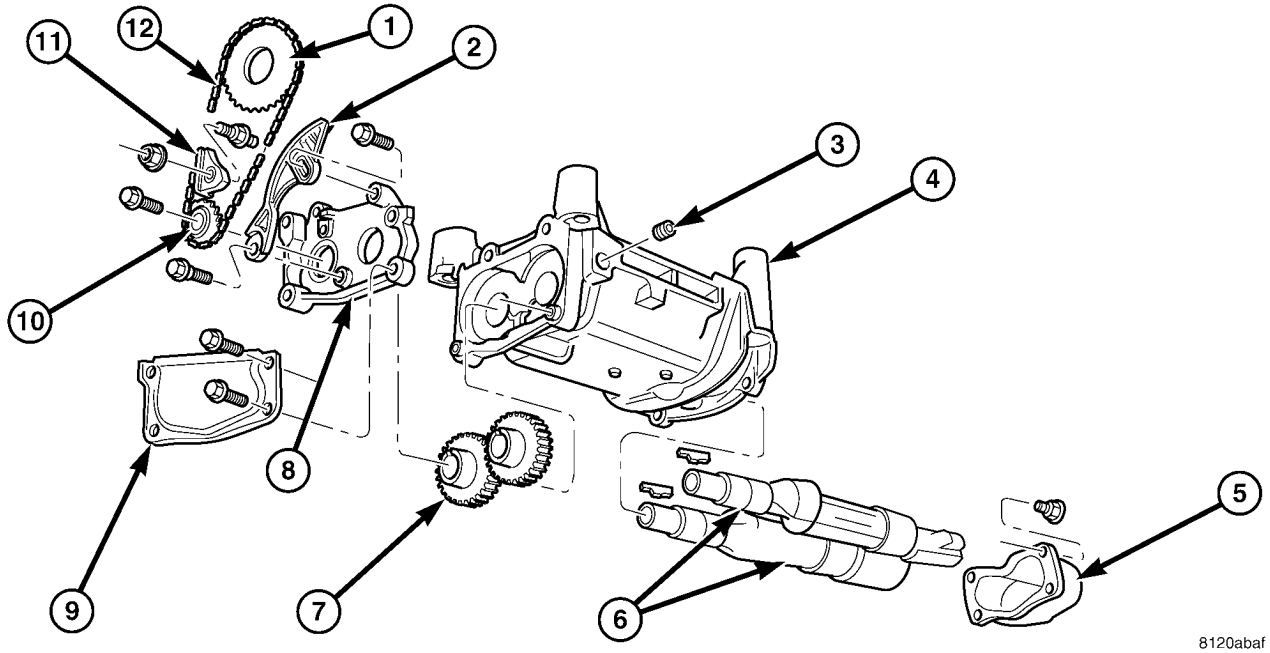

Fig. 118 Balance Shafts and Carrier Assembly

1 - SPROCKET
2 - TENSIONER
3 - PLUG
4 - CARRIER
5 - REAR COVER
6 - BALANCE SHAFTS
7 - GEARS
8 - GEAR COVER
9 - CHAIN COVER
10 - SPROCKET
11 - GUIDE
12 - CHAIN