ENGINE 4.0L (Continued)

(4) Remove the upper radiator hose and coolant recovery hose (Fig. 4).

(5) Remove the lower radiator hose.

(6) Remove upper radiator support retaining bolts and remove radiator support.

(7) Remove the fan assembly from the water pump (Refer to 7 - COOLING/ENGINE/FAN DRIVE VISCOUS CLUTCH - REMOVAL).

(8) Remove the fan shroud (Fig. 4).

(9) Disconnect the transmission fluid cooler lines (automatic transmission).

(10) Discharge the A/C system (Refer to 24 - HEATING & AIR CONDITIONING/PLUMBING - STANDARD PROCEDURE).

(11) Remove the service valves and cap the compressor ports.

(12) Remove the radiator (Refer to 7 - COOLING/ENGINE/RADIATOR - REMOVAL) or radiator/condenser (if equipped with A/C).

(13) Disconnect the heater hoses at the engine thermostat housing and water pump (Fig. 4).

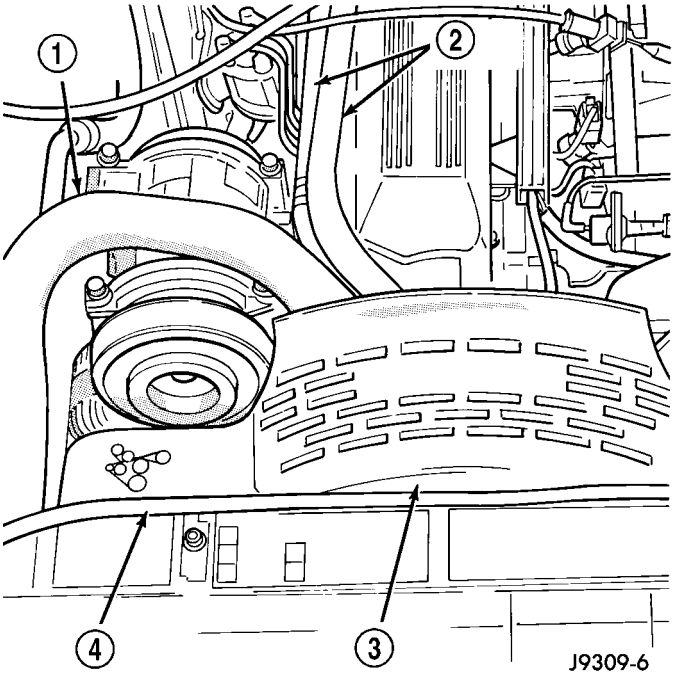


Fig. 4 Upper Radiator Hose, Coolant Recovery Hose, Fan Shroud

1 - UPPER RADIATOR HOSE
2 - HEATER HOSES
3 - FAN SHROUD
4 - COOLANT RECOVERY HOSE

(14) Disconnect the accelerator cable, transmission line pressure cable and speed control cable (if equipped) from the throttle body (Fig. 5).

(15) Remove cables from the bracket and secure out of the way.

(16) Disconnect the body ground at the engine.

(17) Disconnect the following connectors and secure their harness out of the way.

- Power steering pressure switch
- Coolant temperature sensor
- Six (6) fuel injector connectors
- Intake air temperature sensor
- Throttle position sensor
- Map sensor
- Crankshaft position sensor
- Oxygen sensor
- Camshaft position sensor
- Generator connector and B+ terminal wire

(18) Disconnect the coil rail electrical connections and the oil pressure switch connector.

(19) Perform the fuel pressure release procedure (Refer to 14 - FUEL SYSTEM/FUEL DELIVERY - STANDARD PROCEDURE).

(20) Disconnect the fuel supply line at the injector rail (Refer to 14 - FUEL SYSTEM/FUEL DELIVERY/QUICK CONNECT FITTING - STANDARD PROCEDURE).

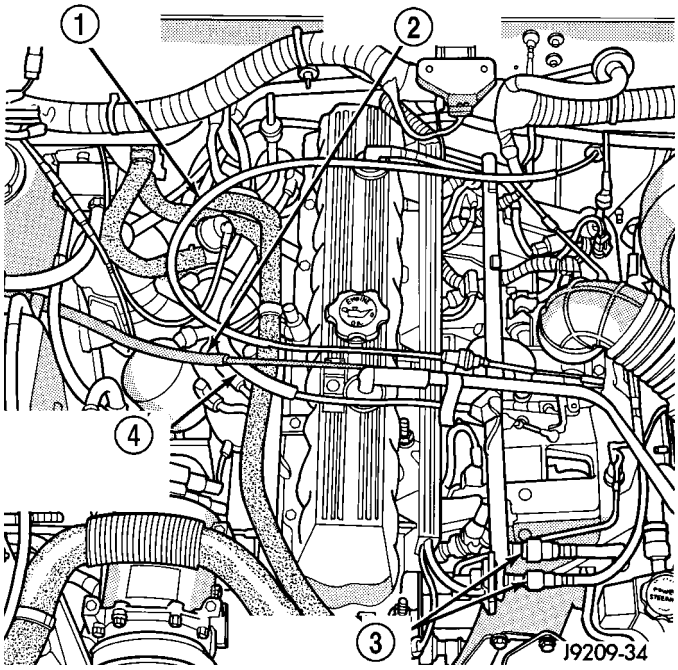


Fig. 5 Accelerator Cable, Vehicle Speed Control Cable, Automatic Transmission

1 - ACCELERATOR CABLE
2 - SPEED CONTROL CABLE
3 - QUICK-CONNECT FUEL LINES
4 - AUTOMATIC TRANSMISSION CONTROL CABLE

(21) Remove the fuel line bracket from the intake manifold.

(22) Remove the air cleaner assembly (Fig. 6).

(23) Disconnect the hoses from the fittings at the steering gear.

(24) Drain the pump reservoir.