AIR CLEANER ELEMENT

REMOVAL

(1) Loosen air tube clamp at housing cover (Fig. 7).
(2) Disconnect air tube at cover.
(3) Pry back the clips retaining air cleaner cover to air cleaner housing.
(4) Lift cover up to expose air cleaner element.
(5) Remove air cleaner element.
(6) Clean inside of air cleaner housing and its cover before installing new element.

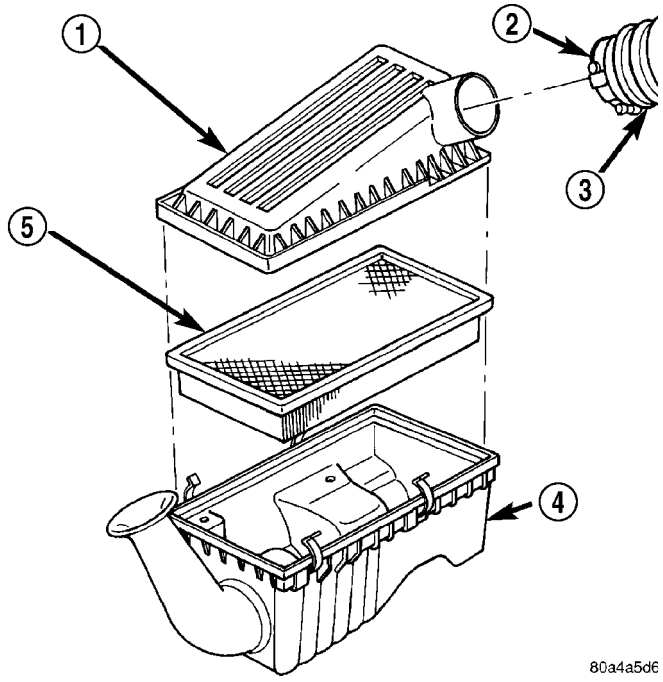

Fig. 7 AIR CLEANER ELEMENT

1 - COVER
2 - CLAMP
3 - AIR TUBE
4 - HOUSING
5 - FILTER

INSTALLATION

(1) Install air cleaner element into housing.
(2) Install housing cover to housing. Be sure cover is properly seated to air cleaner housing.
(3) Connect air tube at cover.

AIR CLEANER HOUSING

REMOVAL

(1) Loosen air tube clamp at housing cover.
(2) Disconnect air tube at cover. (Fig. 8)
(3) Pry back the clips retaining air cleaner cover to air cleaner housing.
(4) Lift cover up to expose air cleaner element.
(5) Remove air cleaner element.

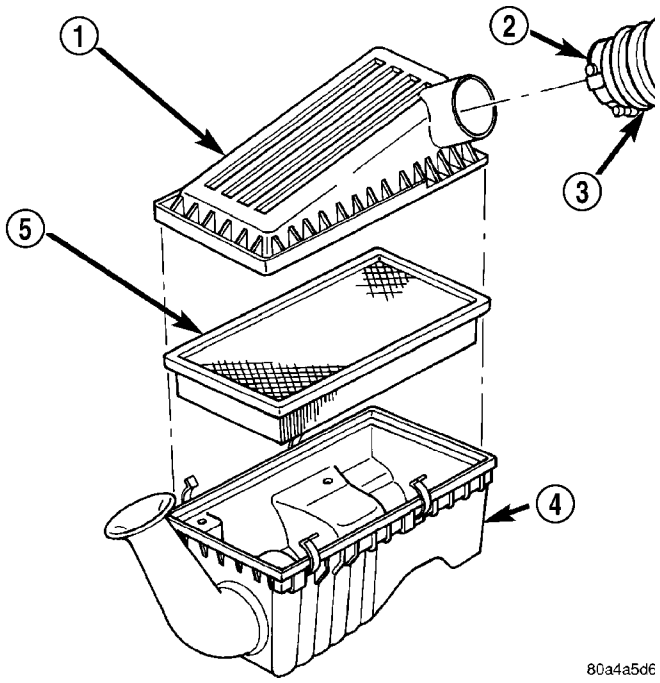

Fig. 8 AIR CLEANER ELEMENT

1 - COVER
2 - CLAMP
3 - AIR TUBE
4 - HOUSING
5 - FILTER

(6) Remove the air inlet duct.
(7) Lift up and remove the air cleaner housing.
(8)

INSTALLATION

(1) Push down on the air cleaner housing to lock in place.
(2) Install the air inlet tube.
(3) Install the air cleaner element.
(4) Pry back the clips retaining air cleaner cover to air cleaner housing. (Fig. 8)
(5) Install the air cleaner housing cover. Be sure cover is properly seated.
(6) Install the air out let tube.

CYLINDER HEAD

DESCRIPTION

The cylinder head is made of cast iron containing twelve valves made of chrome plated heat resistant steel, valve stem seals, springs, retainers and keepers. The cylinder head and valve seats can be resurfaced for service purposes.

The valve guides are integral to the cylinder head, They are not replaceable. However, they are serviceable.