CRANKSHAFT MAIN BEARINGS (Continued)

Crankshaft Journal #7 Only		Corresponding Bearing Insert	
Color Code	Diameter	Upper Insert Size	Lower Insert Size
Yellow	63.4873 - 63.4746 mm (2.4995 - 2.4990 in.)	Yellow - Standard	Yellow - Standard
Orange	63.4746 - 63.4619 mm (2.4990 - 2.4985 in.) 0.0127 mm (0.0005 in.) Undersize	Yellow - Standard	Blue - Undersize 0.025 mm (0.001 in.)
Blue	63.4619 - 63.4492 mm (2.4985 - 2.4980 in.) 0.0254 mm (0.001 in.) Undersize	Blue - Undersize 0.025 mm (0.001 in.)	Blue - Undersize 0.025 mm (0.001 in.)
Green	63.4492 - 63.4365 mm (2.4980 - 2.4975 in.) 0.0381 mm (0.0015 in.) Undersize	Blue - Undersize 0.025 mm (0.001 in.)	Green - Undersize 0.051 mm (0.002 in.)
Red	63.2333 - 63.2206 mm (2.4895 - 2.4890 in.) 0.254 mm (0.010 in.) Undersize	Red - Undersize 0.254 mm (0.010 in.)	Red - Undersize 0.254 mm (0.010 in.)

REMOVAL

(1) Disconnect negative cable from battery.

(2) Remove the spark plugs (Refer to 8 - ELECTRICAL/IGNITION CONTROL/SPARK PLUG - REMOVAL).

(3) Raise the vehicle.

(4) Remove the oil pan (Refer to 9 - ENGINE/LUBRICATION/OIL PAN - REMOVAL) and oil pump (Refer to 9 - ENGINE/LUBRICATION/OIL PUMP - REMOVAL).

(5) Remove main bearing cap brace (Fig. 45).

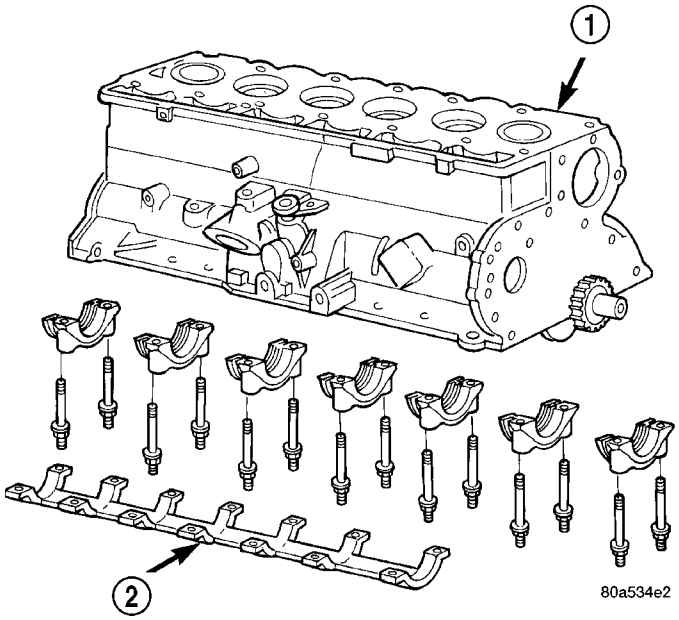

Fig. 45 Main Bearing Caps and Brace.

1 - BLOCK
2 - MAIN BEARING CAP BRACE

(6) Remove only one main bearing cap and lower insert at a time (Fig. 46).

(7) Remove the lower insert from the bearing cap.

(8) Remove the upper insert by LOOSENING (DO NOT REMOVE) all of the other bearing caps. Now insert a small cotter pin tool in the crankshaft journal oil hole. Bend the cotter pin as illustrated to fabricate the tool (Fig. 47). With the cotter pin tool in place, rotate the crankshaft so that the upper bearing insert will rotate in the direction of its locking tab. Because there is no hole in the No.3 main journal, use a tongue depressor or similar soft-faced tool to remove the bearing insert (Fig. 47). After moving the insert approximately 25 mm (1 inch), it can be removed by applying pressure under the tab.

(9) Using the same procedure described above, remove the remaining bearing inserts one at a time for inspection.