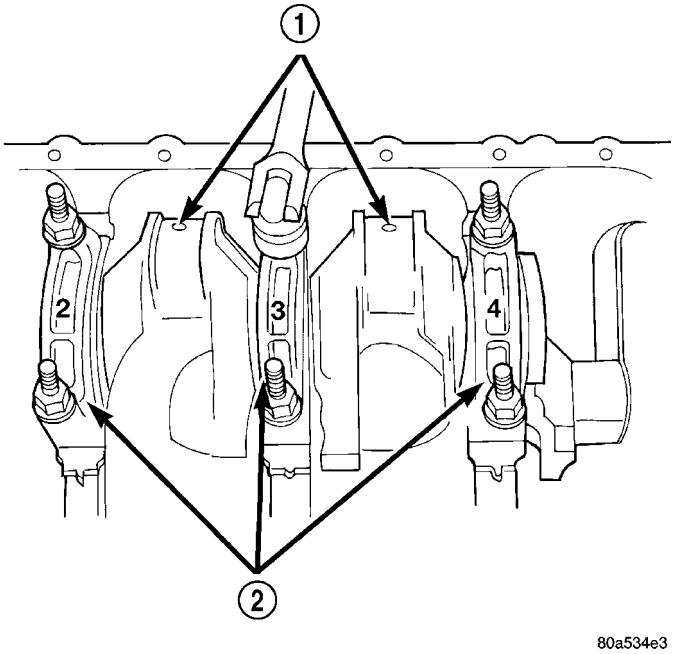

Fig. 46 Removing Main Bearing Caps and Lower Inserts

1 - CONNECTING ROD JOURNAL
2 - MAIN BEARING CAPS

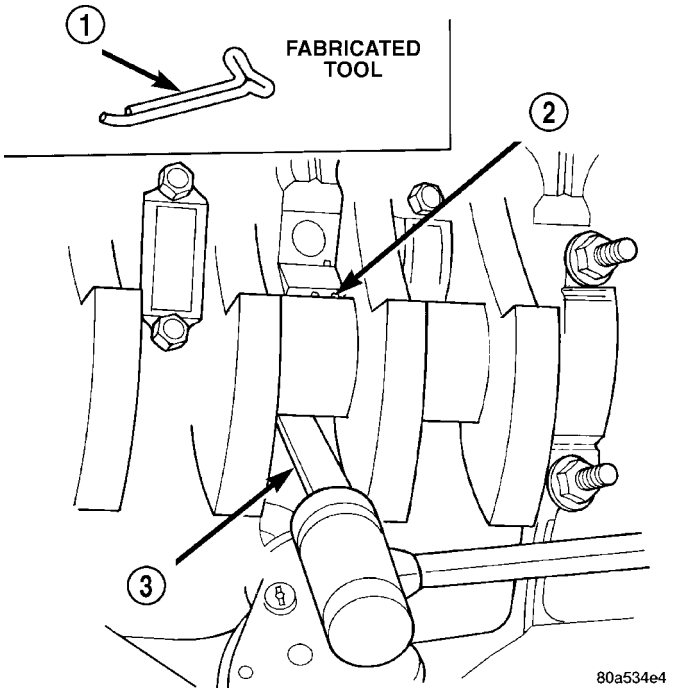

Fig. 47 Removing Upper Inserts

1 - COTTER PIN
2 - BEARING INSERT
3 - TONGUE DEPRESSOR

INSPECTION

Wipe the inserts clean and inspect for abnormal wear patterns and for metal or other foreign material imbedded in the lining. Normal main bearing insert wear patterns are illustrated (Fig. 48). In general the lower bearing half will have a heaver wear pattern.

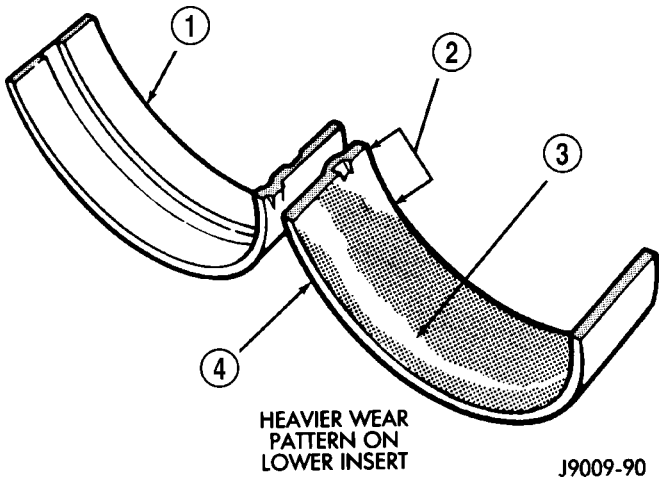

Fig. 48 Main Bearing Wear Patterns

1 - UPPER INSERT
2 - NO WEAR IN THIS AREA
3 - LOW AREA IN BEARING LINING
4 - LOWER INSERT

NOTE: If any of the crankshaft journals are scored, remove the engine for crankshaft repair.

Inspect the back of the inserts for fractures, scrapings or irregular wear patterns.

Inspect the upper insert locking tabs for damage.

Replace all damaged or worn bearing inserts.

INSTALLATION

(1) Lubricate the bearing surface of each insert with engine oil.

(2) Loosen all the main bearing caps. Install the main bearing upper inserts.

(3) Install the lower bearing inserts into the main bearing caps.

(4) On the rear main cap, apply Mopar® Gasket Maker sealer on both sides of cylinder block as shown in (Fig. 49). The dab of sealer should be 3 mm (0.125 in.) in diameter.

(5) Apply Mopar® Gasket Maker on the rear bearing cap. The bead should be 2.3 mm (0.09 in.) in diameter. DO NOT apply sealer to the lip of the seal.

(6) Install the main bearing cap(s) and lower insert(s).

(7) Tighten the bolts of caps 1, 2, 4, 5, 6, and 7 to 54 N·m (40 ft. lbs.) torque. Now tighten these bolts to 95 N·m (70 ft. lbs.) torque. Finally, tighten these bolts to 108 N·m (80 ft. lbs.) torque.

(8) Push the crankshaft forward and backward. Load the crankshaft front or rear and tighten cap bolt No.3 to 54 N·m (40 ft. lbs.) torque. Then tighten