CRANKSHAFT OIL SEAL - FRONT (Continued)

INSTALLATION

This procedure is done with the timing case cover installed.

(1) Position the replacement oil seal on Timing Case Cover Alignment and Seal Installation Tool 6139 with seal open end facing inward. Apply a light film of Perfect Seal, or equivalent, on the outside diameter of the seal. Lightly coat the crankshaft with engine oil.

(2) Position the tool and seal over the end of the crankshaft and insert a draw screw tool into Seal Installation Tool 6139 (Fig. 51). Tighten the nut against the tool until it contacts the cover.

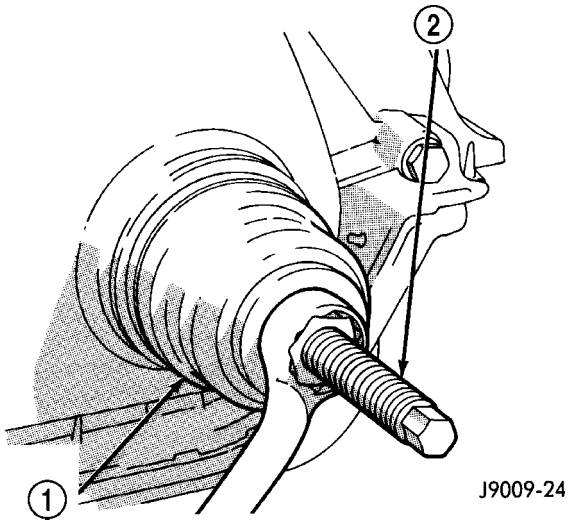

Fig. 51 Timing Case Cover Oil Seal Installation

1 - SEAL INSTALLATION TOOL
2 - DRAW SCREW TOOL

(3) Remove the tools. Apply a light film of engine oil on the vibration damper hub contact surface of the seal.

(4) Apply Mopar® Silicone Rubber Adhesive Sealant to the keyway in the crankshaft and insert the key. With the key inserted in the keyway in the crankshaft, install the vibration damper (Refer to 9 - ENGINE/ENGINE BLOCK/VIBRATION DAMPER - INSTALLATION).

(5) Install the serpentine belt (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - INSTALLATION).

(6) Install the radiator shroud.

(7) Connect negative cable to battery.

CRANKSHAFT OIL SEAL - REAR

REMOVAL

The crankshaft rear main bearing oil seal consists of two half pieces of viton with a single lip that effectively seals the rear of the crankshaft. Replace the upper and lower seal halves as a unit to ensure leak-free operation.

(1) Remove transmission inspection cover.

(2) Remove oil pan. (Refer to 9 - ENGINE/LUBRICATION/OIL PAN - REMOVAL)

(3) Remove main bearing cap brace.

(4) Remove rear main bearing cap (No.7).

(5) Push upper seal out of the groove. Ensure that the crankshaft and seal groove are not damaged.

(6) Remove lower half of the seal from the bearing cap.

INSTALLATION

The crankshaft rear main bearing oil seal consists of two half pieces of viton with a single lip that effectively seals the rear of the crankshaft. Replace the upper and lower seal halves as a unit to ensure leak-free operation.

(1) Wipe the seal surface area of the crankshaft until it is clean.

(2) Apply a thin coat of engine oil.

(3) Coat lip of the seal with engine oil.

(4) Carefully position the upper seal into the groove in the cylinder block. The lip of the seal faces toward the front of the engine.

(5) Apply Mopar® Gasket Maker sealer on both sides of cylinder block as shown in (Fig. 52). The dab of sealer should be 3 mm (0.125 in.) in diameter.

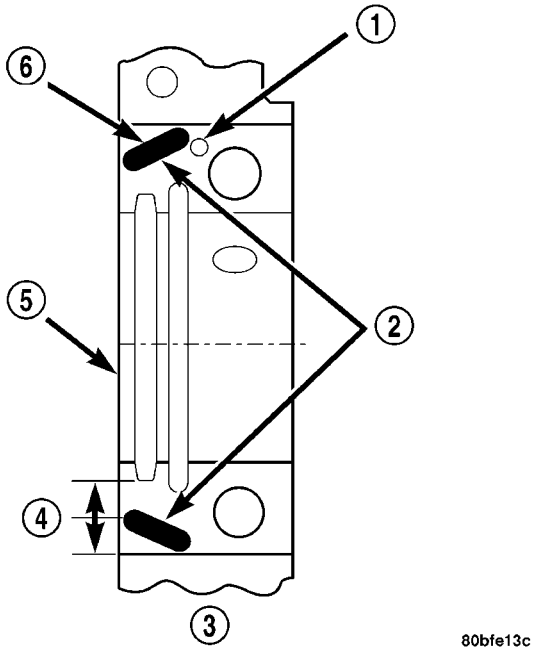

Fig. 52 Location of Sealer

1 - **DOWEL**
2 - **SEALER LOCATIONS**
3 - **CYLINDER BLOCK**
4 - **HALFWAY BETWEEN**
5 - **REAR FACE OF CYLINDER BLOCK**
6 - **3mm (0.125 in.)**