PISTON & CONNECTING ROD (Continued)

MUST be replaced as complete sets. Tin coated pistons should not be used as replacements for coated pistons.

(4) The coating material is applied to the piston after the final piston machining process. Measuring the outside diameter of a coated piston will not provide accurate results (Fig. 57). Therefore measuring the inside diameter of the cylinder bore with a dial Bore Gauge is **MANDATORY**. To correctly select the proper size piston, a cylinder bore gauge capable of reading in 0.003 mm (.0001 in.) increments is required.

(5) Piston installation into the cylinder bore requires slightly more pressure than that required for non-coated pistons. The bonded coating on the piston will give the appearance of a line-to-line fit with the cylinder bore.

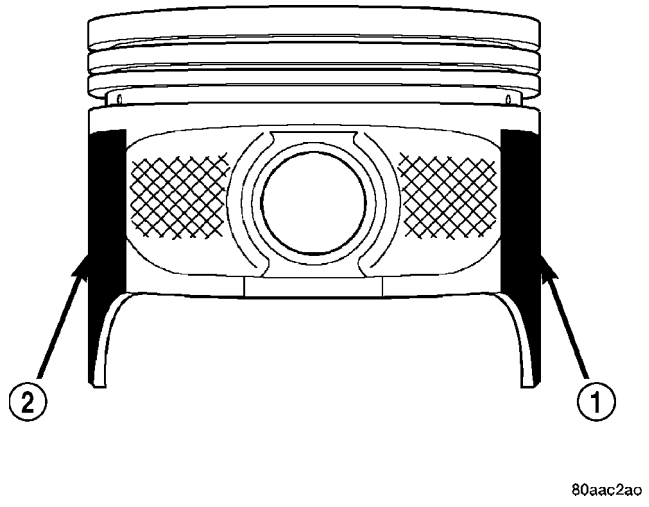

Fig. 57 Moly Coated Piston

1 - MOLY COATED
2 - MOLY COATED

PISTON SIZE CHART

CYLINDER BORE SIZE	PISTON LETTER SIZE
98.438 - 98.448 mm (3.8755 - 3.8759 in.)	A
98.448 - 98.458 mm (3.8759 - 3.8763 in.)	B
98.458 - 98.468 mm (3.8763 - 3.8767 in.)	C
98.468 - 98.478 mm (3.8767 - 3.8771 in.)	D
98.478 - 98.488 mm (3.8771 - 3.8775 in.)	E
98.488 - 98.498 mm (3.8775 - 3.8779 in.)	F

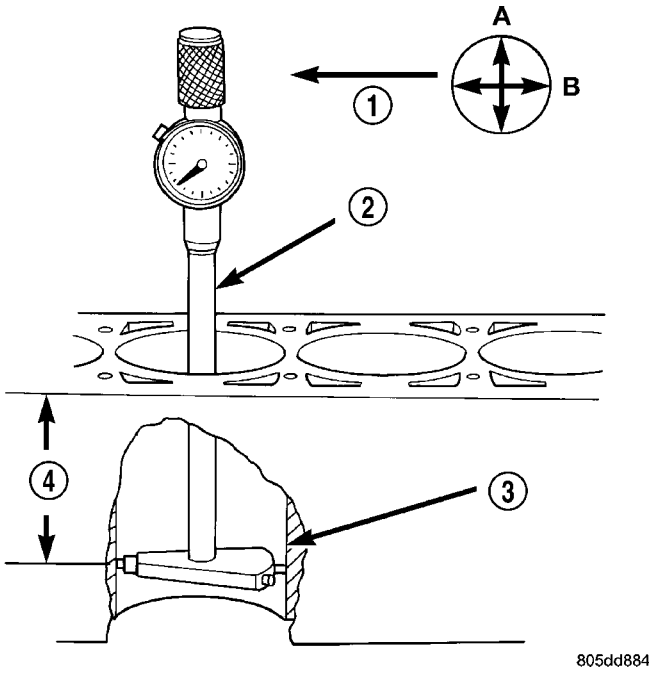

Fig. 58 Bore Gauge

1 - FRONT
2 - BORE GAUGE
3 - CYLINDER BORE
4 - 49.5 MM (1-15/16 in.)

REMOVAL

(1) Remove the engine cylinder head cover. (Refer to 9 - ENGINE/CYLINDER HEAD/CYLINDER HEAD COVER(S) - REMOVAL).

(2) Remove the rocker arms, bridges and pivots.

(3) Remove the push rods.

(4) Remove the engine cylinder head. (Refer to 9 - ENGINE/CYLINDER HEAD - REMOVAL).

(5) Position the pistons one at a time near the bottom of the stroke. Use a ridge reamer to remove the ridge from the top end of the cylinder walls. Use a protective cloth to collect the cuttings.

(6) Raise the vehicle.

(7) Drain the engine oil.