PISTON RINGS (Continued)

(7) The second compression ring has a slight chamfer on the bottom of the inside edge and a dot on the top for correct installation (Fig. 67) and (Fig. 68).

(8) Using a ring installer, install the second compression ring with the dot facing up (Fig. 67) (Fig. 69).

(9) Using a ring installer, install the top compression ring (either side up).

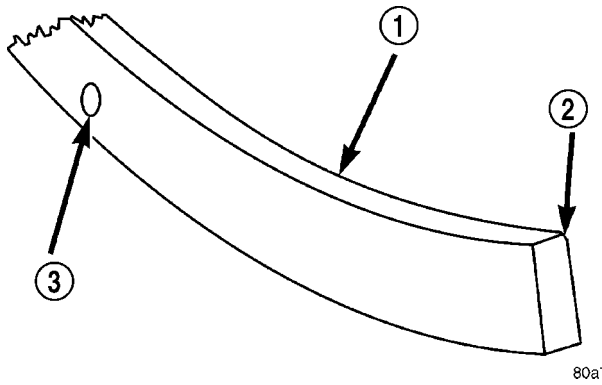

Fig. 67 Second Compression Ring Identification

1 - SECOND COMPRESSION RING
2 - CHAMFER
3 - ONE DOT

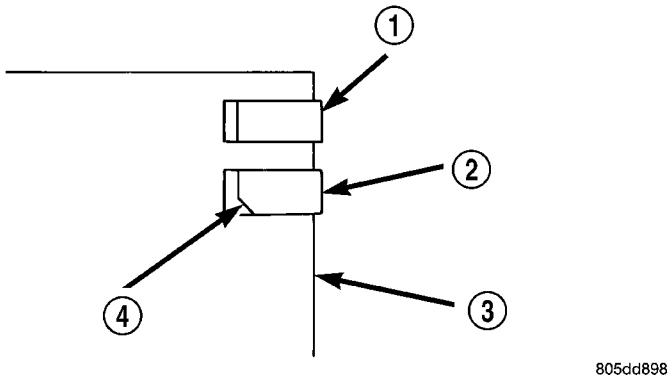

Fig. 68 Compression Ring Chamfer Location

1 - TOP COMPRESSION RING
2 - SECOND COMPRESSION RING
3 - PISTON
4 - CHAMFER

Ring Gap Orientation

- Position the gaps on the piston as shown (Fig. 70).
- Oil spacer - Gap on center line of piston skirt.
- Oil rails - gap 180° apart on centerline of piston pin bore.
- No. 2 Compression ring - Gap 180° from top oil rail gap.
- No. 1 Compression ring - Gap 180° from No. 2 compression ring gap.

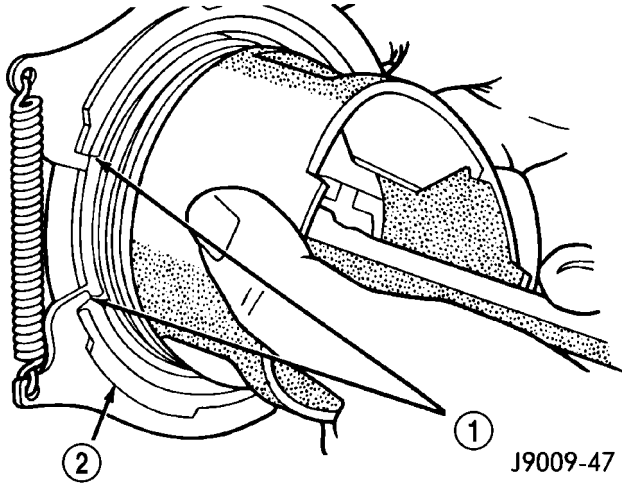

Fig. 69 Compression Ring Installation

1 - COMPRESSION RING
2 - RING EXPANDER RECOMMENDED

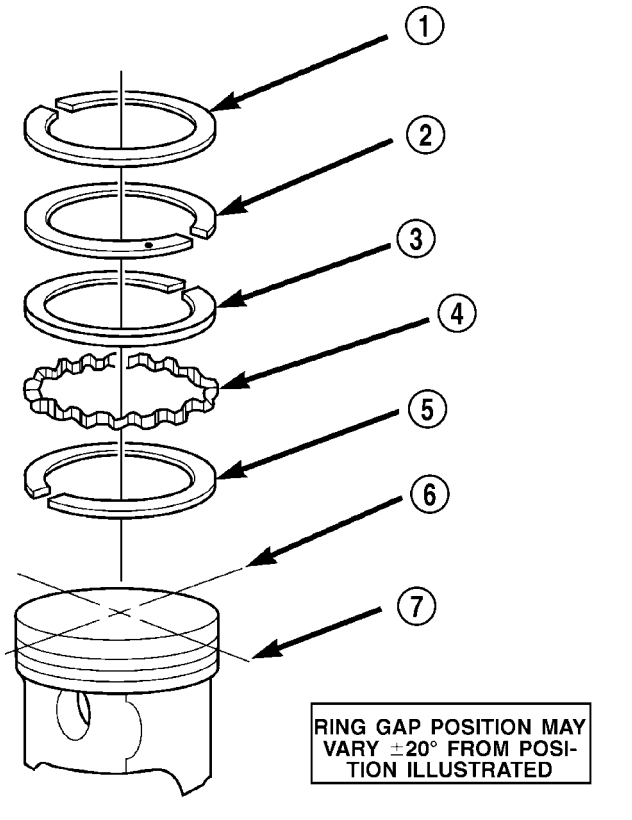

Fig. 70 Ring Gap Orientation

1 - TOP COMPRESSION RING
2 - BOTTOM COMPRESSION RING
3 - TOP OIL CONTROL RAIL
4 - OIL RAIL SPACER
5 - BOTTOM OIL CONTROL RAIL
6 - IMAGINARY LINE PARALLEL TO PISTON PIN
7 - IMAGINARY LINE THROUGH CENTER OF PISTON SKIRT