VIBRATION DAMPER

REMOVAL

(1) Disconnect negative cable from battery.
(2) Remove the serpentine drive belt (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - REMOVAL) and fan shroud.
(3) Remove the vibration damper retaining bolt and washer.
(4) Use Vibration Damper Removal Tool 7697 to remove the damper from the crankshaft (Fig. 71).

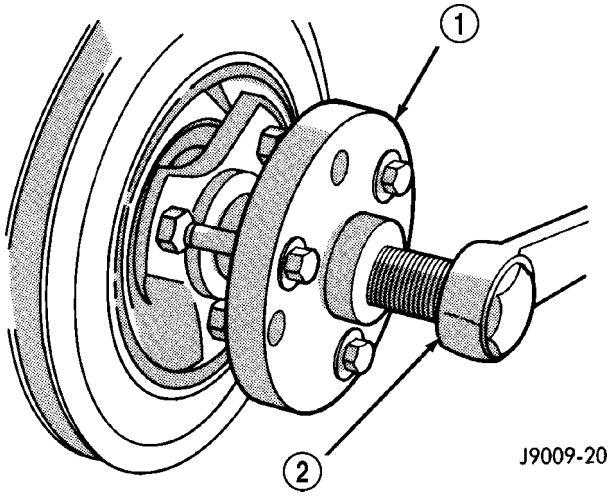

Fig. 71 Vibration Damper Removal Tool 7697

1 - VIBRATION DAMPER REMOVAL TOOL
2 - WRENCH

INSTALLATION

(1) Apply Mopar® Silicone Rubber Adhesive Sealant to the keyway in the crankshaft and insert the key. With the key in position, align the keyway on the vibration damper hub with the crankshaft key and tap the damper onto the crankshaft.
(2) Install the vibration damper retaining bolt and washer.
(3) Tighten the damper retaining bolt to 108 N·m (80 ft. lbs.) torque.
(4) Install the serpentine drive belt (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - INSTALLATION) and fan shroud.
(5) Connect negative cable to battery.

STRUCTURAL SUPPORT

REMOVAL

The engine bending braces are used to add strength to the powertrain and to address some minor NVH concerns.

NOTE: Before the engine or the transmission can be removed the engine bending braces must be removed.

(1) Raise and support vehicle.

NOTE: Both left and right side bending braces are removed the sameway. Only the right side is shown.

NOTE: The exhaust does not require removal to preform this procedure.

(2) Remove the exhaust hanger bracket retaining bolt.
(3) Remove locknut and transmission bending brace bar.
(4) Remove engine-to-bending brace retaining bolt, bending brace bar and cross bar.

INSTALLATION

NOTE: DO NOT tighten the retaining hardware until all bending braces are in place.

(1) Position the cross brace into the engine-to-transmission brace, then position the engine-to-transmission brace and install retaining bolt.
(2) Position the transmission bending brace onto through brace and install new locknut.
(3) Position exhaust hanger and transmission brace, install retaining bolt (Fig. 73).
(4) Tighten engine-to-transmission brace retaining bolt (Fig. 72)to 40 N·m (30 ft. lbs.).

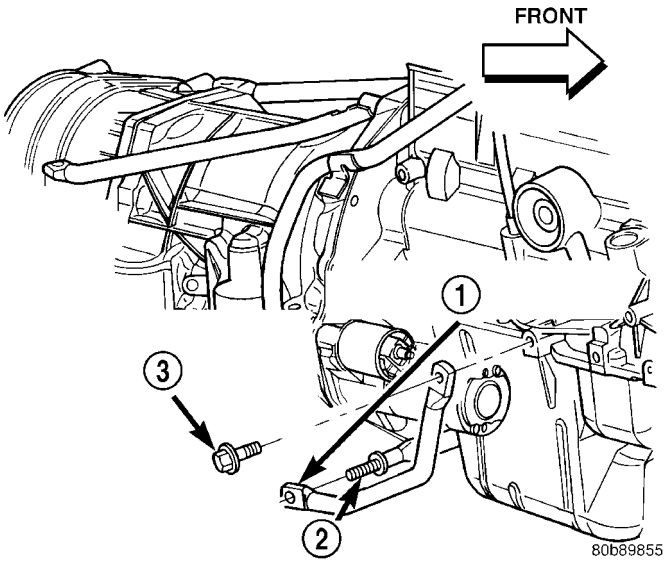

Fig. 72 Engine-to-Transmission Bending Braces

1 - ENGINE-TO-TRANSMISSION BENDING BRACE
2 - CROSS BRACE
3 - ENGINE-TO-TRANSMISSION BENDING BRACE RETAINING BOLT