STRUCTURAL SUPPORT (Continued)

(5) Tighten transmission brace retaining bolts (Fig. 73)to 40 N·m (30 ft. lbs.), then tighten transmission brace retaining lock nuts (Fig. 73) to 108 N·m (80 ft. lbs.).

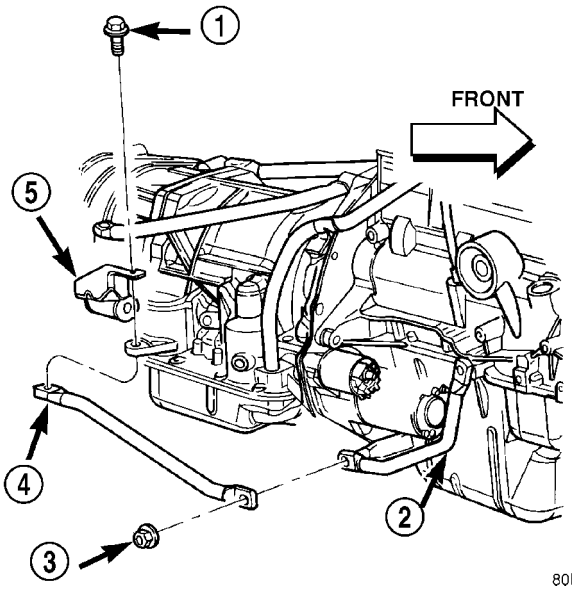

Fig. 73 Transmission Bending Braces and Exhaust Hanger

1 - TRANSMISSION BENDING BRACE RETAINING BOLT
2 - ENGINE-TO-TRANSMISSION BENDING BRACE
3 - LOCKNUT
4 - TRANSMISSION BRACE
5 - EXHAUST HANGER

FRONT MOUNT

REMOVAL

The front mounts support the engine at each side. These supports are made of resilient rubber.

(1) Disconnect negative cable from battery.
(2) Raise the vehicle.
(3) Support the engine.
(4) Remove the nut from the through bolt (Fig. 74) (Fig. 75). DO NOT remove the through bolt.
(5) Remove the retaining bolts and nuts from the insulator.
(6) Remove the through bolt.
(7) Remove the insulator.

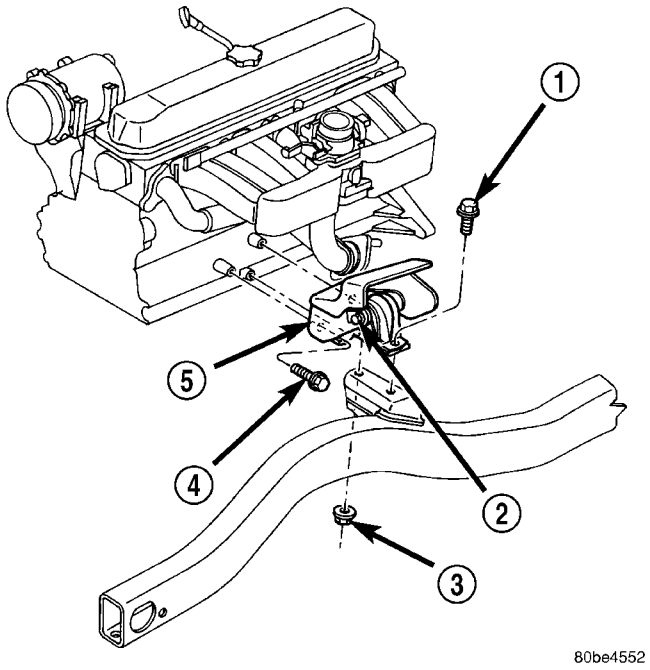

Fig. 74 Left Front Engine Mount

1 - **BOLT (2)**
2 - **THROUGH BOLT**
3 - **NUT (2)**
4 - **BOLT (3)**
5 - **LEFT HAND ENGINE MOUNT ASSEMBLY**

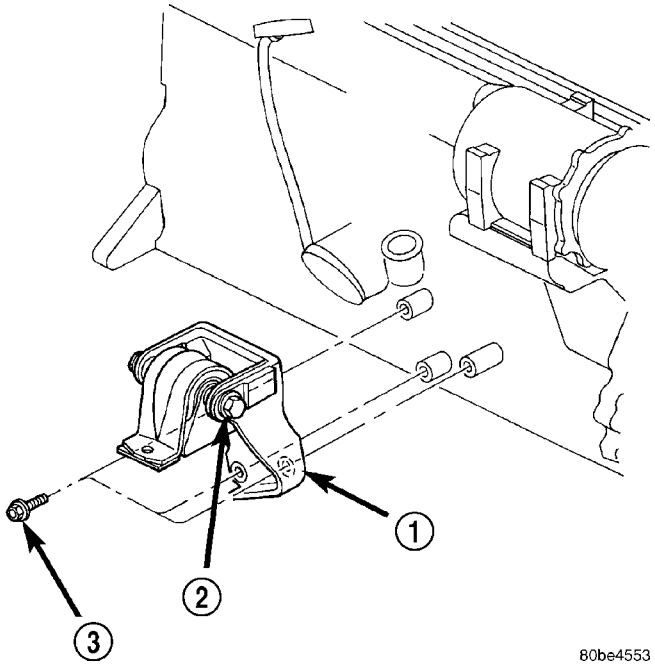

Fig. 75 Right Front Engine Mount

1 - RIGHT HAND ENGINE MOUNT ASSEMBLY
2 - THROUGH BOLT
3 - BOLT (3)