FRONT MOUNT (Continued)

INSTALLATION

The front mounts support the engine at each side. These supports are made of resilient rubber.

(1) If the engine support bracket was removed, position the bracket onto the block and install the attaching bolts (Fig. 74) (Fig. 75). Tighten the bolts to 50 N·m (37 ft. lbs.) torque.

(2) Place the insulator on the support bracket. Install the insulator retaining bolts and nuts. Tighten the bolts and nuts to 40 N·m (30 ft. lbs) torque.

(3) Install the through bolt and the retaining nut. Tighten the through bolt nut to 48 N·m (35 ft. lbs.) torque.

(4) Remove the engine support.

(5) Lower the vehicle.

(6) Connect negative cable to battery.

REAR MOUNT

REMOVAL

A resilient rubber cushion supports the transmission at the rear between the transmission extension housing and the rear support crossmember or skid plate.

ALL TRANSMISSIONS

(1) Disconnect negative cable from battery.

(2) Raise the vehicle and support the transmission.

(3) Remove the nuts holding the support cushion to the skid plate (Fig. 76) (Fig. 77).

MANUAL TRANSMISSIONS

(1) Remove nuts holding support cushion to transmission support bracket.

(2) Remove the support cushion.

(3) Remove bolts holding transmission support bracket to transmission.

(4) Remove the transmission support bracket.

AUTOMATIC TRANSMISSIONS

(1) Remove nuts holding support cushion to transmission support bracket (Fig. 77). Remove the support cushion.

(2) Remove the bolts holding the transmission support bracket to transmission.

(3) Remove the transmission support bracket.

INSTALLATION

MANUAL TRANSMISSION

(1) Position the transmission mount bracket to the transmission and install the bolts (Fig. 76).

(2) Tighten the bolts to 54 N·m (40 ft. lbs.) torque.

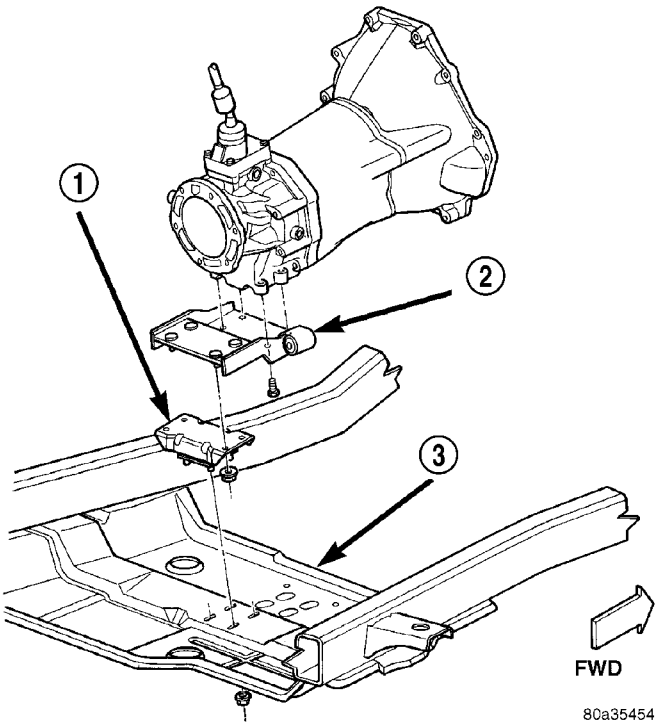

Fig. 76 Rear Mount (Manual Transmission)

1 - CUSHION
2 - BRACKET
3 - SKID PLATE

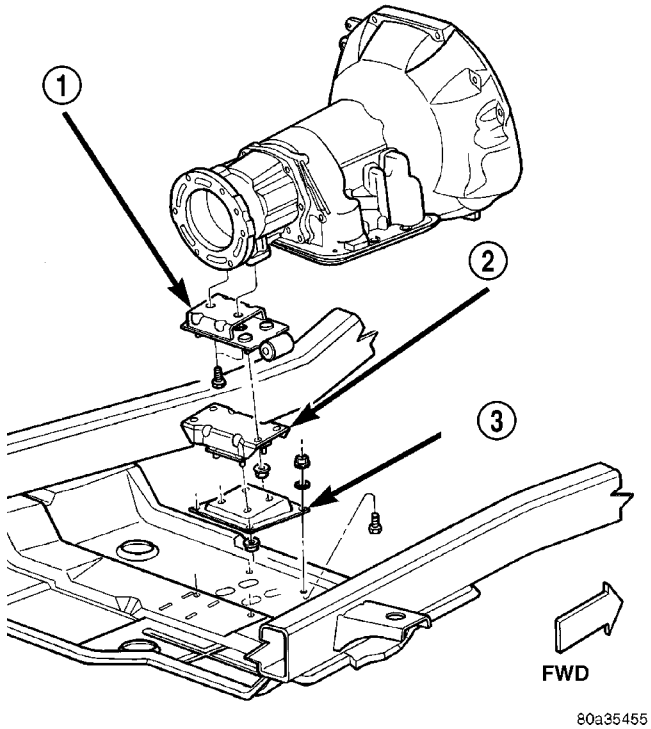

Fig. 77 Rear Mount (AutomaticTransmission)

1 - BRACKET
2 - CUSHION
3 - BRACKET