CATALYTIC CONVERTER (Continued)

cause of the damage at the same time the converter is replaced. Also, inspect all other components of the exhaust system for heat damage.

The catalytic converter and muffler are serviced as an assembly.

Unleaded gasoline must be used to avoid contaminating the catalyst core.

REMOVAL

REMOVAL - 2.4L

WARNING: THE NORMAL OPERATING TEMPERATURE OF THE EXHAUST SYSTEM IS VERY HIGH. THEREFORE, NEVER ATTEMPT TO SERVICE ANY PART OF THE EXHAUST SYSTEM UNTIL IT IS COOLED. SPECIAL CARE SHOULD BE TAKEN WHEN WORKING NEAR THE CATALYTIC CONVERTER. THE TEMPERATURE OF THE CONVERTER RISES TO A HIGH LEVEL AFTER A SHORT PERIOD OF ENGINE OPERATION TIME.

WARNING: IF TORCHES ARE USED WHEN WORKING ON THE EXHAUST SYSTEM, DO NOT ALLOW THE FLAME NEAR THE FUEL LINES.

CAUTION: When servicing exhaust system components, disconnect the oxygen sensor connector(s). Allowing the exhaust system to hang by the oxygen sensor harness will damage the wiring and/or sensor.

(1) Disconnect the oxygen sensors.

(2) Remove the two bolts and flanged nuts at the manifold (Fig. 3).

(3) Remove the two bolts and flanged nuts at the flange.

(4) Remove the mini catalyst assembly from the vehicle.

(5) Slide exhaust pipe forward until exhaust pipe hanger disengages from transmission support. Remove exhaust pipe and catalytic converter from vehicle.

REMOVAL - 4.0L

WARNING: THE NORMAL OPERATING TEMPERATURE OF THE EXHAUST SYSTEM IS VERY HIGH. THEREFORE, NEVER ATTEMPT TO SERVICE ANY PART OF THE EXHAUST SYSTEM UNTIL IT IS COOLED. SPECIAL CARE SHOULD BE TAKEN WHEN WORKING NEAR THE CATALYTIC CONVERTER. THE TEMPERATURE OF THE CONVERTER RISES TO A HIGH LEVEL AFTER A SHORT PERIOD OF ENGINE OPERATION TIME.

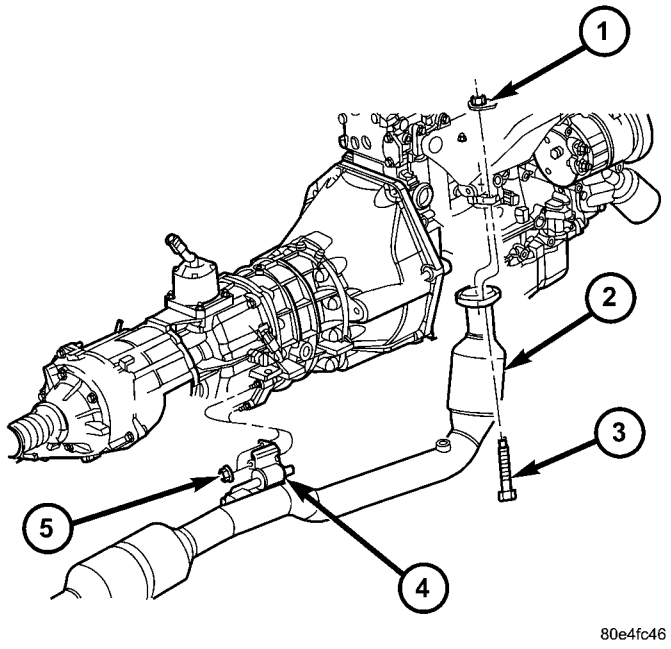

Fig. 3 2.4L Exhaust Pipe and Catalytic Converter - 4x4

1- FLANGED NUT
2- MINI CATALYST ASSEMBLY
3- BOLT
4- HANGER
5- NUT

WARNING: IF TORCHES ARE USED WHEN WORKING ON THE EXHAUST SYSTEM, DO NOT ALLOW THE FLAME NEAR THE FUEL LINES.

CAUTION: When servicing exhaust system components, disconnect the oxygen sensor connector(s). Allowing the exhaust system to hang by the oxygen sensor harness will damage the wiring and/or sensor.

(1) Raise and support the vehicle.

(2) Saturate the studs and nuts with a Mopar® rust penetrant. Allow 5 minutes for penetration.

(3) Remove the oxygen sensors from the exhaust pipe and the catalytic converter.

(4) Disconnect the exhaust pipe from the engine exhaust manifold (Fig. 4).

(5) Remove mini catalytic converter flange retaining nuts (Fig. 4).

(6) Slide exhaust pipe forward until exhaust pipe hanger disengages from transmission support. Remove exhaust pipe and catalytic converter from vehicle.