FRONT EXTENSION

REMOVAL

(1) Remove the bolts attaching the bumper extension to the bumper (Fig. 1).

(2) Separate the extension from the bumper.

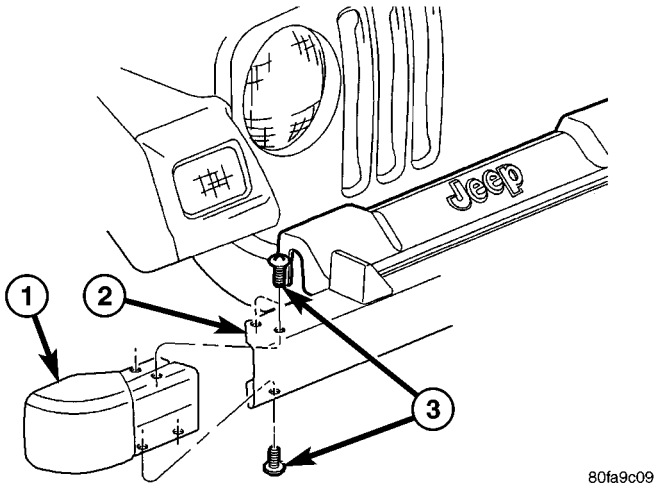

Fig. 1 BUMPER EXTENSION

1 - BUMPER EXTENSION
2 - FRONT BUMPER
3 - BOLTS (2 ON TOP AND 1 ON BOTTOM)

INSTALLATION

(1) Position the extension to the bumper

(2) Install the screws retaining the front bumper extension. (Fig. 1)

FRONT BUMPER

REMOVAL

(1) If equipped, disconnect the fog lamp harness connector.

(2) Remove the screws that attach the bumper to the frame rail (Fig. 2).

(3) If equipped, remove the tow hook. (Refer to 13 - FRAME & BUMPERS/FRAME/FRONT TOW HOOK - REMOVAL)

(4) Separate the bumper from the vehicle.

INSTALLATION

(1) Position the bumper on the vehicle.

(2) If equipped, install the tow hook. (Refer to 13 - FRAME & BUMPERS/FRAME/FRONT TOW HOOK - INSTALLATION)

(3) Install the screws that attach the bumper to the frame rail and tighten to 108 N·m (80 ft. lbs.).

(4) If equipped, Connect the fog lamp harness connector.

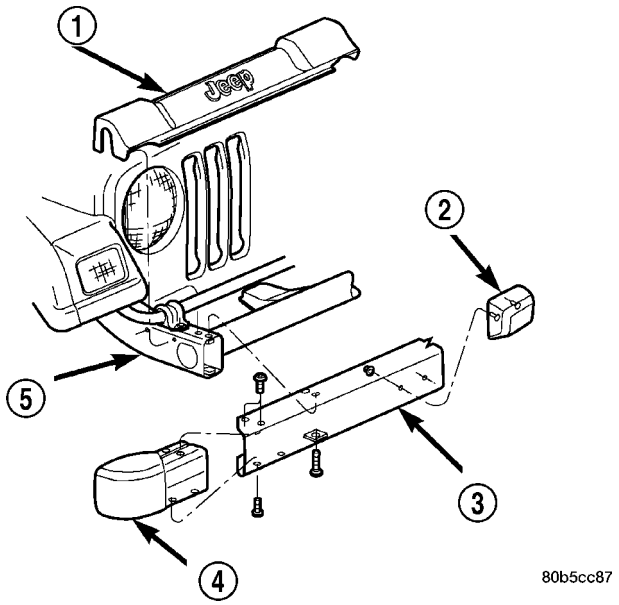

Fig. 2 FRONT BUMPER COMPONENTS

1 - VALANCE
2 - BUMPER GUARD
3 - FRONT BUMPER
4 - BUMPER EXTENSION
5 - FRAME

REAR EXTENSION

REMOVAL

(1) Remove the screws attaching the bumper extension to the bumper (Fig. 3).

(2) Separate the extension from the bumper.

INSTALLATION

(1) Position the extension on the bumper.

(2) Install the screws attaching the bumper extension to the bumper.

REAR BUMPER

REMOVAL

(1) Remove the bolt attaching the bumper to frame rail. (Fig. 3)

(2) If equipped, remove the rear tow eye/hook. (Refer to 13 - FRAME & BUMPERS/FRAME/REAR TOW HOOK - REMOVAL)

(3) Disconnect the rear fog lamp electrical connector, if equipped.

(4) Remove the nuts attaching the bumper to the rear frame crossmember.

(5) Separate the bumper from the vehicle.