REAR TOW HOOK

REMOVAL

(1) Remove the fasteners that attach the rear tow hook to the frame (Fig. 14).

(2) Separate the tow hook from the frame.

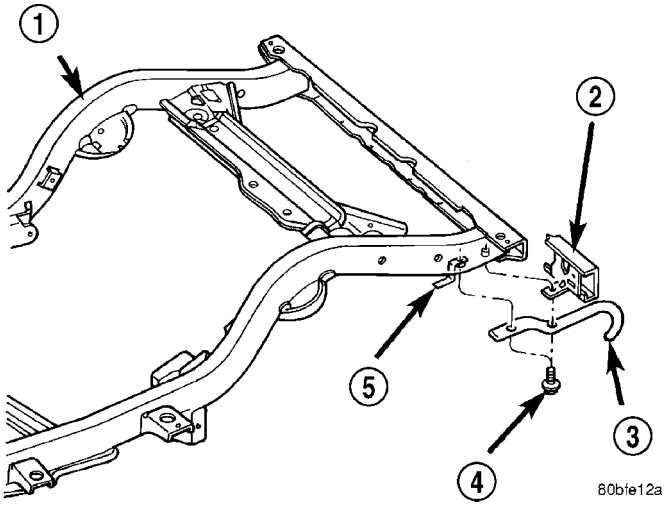

Fig. 14 REAR TOW HOOK

1 - FRAME
2 - REAR BUMPER
3 - TOW HOOK
4 - BOLT
5 - NUT

INSTALLATION

(1) Position the tow hook on the frame.

(2) Install the bolts and tighten to 77 N·m (57 ft. lbs.).

TRANSMISSION SKID PLATE

REMOVAL

(1) Raise and support the vehicle. (Refer to LUBRICATION & MAINTENANCE/HOISTING - STANDARD PROCEDURE)

(2) Support the skid plate.

(3) Remove the bolts and remove the skid plate. (Fig. 15)

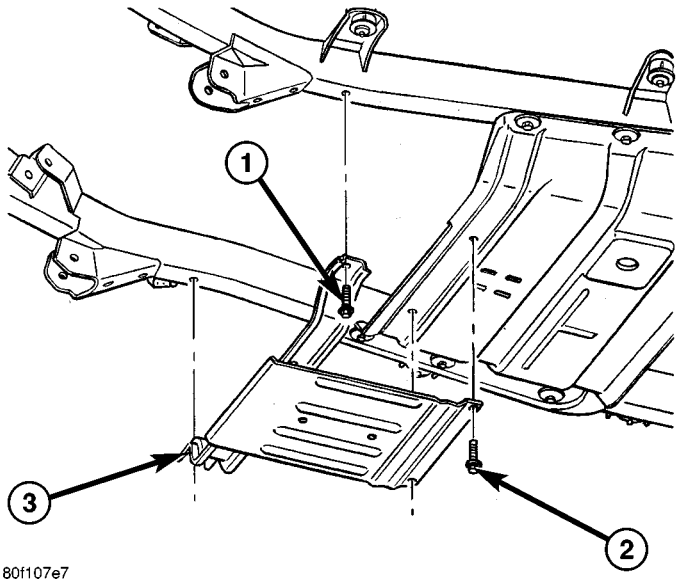

Fig. 15 TRANSMISSION SKID PLATE

1 - FRONT BOLTS (2)
2 - REAR BOLTS (2)
3 - SKID PLATE

INSTALLATION

(1) Position the skid plate in place and support.

(2) Install the bolts and tighten the plate to frame bolts to 45 N·m (33 ft. lbs.).

(3) Tighten the plate to transfer case skid plate bolts to 35 N·m (26 ft. lbs.).