FUEL PUMP MODULE

DESCRIPTION

The fuel pump module assembly (6) (Fig. 1) is located on the top of the fuel tank.

The module assembly (6) contains the following components:

- An internal fuel filter
- A separate fuel pick-up, or inlet filter
- A fuel pressure regulator (4)
- An electric fuel pump
- A lockring to retain pump module to tank
- A soft gasket between tank flange and module
- A fuel gauge sending unit (fuel level sensor)
- Fuel line connection

If the fuel gauge sending unit , electrical fuel pump, primary inlet filter, fuel filter or fuel pressure regulator require service, the fuel pump module must be replaced.

Electric Fuel Pump

The electric fuel pump is located inside of the fuel pump module. A 12 volt, permanent magnet, electric motor powers the fuel pump. The electric fuel pump is not a separate, serviceable component.

Fuel Filters

Two fuel filters are used. One is located at the bottom of the fuel pump module. The other is located inside the module. A separate frame mounted fuel filter is not used with any engine.

Both fuel filters are designed for extended service. They do not require normal scheduled maintenance. Filters should only be replaced if a diagnostic procedure indicates to do so.

Fuel Pressure Regulator

The fuel pressure regulator is located within fuel pump module.

Fuel Gauge Sending Unit (Fuel level sensor)

The fuel gauge sending unit (fuel level sensor) is attached to the side of the fuel pump module. The sending unit consists of a float, an arm, and a variable resistor track (card).

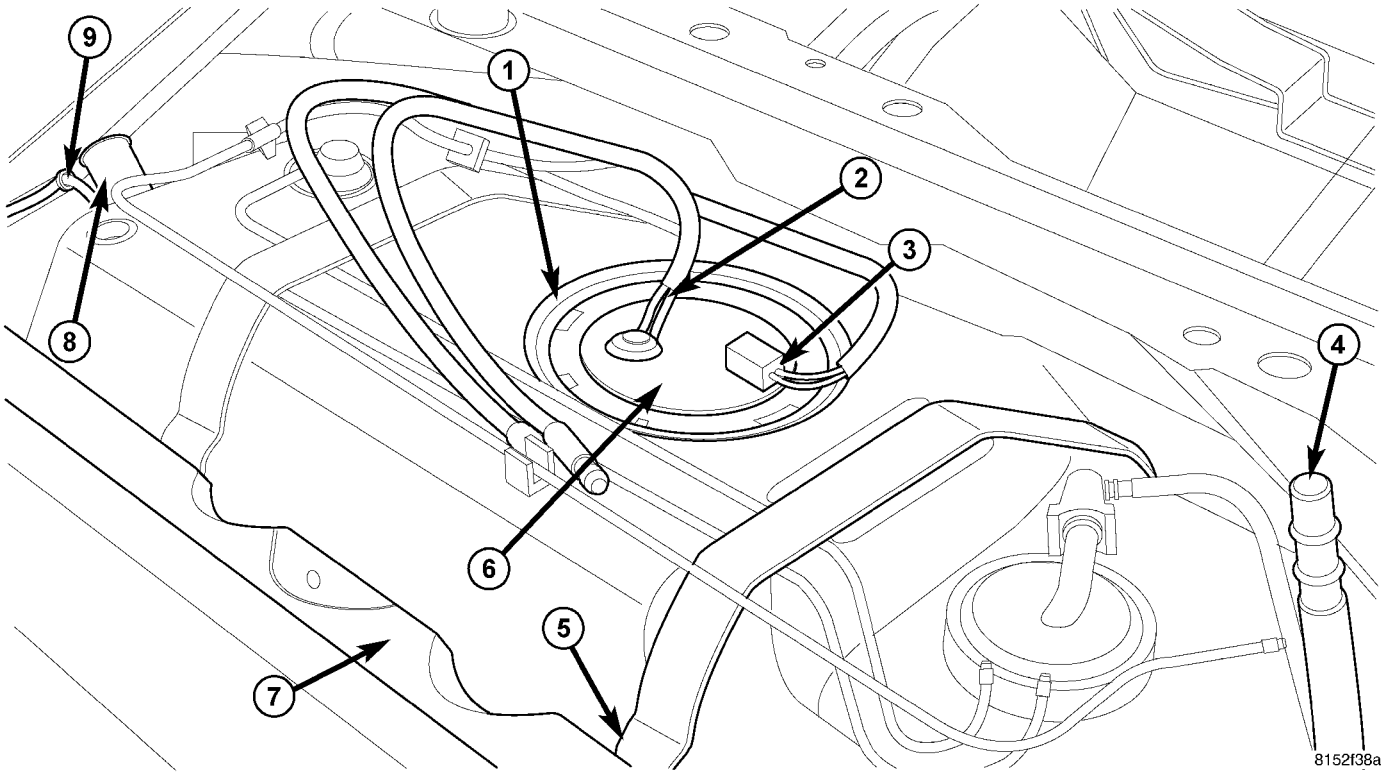

Fig. 1 TOP OF FUEL TANK

1 - FUEL PUMP MODULE LOCKRING
2 - FUEL SUPPLY LINE
3 - ELECTRICAL CONNECTOR
4 - VAPOR LINE
5 - FUEL TANK MOUNTING STRAPS (2)
6 - FUEL PUMP MODULE ASSEMBLY
7 - SKID PLATE
8 - FUEL FILL FITTING
9 - FUEL VENT FITTING