FUEL TANK (Continued)

REMOVAL

This vehicle is equipped with an ORVR (On-Board Refueling Vapor Recovery) system. Because of this, the fuel tank may be drained the conventional way through the filler cap opening.

On this model, the fuel tank is mounted to the vehicle skid plate. The skid plate is mounted to vehicle body. The tank and skid plate are removed as one assembly.

(1) Remove fuel filler cap.

(2) Perform the Fuel System Pressure Release Procedure as described elsewhere in this group.

(3) Disconnect negative battery cable.

(4) Using an approved portable gasoline siphon/storage tank, drain fuel from tank through filler cap opening.

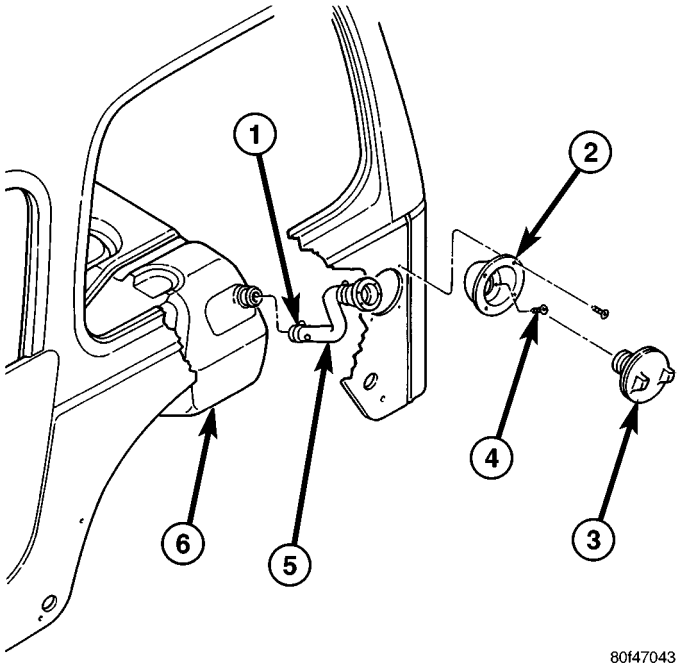

Fig. 11 FUEL FILL HOSE AT BODY

1 - FILLER HOSE CLAMP
2 - BEZEL
3 - FUEL FILLER CAP
4 - BEZEL SCREWS (8)
5 - FUEL FILLER HOSE
6 - FUEL TANK

(5) Remove 8 screws (4) retaining plastic fuel filler bezel to body (Fig. 11). Remove plastic fuel filler bezel (2).

(6) To prevent contaminants from entering tank, temporarily install fuel cap to fill hoses.

(7) Remove right/rear tire/wheel.

(8) Remove wheelhouse liner at right/rear wheel.

(9) Remove vertical support bracket (2) (Fig. 12) to gain access to ORVR vapor line.

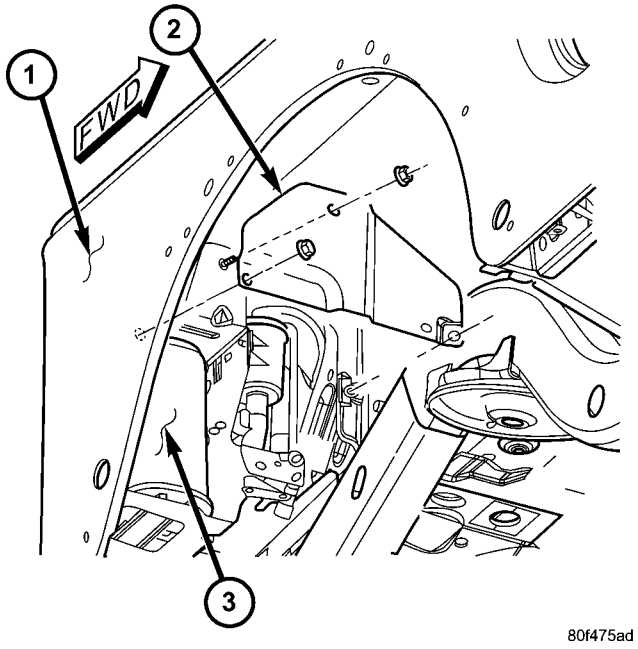

Fig. 12 EVAP CANISTER / NVLD PUMP LOCATION

1 - RIGHT / REAR FENDER (WHEELHOUSE)
2 - BRACKET
3 - EVAP CANISTER

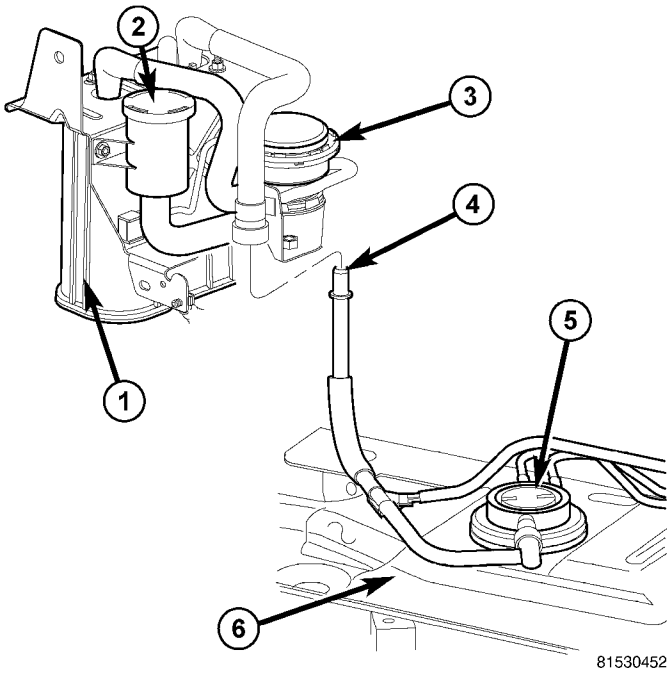

Fig. 13 ORVR VAPOR LINE

1 - EVAP CANISTER
2 - NVLD FILTER
3 - NVLD PUMP
4 - VAPOR LINES
5 - FLOW VALVE
6 - TOP OF FUEL TANK)