FUEL TANK (Continued)

(10) A vapor line (4) connects the fuel tank to the EVAP canister and NVLD pump. This connection is made near the right/rear corner of the fuel tank. Carefully disconnect this vapor line (4) (Fig. 13). Be very careful not to bend or kink the vapor lines. If vapor lines leak, a Diagnostic Trouble Code (DTC) will be set.

(11) Cut plastic tie wrap securing rear axle vent hose to fuel fill hose.

(12) Disconnect fuel tank electrical connector at left/front of fuel tank.

(13) Disconnect 2 vapor lines at left/front of fuel tank.

(14) Disconnect quick-connect fitting from fuel supply line at front of fuel tank (Fig. 14). Refer to Quick-Connect Fittings in this group for procedures.

(15) The fuel tank and skid plate are removed as an assembly. Centrally position a transmission jack (or equivalent lifting device) under skid plate/fuel tank assembly. Secure tank assembly to jack.

(16) Remove three skid plate-to-body nuts (1) at front of tank (Fig. 15). Remove one of the nuts through access hole (3) on skid plate (Fig. 15).

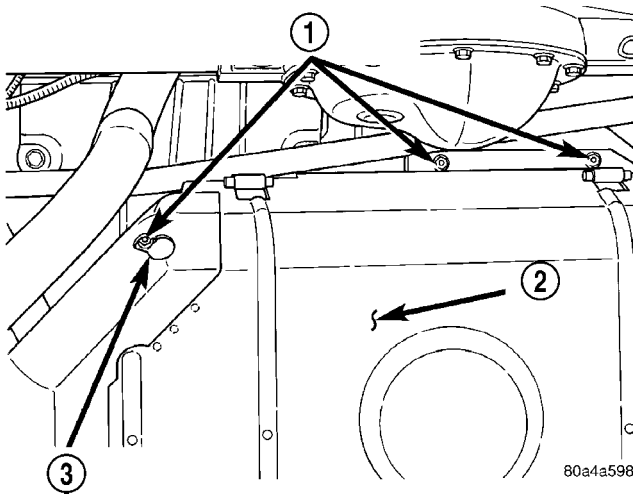

Fig. 15 FUEL TANK MOUNTING NUTS - FRONT

1 - FRONT SKID PLATE NUTS (3)
2 - SKID PLATE
3 - ACCESS HOLE

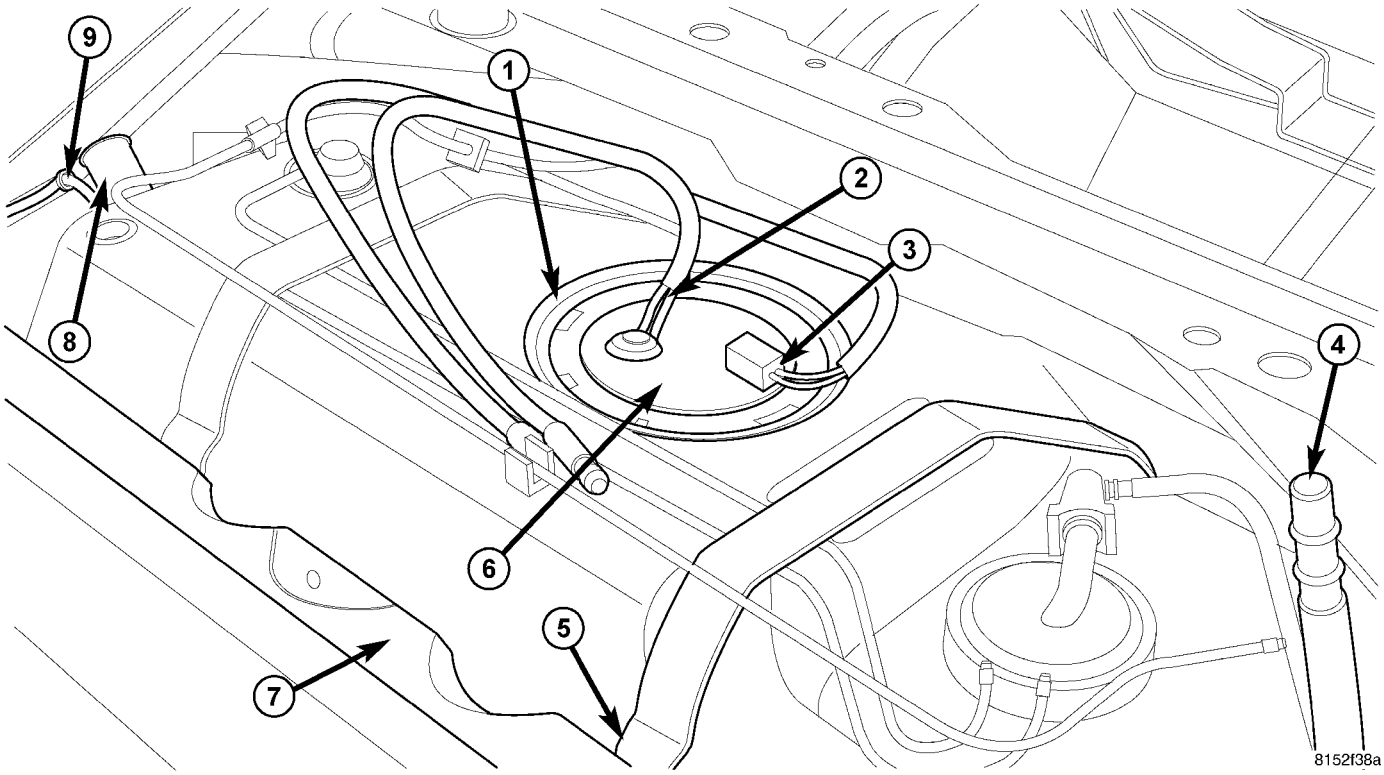

Fig. 14 TOP OF FUEL TANK

1 - FUEL PUMP MODULE LOCKRING
2 - FUEL SUPPLY LINE
3 - ELECTRICAL CONNECTOR
4 - VAPOR LINE
5 - FUEL TANK MOUNTING STRAPS (2)
6 - FUEL PUMP MODULE ASSEMBLY
7 - SKID PLATE
8 - FUEL FILL FITTING
9 - FUEL VENT FITTING