FUEL TANK (Continued)

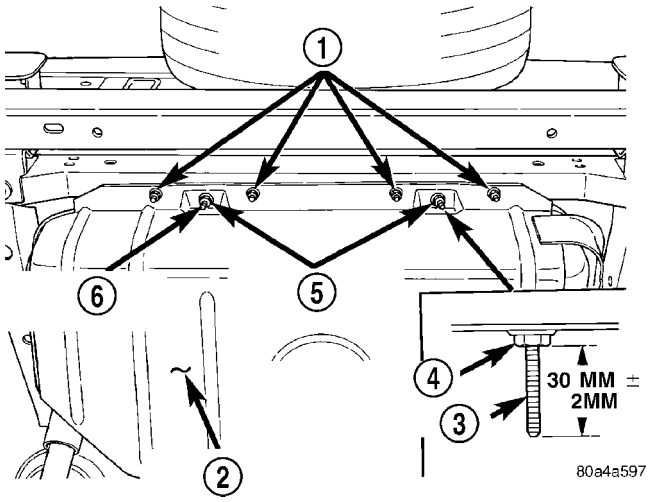

Fig. 16 FUEL TANK MOUNTING NUTS - REAR

1 - REAR SKID PLATE NUTS (4)
2 - SKID PLATE
3 - TANK STRAP STUD
4 - TANK STRAP NUT
5 - TANK STRAP NUTS (2)
6 - PROTECTIVE CAPS (2)

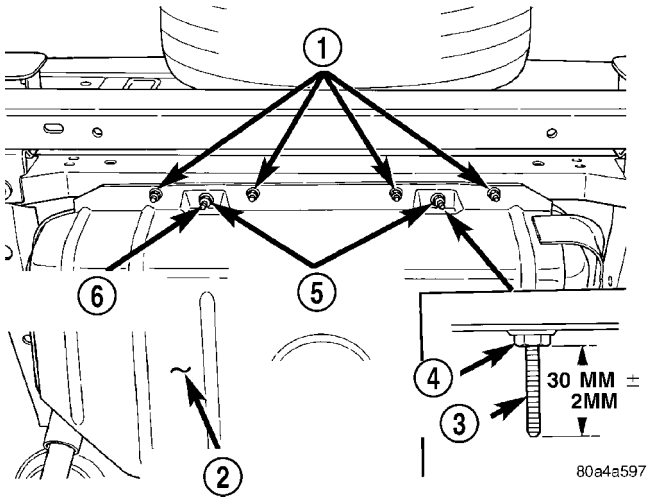

Fig. 17 FUEL TANK MOUNTING NUTS - REAR

1 - REAR SKID PLATE NUTS (4)
2 - SKID PLATE
3 - TANK STRAP STUD
4 - TANK STRAP NUT
5 - TANK STRAP NUTS (2)
6 - PROTECTIVE CAPS (2)

(17) Remove four skid plate-to-body nuts (1) at rear of tank (Fig. 16). **Do not loosen tank strap nuts (Fig. 16).**

(18) Lower the tank assembly.

(19) If fuel pump module is to be removed, refer to Fuel Pump Module Removal/Installation.

(20) Disconnect fuel filler hose at tank. Before disconnecting, mark and note the hose rotational position in relation to tank fitting.

(21) To separate tank from skid plate, remove two protective caps (6) at tank strap studs (Fig. 16) and remove tank strap nuts.

(22) Remove both straps and remove tank from skid plate.

INSTALLATION

(1) If necessary, install fuel pump module to fuel tank. Refer to Fuel Pump Module Removal / Installation.

(2) Place fuel tank into skid plate. Wrap straps around tank with strap studs inserted through holes in skid plate. Tighten strap nuts (5) (Fig. 17) to attain 30 mm (±2 mm) between bottom of nut to end of strap stud. **Do not over tighten nuts.**

(3) Install two protective caps (6) to tank strap studs.

(4) Connect fuel fill hose at tank. Tighten hose clamp.

(5) Raise skid plate/fuel tank assembly into position on body while carefully guiding plastic vapor lines and fill hose.

(6) Install four skid plate mounting nuts (1) at rear of tank (Fig. 17). Tighten to 16 N·m (141 in. lbs.) torque.

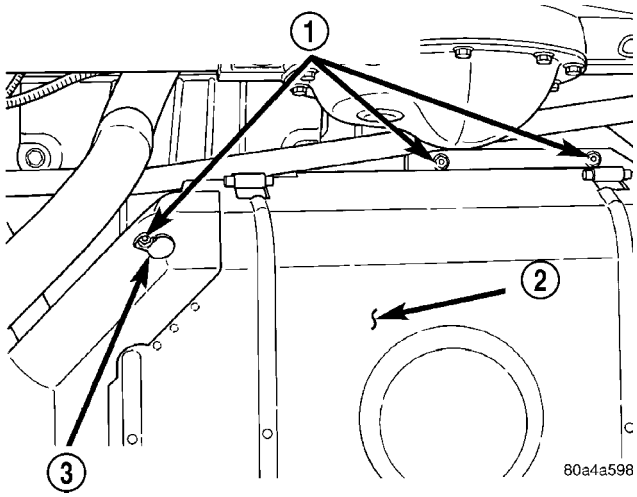

Fig. 18 FUEL TANK MOUNTING NUTS - FRONT

1 - FRONT SKID PLATE NUTS (3)
2 - SKID PLATE
3 - ACCESS HOLE

(7) Install three skid plate mounting nuts (1) at front of tank (Fig. 18). Tighten to 16 N·m (141 in. lbs.) torque.

(8) Remove tank jacking device.