FUEL TANK (Continued)

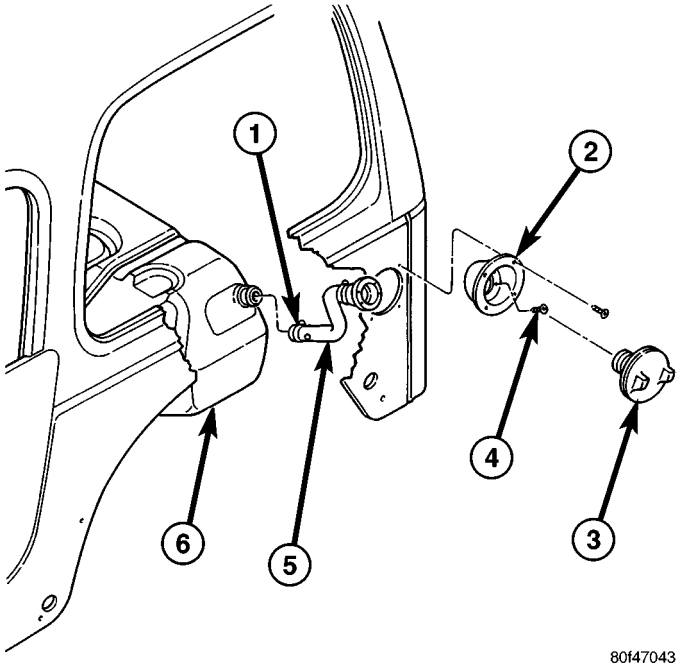

Fig. 22 FUEL FILL HOSE AT BODY

1 - FILLER HOSE CLAMP
2 - BEZEL
3 - FUEL FILLER CAP
4 - BEZEL SCREWS (8)
5 - FUEL FILLER HOSE
6 - FUEL TANK

(17) Position fuel fill bezel to body. Install eight screws (4) (Fig. 22) and tighten.

(18) Fill fuel tank. Install filler cap.

(19) Connect negative battery cable to battery.

(20) Start vehicle and inspect for leaks.

INLET FILTER

REMOVAL

The fuel pump inlet filter (strainer) is located on the bottom of fuel pump module (Fig. 23). The fuel pump module is located on top of fuel tank.

(1) Remove fuel tank. Refer to Fuel Tank Removal/Installation.

(2) Remove fuel pump module. Refer to Fuel Pump Module Removal/Installation.

(3) Remove filter by prying from bottom of module with 2 screwdrivers. Filter is snapped to module.

(4) Clean bottom of pump module.

INSTALLATION

The fuel pump inlet filter (strainer) is located on the bottom of fuel pump module (Fig. 24). The fuel pump module is located on top of fuel tank.

(1) Snap new filter to bottom of module.

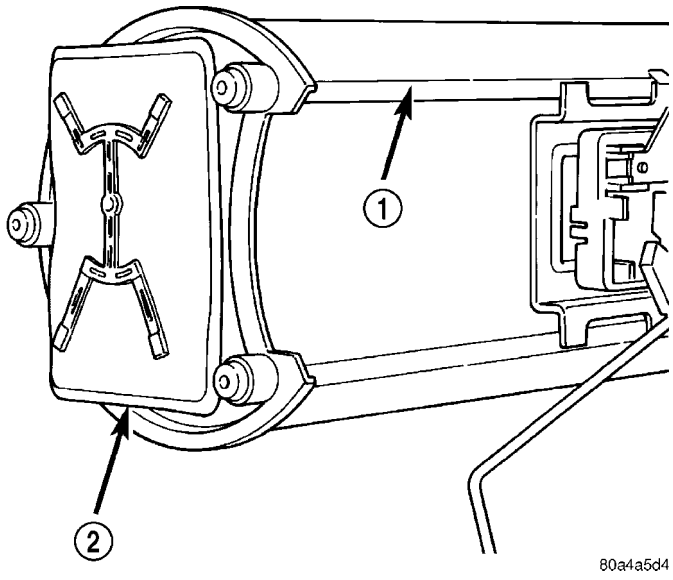

Fig. 23 Fuel Pump Inlet Filter

1 - FUEL PUMP MODULE
2 - FUEL PUMP INLET FILTER

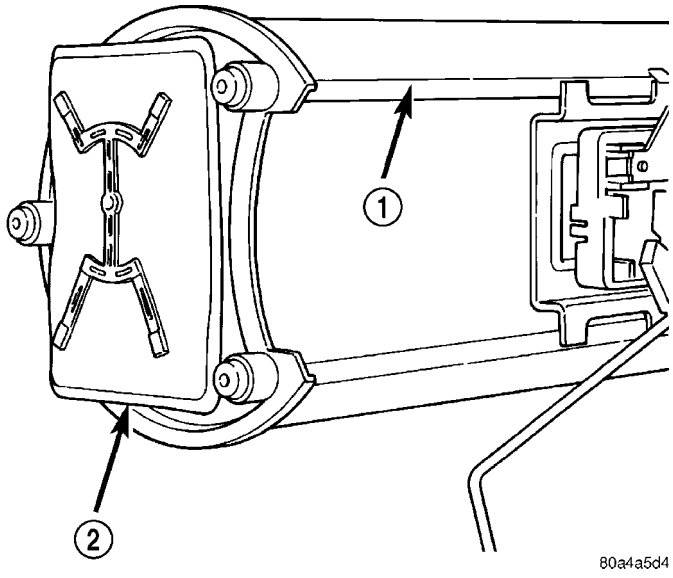

Fig. 24 Fuel Pump Inlet Filter

1 - FUEL PUMP MODULE
2 - FUEL PUMP INLET FILTER

(2) Install fuel pump module. Refer to Fuel Pump Module Removal/Installation.

(3) Install fuel tank. Refer to Fuel Tank Removal/Installation.