QUICK CONNECT FITTING (Continued)

(a) Press release tab on side of fitting to release pull tab (Fig. 30). **If release tab is not pressed prior to releasing pull tab, pull tab will be damaged.**

(b) While pressing release tab on side of fitting, use screwdriver to pry up pull tab (Fig. 30).

(c) Raise pull tab until it separates from quick-connect fitting (Fig. 31).

(8) **Two-Tab Type Fitting:** This type of fitting is equipped with tabs located on both sides of fitting (Fig. 32). The tabs are supplied for disconnecting quick-connect fitting from component being serviced.

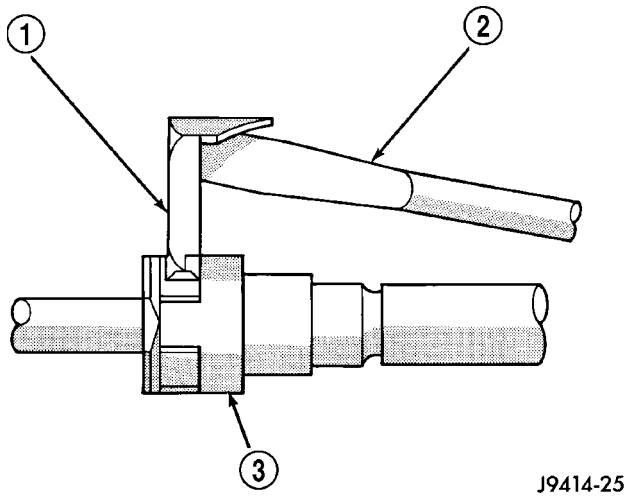

Fig. 30 DISCONNECTING SINGLE-TAB TYPE FITTING

1 - PULL TAB
2 - SCREWDRIVER
3 - QUICK-CONNECT FITTING

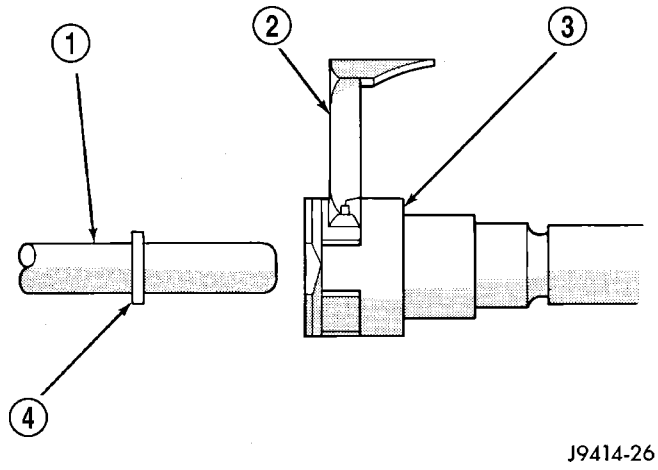

Fig. 31 REMOVING PULL TAB

1 - FUEL TUBE OR FUEL SYSTEM COMPONENT
2 - PULL TAB
3 - QUICK-CONNECT FITTING
4 - FUEL TUBE STOP

(a) To disconnect quick-connect fitting, squeeze plastic retainer tabs (Fig. 32) against sides of quick-connect fitting with your fingers. Tool use is not required for removal and may damage plastic retainer.

(b) Pull fitting from fuel system component being serviced.

(c) The plastic retainer will remain on component being serviced after fitting is disconnected.

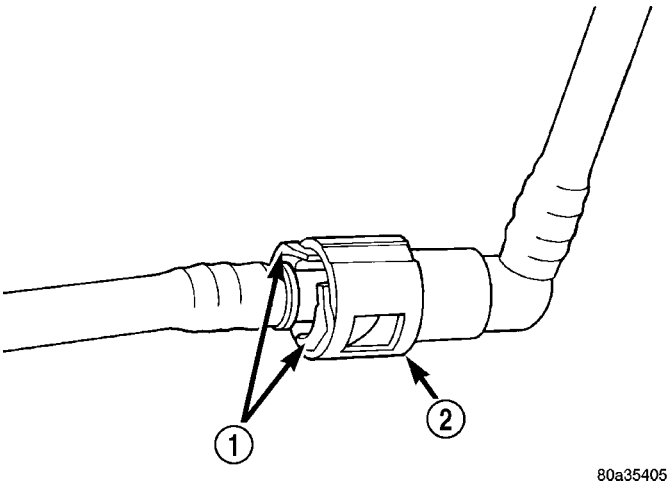

Fig. 32 TYPICAL 2–TAB TYPE FITTING

1 - TAB(S)
2 - QUICK-CONNECT FITTING

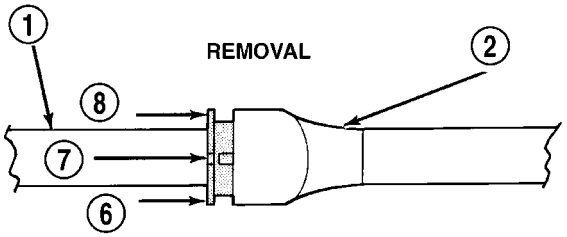

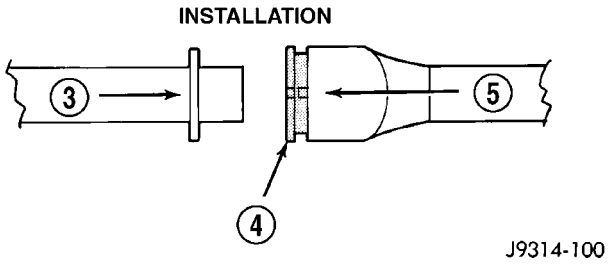

Fig. 33 PLASTIC RETAINER RING TYPE FITTING

1 - FUEL TUBE
2 - QUICK CONNECT FITTING
3 - PUSH
4 - PLASTIC RETAINER
5 - PUSH
6 - PUSH
7 - PUSH
8 - PUSH