CRANKSHAFT POSITION SENSOR (Continued)

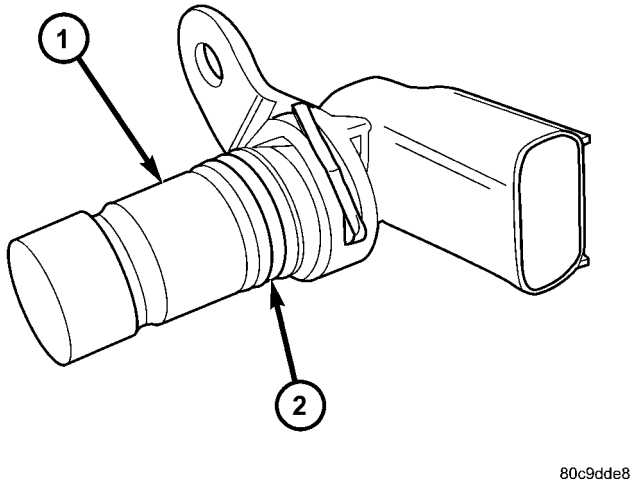

Fig. 5 CKP AND O-RING - 2.4L

1 - CKP SENSOR
2 - O-RING

4.0L

The crankshaft position (CKP) sensor is mounted to the transmission bellhousing near the rear of the engine block.

The sensor may be mounted to the transmission with one of the following four different configurations:

- with one bolt to the right side of the transmission if equipped with a 42RLE automatic transmission (Fig. 6).
- with one bolt to the left side of the transmission (Fig. 7). If sensor is equipped with one mounting bolt, **it is adjustable.**.
- with two nuts to the left side of the transmission (Fig. 8).
- with two bolts to the left side of the transmission (Fig. 9).

(1) Disconnect sensor pigtail harness (electrical connector) from main electrical harness.

(2) Depending upon application, remove either sensor mounting bolt(s) or nuts.

(3) Remove sensor from engine.

INSTALLATION

2.4L

(1) Clean out machined hole in engine block.

(2) Apply a small amount of engine oil to sensor o-ring.

(3) Install sensor into engine block with a slight rocking action. Do not twist sensor into position as damage to o-ring may result.

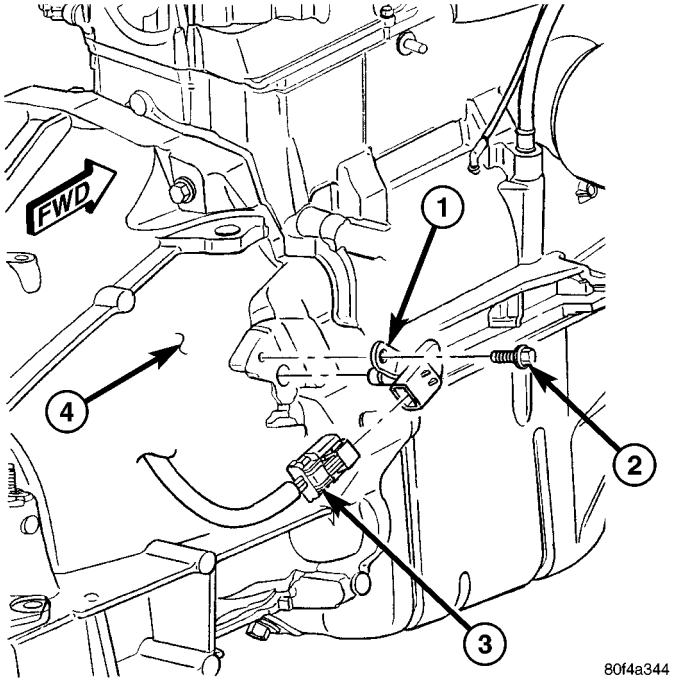

Fig. 6 CKP (WITH 42RLE AUTO. TRANS.)

1 - CKP SENSOR
2 - MOUNTING BOLT
3 - ELEC. CONNECTOR
4 - TRANS. BELLHOUSING

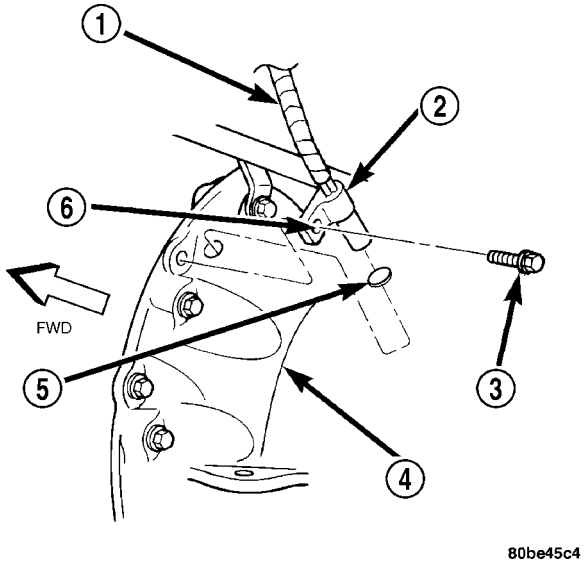

Fig. 7 CKP - ONE-BOLT MOUNTING (EXCEPT 42RLE AUTO. TRANS.)

1 - SENSOR PIGTAIL
2 - CRANKSHAFT POSITION SENSOR
3 - MOUNTING BOLT
4 - TRANSMISSION HOUSING
5 - PAPER SPACER
6 - SLOTTED HOLE