MAP SENSOR (Continued)

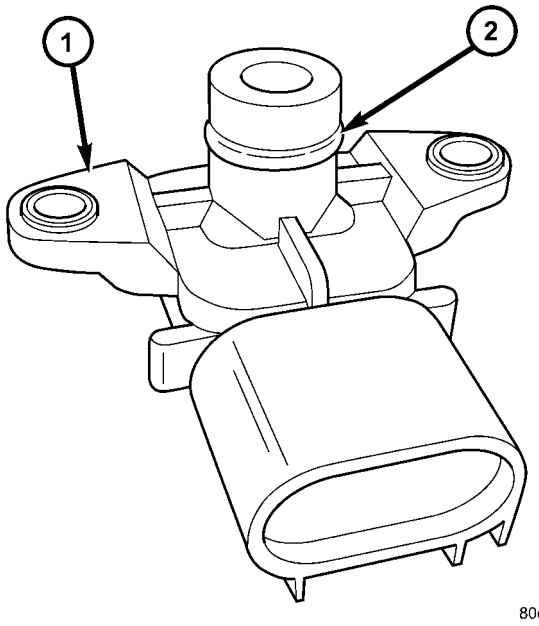

Fig. 19 MAP SENSOR O-RING - 2.4L

1 - MAP SENSOR
2 - O-RING

4.0L Early

An L-shaped rubber fitting is used to connect the MAP sensor to throttle body (Fig. 20).

(1) Remove air cleaner intake tube at throttle body.

(2) Remove two MAP sensor mounting bolts (screws) (Fig. 20).

(3) While removing MAP sensor, slide the rubber L-shaped fitting (Fig. 20) from throttle body.

(4) Remove rubber L-shaped fitting from MAP sensor.

4.0L Late

An L-shaped rubber fitting is used to connect the MAP sensor to throttle body (Fig. 21).

(1) Remove air cleaner intake tube at throttle body.

(2) Remove MAP sensor mounting bolt (screw) (Fig. 21).

(3) While removing MAP sensor, slide the rubber L-shaped fitting (Fig. 21) from throttle body.

(4) Remove rubber L-shaped fitting from MAP sensor.

INSTALLATION

2.4L

(1) Clean MAP sensor mounting hole at intake manifold.

(2) Check MAP sensor o-ring seal for cuts or tears.

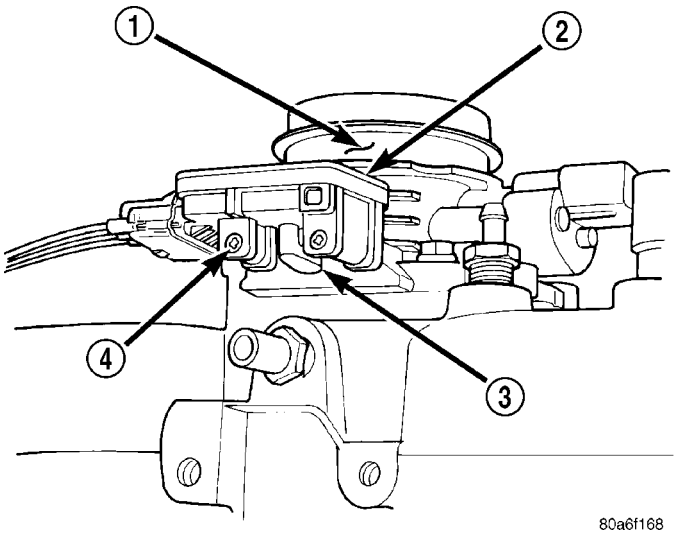

Fig. 20 4.0L MAP SENSOR MOUNTING - EARLY

1 - THROTTLE BODY
2 - MAP SENSOR
3 - RUBBER FITTING
4 - MOUNTING SCREWS (2)

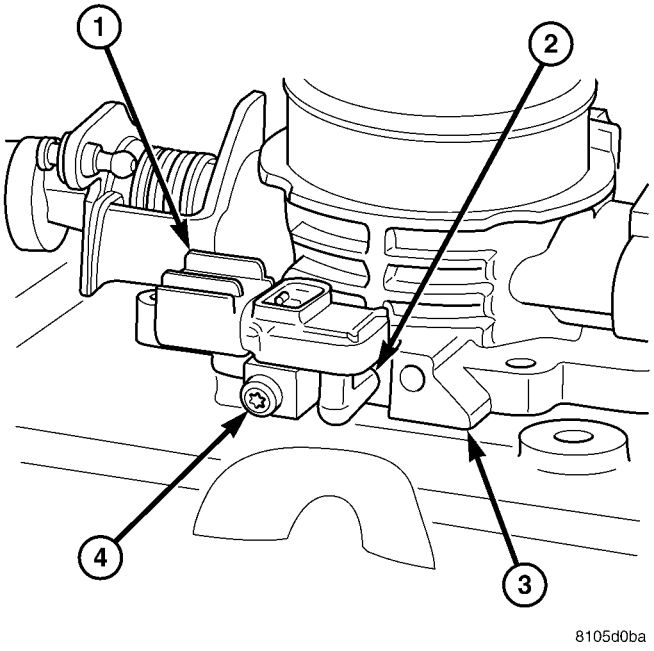

Fig. 21 4.0L MAP SENSOR MOUNTING - LATE

1 - MAP SENSOR
2 - RUBBER FITTING
3 - THROTTLE BODY
4 - MOUNTING SCREW (1)

(3) Position sensor into manifold.

(4) Install MAP sensor mounting screws. Tighten screw to 3 N·m (25 in. lbs.) torque.

(5) Connect electrical connector.

4.0L

(1) Install rubber L-shaped fitting to MAP sensor.