O2 SENSOR (Continued)

**4.0L**

**CAUTION: Never apply any type of grease to the oxygen sensor electrical connector, or attempt any soldering of the sensor wiring harness.**

Refer to (Fig. 23), (Fig. 24) for O2S (oxygen sensor) location.

**WARNING: THE EXHAUST MANIFOLD, EXHAUST PIPES AND CATALYTIC CONVERTER BECOME VERY HOT DURING ENGINE OPERATION. ALLOW ENGINE TO COOL BEFORE REMOVING OXYGEN SENSOR.**

(1) Raise and support vehicle.
(2) Disconnect wire connector from O2S sensor.

**CAUTION: When disconnecting sensor electrical connector, do not pull directly on wire going into sensor.**

(3) Remove O2S sensor with an oxygen sensor removal and installation tool.
(4) Clean threads in exhaust pipe using appropriate size tap.

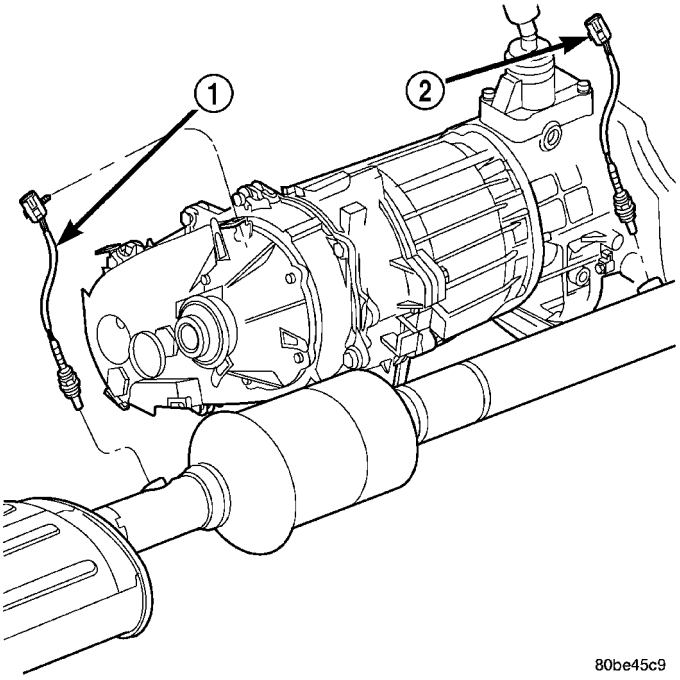


***Fig. 23 OXYGEN SENSORS - 4.0L - FEDERAL EMISSIONS***

1 - 1/2 O2S
2 - 1/1 02S

## INSTALLATION

Threads of new oxygen sensors are factory coated with anti-seize compound to aid in removal. **DO NOT add any additional anti-seize compound to the threads of a new oxygen sensor.**

(1) Install O2S sensor. Tighten to 30 N·m (22 ft. lbs.) torque.
(2) Connect O2S sensor wire connector.
(3) Lower vehicle.

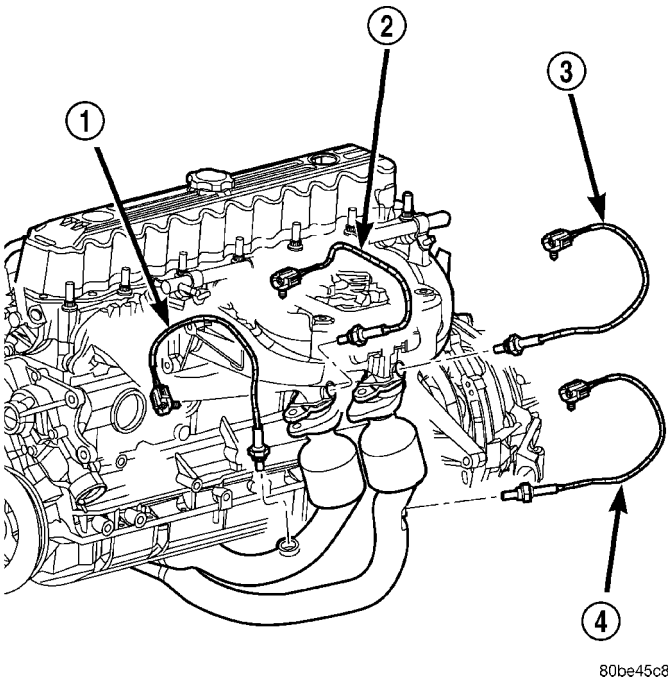


***Fig. 24 OXYGEN SENSORS - 4.0L - CALIFORNIA EMISSIONS***

1 - 1/2 O2S
2 - 1/1 O2S
3 - 2/1 O2S
4 - 2/2 O2S

# THROTTLE BODY

## DESCRIPTION

The throttle body is located on the intake manifold. Fuel does not enter the intake manifold through the throttle body. Fuel is sprayed into the manifold by the fuel injectors.

## OPERATION

Filtered air from the air cleaner enters the intake manifold through the throttle body. The throttle body contains an air control passage controlled by an Idle Air Control (IAC) motor. The air control passage is used to supply air for idle conditions. A throttle valve (plate) is used to supply air for above idle conditions.

Certain sensors are attached to the throttle body. The accelerator pedal cable, speed control cable and transmission control cable (when equipped) are connected to the throttle body linkage arm.