THROTTLE BODY (Continued)

A (factory adjusted) set screw is used to mechanically limit the position of the throttle body throttle plate. **Never attempt to adjust the engine idle speed using this screw.** All idle speed functions are controlled by the PCM.

## REMOVAL

### 2.4L

A (factory adjusted) set screw is used to mechanically limit the position of the throttle body throttle plate. **Never attempt to adjust the engine idle speed using this screw.** All idle speed functions are controlled by the Powertrain Control Module (PCM).

(1) Remove air cleaner tube at throttle body.

(2) Disconnect throttle body electrical connectors at IAC motor and TPS.

(3) Remove all control cables from throttle body (lever) arm. Refer to the Accelerator Pedal and Throttle Cable section for removal/installation procedures.

(4) Disconnect necessary vacuum lines at throttle body.

(5) Remove 3 throttle body mounting bolts (Fig. 25).

(6) Remove throttle body from intake manifold.

(7) Check condition of old throttle body-to-intake manifold o-ring.

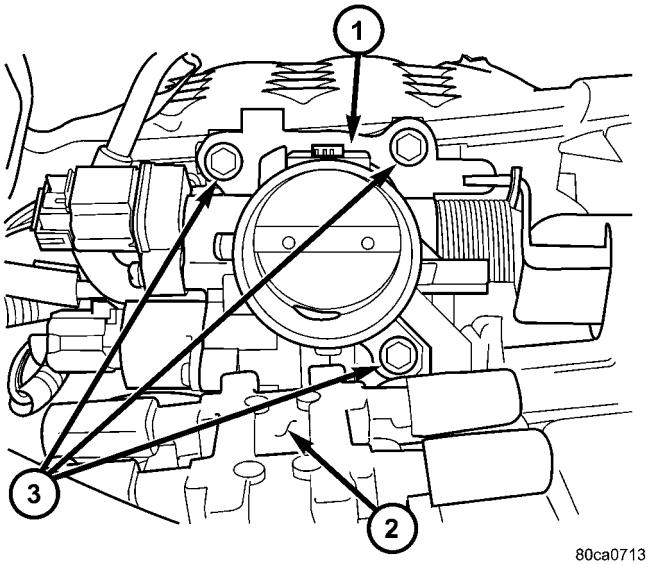


*Fig. 25 THROTTLE BODY MOUNTING BOLTS - 2.4L*

1 - THROTTLE BODY
2 - IGNITION COIL
3 - MOUNTING BOLTS (3)

### 4.0L

A (factory adjusted) set screw is used to mechanically limit the position of the throttle body throttle plate. **Never attempt to adjust the engine idle speed using this screw.** All idle speed functions are controlled by the Powertrain Control Module (PCM).

(1) Remove air cleaner tube at throttle body.

(2) Disconnect throttle body electrical connectors at MAP sensor, IAC motor and TPS (Fig. 26).

(3) Remove all control cables from throttle body (lever) arm. Refer to the Accelerator Pedal and Throttle Cable section of this group for additional information.

(4) Remove four throttle body mounting bolts.

(5) Remove throttle body from intake manifold.

(6) Discard old throttle body-to-intake manifold gasket.

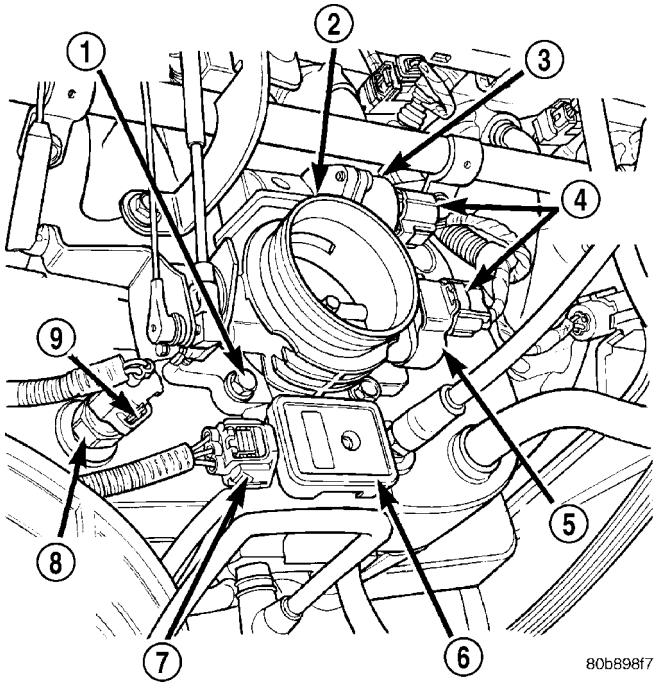


*Fig. 26 THROTTLE BODY AND SENSOR LOCATIONS - 4.0L*

1 - MOUNTING BOLTS (4)
2 - THROTTLE BODY
3 - IAC MOTOR
4 - ELEC. CONN.
5 - TPS
6 - MAP SENSOR
7 - ELEC. CONN.
8 - IAT SENSOR
9 - ELEC. CONN.

## INSTALLATION

### 2.4L

(1) Check condition of throttle body-to-intake manifold o-ring. Replace as necessary.

(2) Clean mating surfaces of throttle body and intake manifold.

(3) Install throttle body-to-intake manifold o-ring.

(4) Install throttle body to intake manifold.

(5) Install 3 mounting bolts. Tighten bolts to 12 N·m (105 in. lbs.) torque.