THROTTLE CONTROL CABLE (Continued)

4.0L

CAUTION: Be careful not to damage or kink the cable core wire (within the cable sheathing) while servicing accelerator pedal or throttle cable.

(1) From inside vehicle, hold up accelerator pedal. Remove plastic cable retainer (clip) and throttle cable core wire from upper end of accelerator pedal arm (Fig. 29). Plastic cable retainer (clip) snaps into pedal arm.

(2) Remove cable core wire at pedal arm.

(3) From inside vehicle, pinch both sides of cable housing retainer tabs (Fig. 29) at dash panel. Remove cable housing from dash panel and pull into engine compartment.

(4) Remove cable from clip guides on engine cylinder head (valve) cover (Fig. 30).

(5) Remove throttle cable ball socket at throttle body by pushing ball socket towards rear of vehicle (ball snaps off of throttle body pin) (Fig. 31).

(6) Remove throttle cable from throttle body mounting bracket by compressing release tabs (Fig. 31) and pushing cable through hole in bracket.

(7) Remove throttle cable from vehicle.

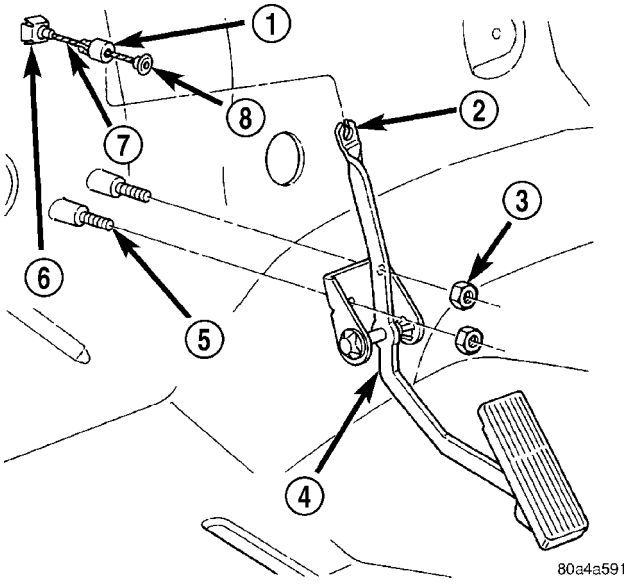

Fig. 29 ACCELERATOR PEDAL MOUNTING

1 - CABLE RETAINER
2 - SLOT
3 - MOUNTING STUDS (2)
4 - PEDAL/BRACKET ASSEMBLY
5 - MOUNTING STUDS
6 - RETAINER TABS
7 - CABLE
8 - CABLE STOP

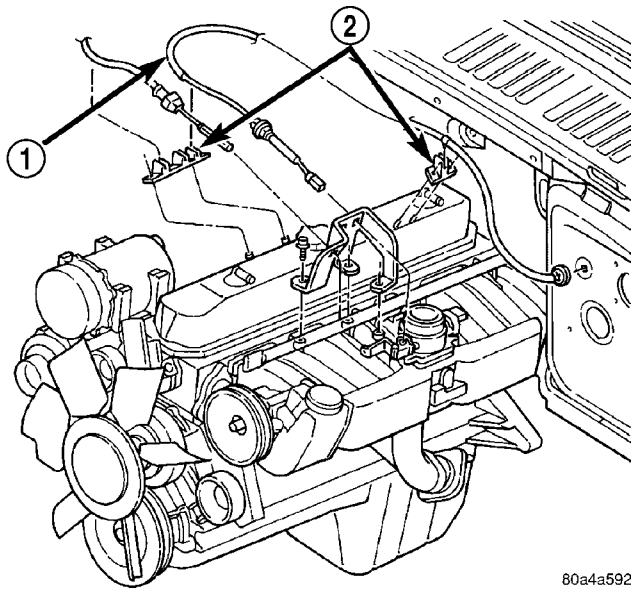

Fig. 30 THROTTLE CABLE ROUTING - 4.0L

1 - THROTTLE CABLE
2 - GUIDE

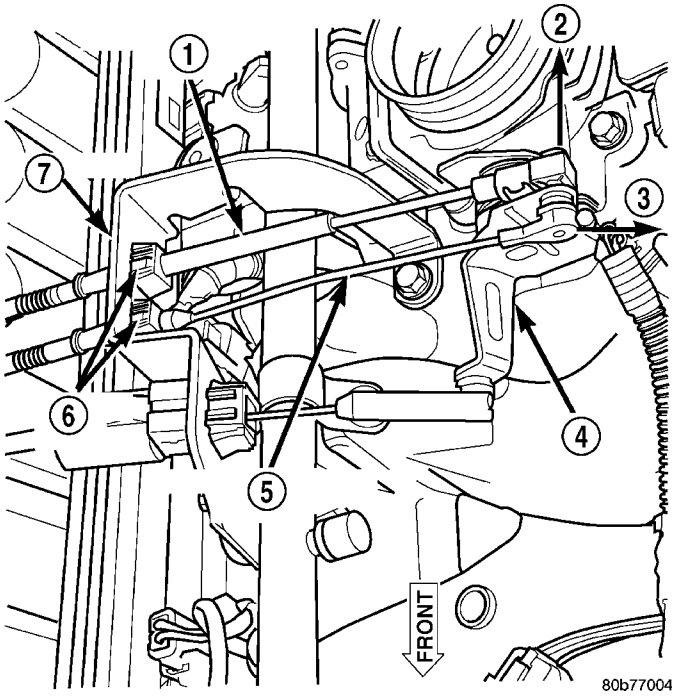

Fig. 31 THROTTLE CABLE AT THROTTLE BODY - 4.0L - TYPICAL

1 - ACCELERATOR CABLE
2 - OFF
3 - OFF
4 - THROTTLE BODY BELLCRANK
5 - SPEED CONTROL CABLE
6 - RELEASE TABS
7 - BRACKET