STEERING

TABLE OF CONTENTS

page

STEERING
DESCRIPTION 1
OPERATION 2
DIAGNOSIS AND TESTING
DIAGNOSIS AND TESTING - POWER
STEERING SYSTEM DIAGNOSIS CHARTS . . . 2
DIAGNOSIS AND TESTING - POWER
STEERING FLOW AND PRESSURE 4
COLUMN 6
GEAR 13
LINKAGE 17
PUMP 20

STEERING

DESCRIPTION

CAUTION: MOPAR® ATF+4 is to be used in the power steering system. No other power steering or automatic transmission fluid is to be used in the system. Damage may result to the power steering pump and system if any other fluid is used, and do not overfill.

The power steering system has a hydraulic pump. The pump is a constant flow rate and displacement vane-type pump. The pump reservoir on the 4.0L engine is mounted to the pump body (Fig. 1)& (Fig. 2). The 2.4L engine has a remote pump reservoir mounted to the fan shroud (Fig. 3).

The steering gear used is a straight ratio recirculating ball type gear. A tilt and non-tilt column provide steering input.

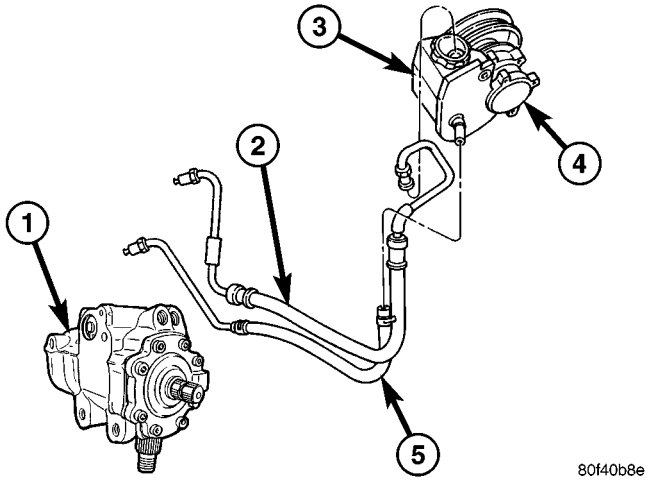

Fig. 1 POWER STEERING GEAR & PUMP - 4.0L

1 - POWER STEERING GEAR
2 - PRESSURE HOSE
3 - POWER STEERING RESERVOIR
4 - POWER STEERING PUMP
5 - RETURN HOSE

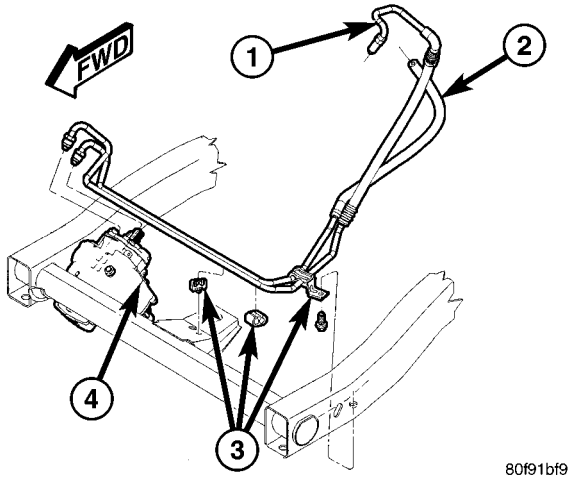

Fig. 2 RHD POWER STEERING HOSES

1 - PRESSURE HOSE
2 - RETURN HOSE
3 - MOUNTING BRACKETS
4 - STEERING GEAR