COLUMN (Continued)

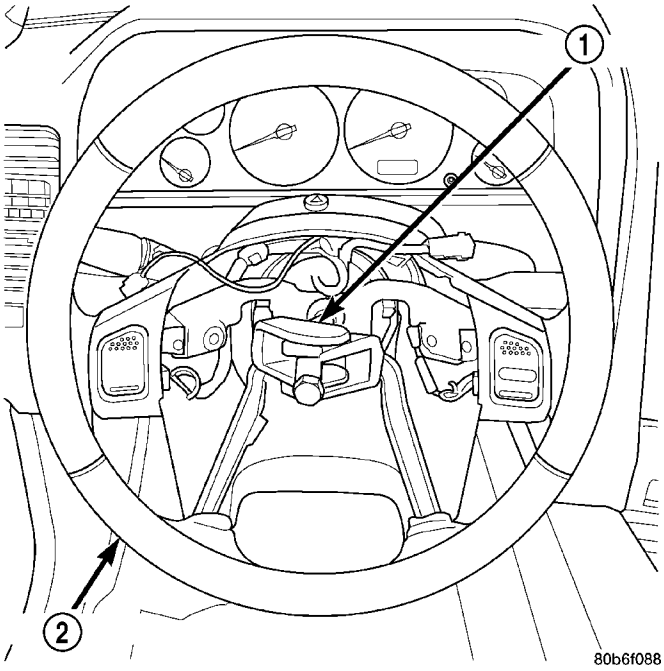

Fig. 1 STEERING WHEEL PULLER

1 - PULLER C-3894-A
2 - STEERING WHEEL

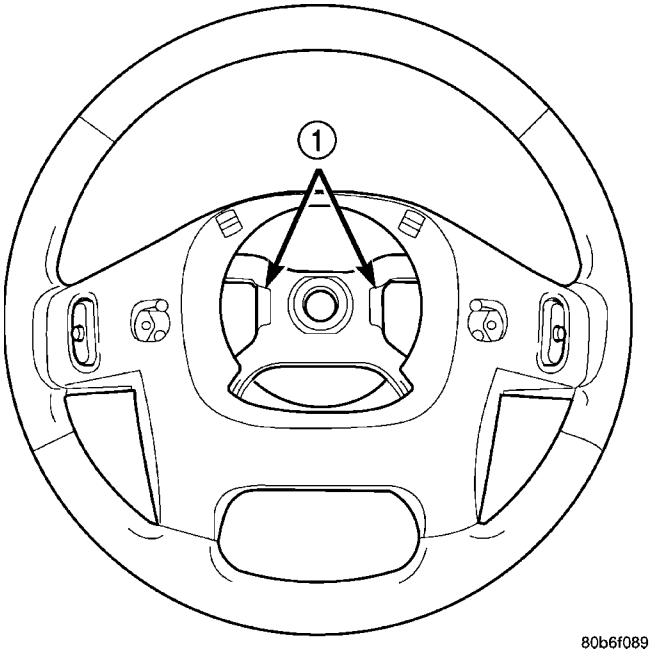

Fig. 2 Steering Wheel Pockets

1 - STEERING WHEEL POCKETS

(6) Remove knee blocker cover and knee blocker, (Refer to 23 - BODY/INSTRUMENT PANEL/KNEE BLOCKER - REMOVAL).

(7) Remove screws from the lower column shroud (Fig. 4) and remove the shroud.

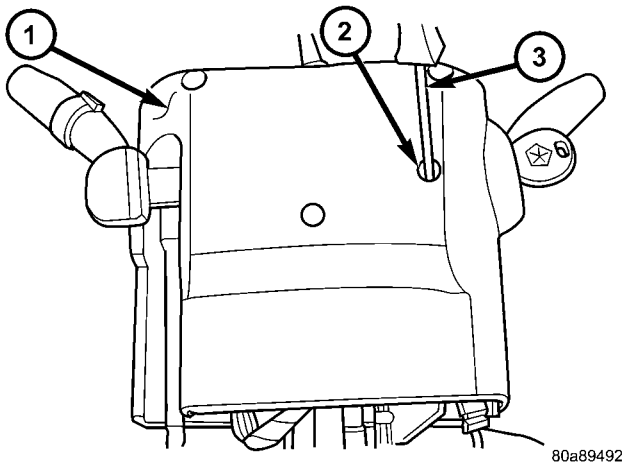

Fig. 3 LOCK CYLINDER RELEASE

1 - Lower Shroud
2 - Lock Cylinder Release Access Hole
3 - Pin Punch

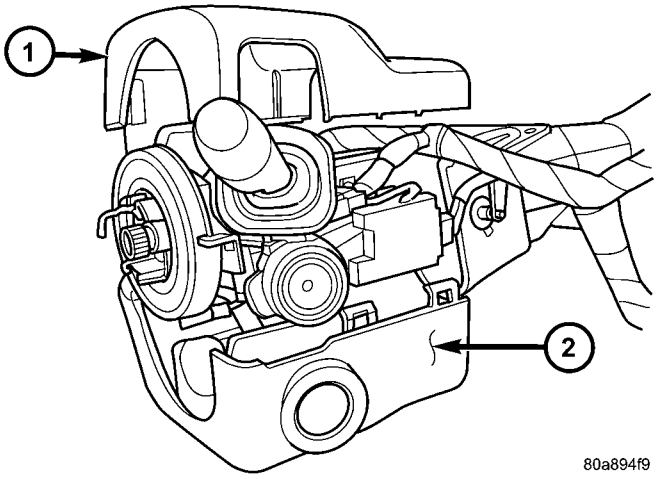

Fig. 4 SHROUD REMOVAL/INSTALL

1 - Upper Shroud
2 - Lower Shroud

(8) Remove the steering coupler bolt and column mounting nuts (Fig. 5) then lower column off the mounting studs.

(9) Remove upper column shroud (Fig. 4).

(10) Disconnect and remove the wiring harness from the column (Fig. 6).

NOTE: If vehicle is equipped with automatic transmission, remove shifter interlock cable from the column. (Refer to 21 - TRANSMISSION/TRANSAXLE/ AUTOMATIC - 30RH/GEAR SHIFT CABLE - REMOVAL).

(11) Remove column.