IGNITION SWITCH (Continued)

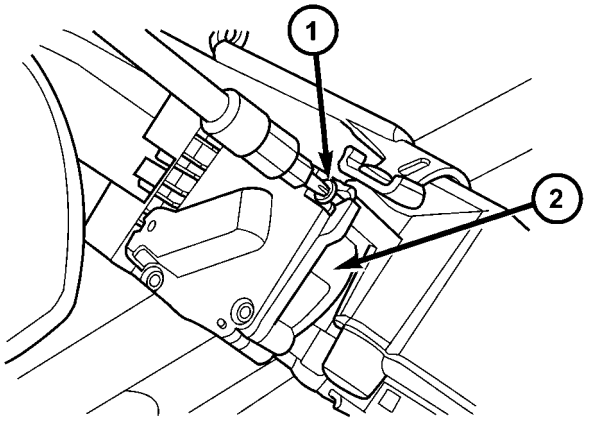

Fig. 8 IGNITION SWITCH MOUNTING SCREW

1 - Tamper Proof Torx Screw
2 - Ignition Switch

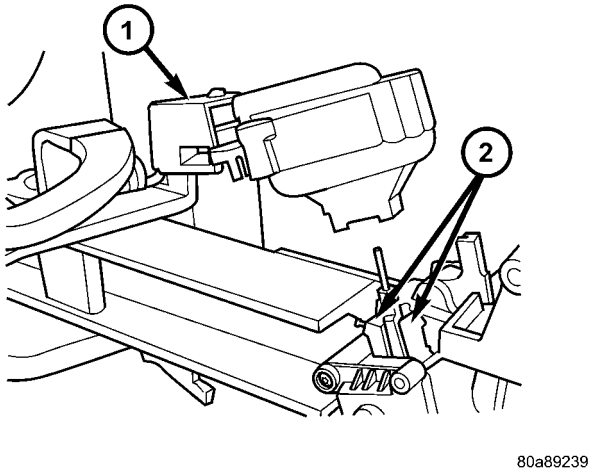

Fig. 9 IGNITION SWITCH TABS

1 - Ignition Switch
2 - Locking Tabs

INSTALLATION

The ignition key must be in the key cylinder for cylinder installation. The key cylinder must be aligned with the ignition switch for installation.

(1) Before installing ignition switch, rotate the slot in the switch to the ON position (Fig. 10).

(2) Connect the electrical connector to rear of ignition switch. Make sure that locking tab is fully seated into wiring connector.

(3) Position the switch to the column and install tamper proof screw. Tighten screw to 3 N·m (26 in. lbs.).

(4) Test the operation of the lock cylinder for smooth rotating.

(5) Install the multi-function switch.

(6) Install steering column lower cover.

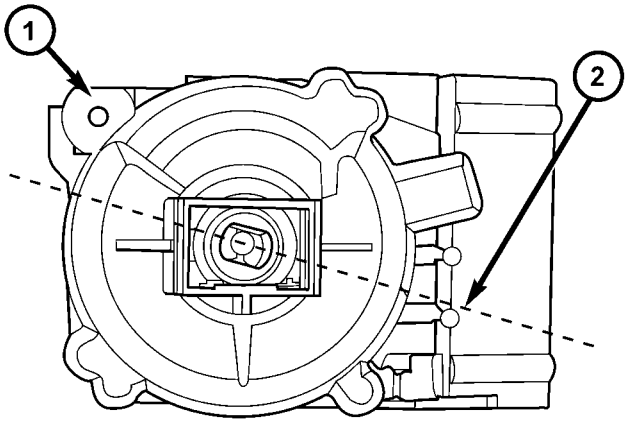

Fig. 10 IGNITION SWITCH ON POSITION

1 - Ignition Switch
2 - Rotate to On Position

KEY-IN IGNITION SWITCH

DESCRIPTION

The key-in ignition switch is integral to the ignition switch, which is mounted on the left side of the steering column, opposite the ignition cylinder. It closes a path to ground for the instrument cluster chime warning circuitry when the ignition key is inserted in the ignition cylinder and the driver door jamb switch is closed (driver door is open). The key-in ignition switch opens the ground path when the key is removed from the ignition cylinder.

The key-in ignition switch cannot be repaired and, if faulty or damaged, the entire ignition switch must be replaced. (Refer to 19 - STEERING/COLUMN/IGNITION SWITCH - REMOVAL).

DIAGNOSIS AND TESTING - KEY-IN IGNITION SWITCH

For circuit descriptions and diagrams, Refer to the appropriate sections on the individual components.

WARNING: ON VEHICLES EQUIPPED WITH AIRBAGS, REFER TO ELECTRICAL - PASSIVE RESTRAINT SYSTEMS BEFORE ATTEMPTING ANY STEERING WHEEL, STEERING COLUMN, OR INSTRUMENT PANEL COMPONENT DIAGNOSIS OR SERVICE. FAILURE TO TAKE THE PROPER PRECAUTIONS COULD RESULT IN ACCIDENTAL AIRBAG DEPLOYMENT AND POSSIBLE PERSONAL INJURY.

(1) Disconnect and isolate the battery negative cable. Remove the steering column shrouds. Unplug the key-in ignition switch wire harness connector from the ignition switch.