GEAR

TABLE OF CONTENTS

	page
GEAR	
DESCRIPTION	13
OPERATION	13
DIAGNOSIS AND TESTING - POWER STEERING GEAR LEAKAGE AREAS	13
REMOVAL	13
INSTALLATION	14
ADJUSTMENTS	15
SPECIFICATIONS	
POWER STEERING GEAR	16
TORQUE CHART	16
SPECIAL TOOLS	
POWER STEERING GEAR	16

GEAR

DESCRIPTION

CAUTION: MOPAR® ATF+4 is to be used in the power steering system. No other power steering or automatic transmission fluid is to be used in the system. Damage may result to the power steering pump and system if any other fluid is used, and do not overfill.

The power steering system has a hydraulic pump. The pump is a constant flow rate and displacement vane-type pump. The pump reservoir on the 4.0L engine is mounted to the pump body (Fig. 1)& (Fig. 2). The 2.4L engine has a remote pump reservoir mounted to the fan shroud (Fig. 3).

The steering gear used is a straight ratio recirculating ball type gear. A tilt and non-tilt column provide steering input.

OPERATION

The gear acts as a rolling thread between the worm shaft and rack piston. The worm shaft is supported by a thrust bearing at the upper end. When the worm shaft is turned the rack piston moves. The rack piston teeth mesh with the pitman shaft. Turning the worm shaft turns the pitman shaft, which turns the steering linkage.

CAUTION: Components attached with a nut and cotter pin must be torqued to specification. Then if the slot in the nut does not line up with the cotter pin hole, tighten nut until it is aligned. Never loosen the nut to align the cotter pin hole.

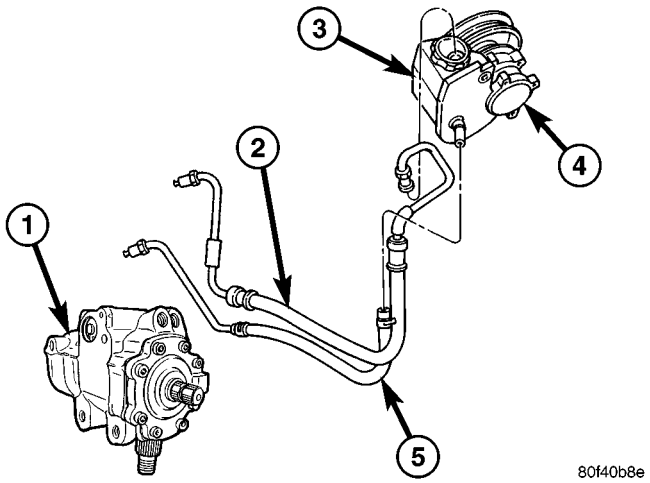

Fig. 1 POWER STEERING GEAR & PUMP - 4.0L

1 - POWER STEERING GEAR
2 - PRESSURE HOSE
3 - POWER STEERING RESERVOIR
4 - POWER STEERING PUMP
5 - RETURN HOSE

DIAGNOSIS AND TESTING - POWER STEERING GEAR LEAKAGE AREAS

NOTE: Do not service the Steering Gear, if the gear is leaking it must be replaced with a new gear assembly.

(1) Possible power steering gear leakage areas. (Fig. 4).

REMOVAL

NOTE: The steering column on vehicles with an automatic transmission may not be equipped with an internal locking shaft that allows the ignition key cylinder to be locked with the key. Alternative methods of locking the steering wheel for service will have to be used.