GEAR (Continued)

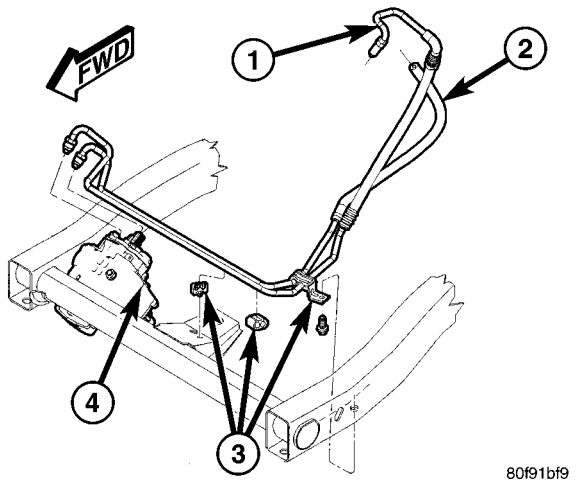

Fig. 2 RHD POWER STEERING HOSES

1 - PRESSURE HOSE
2 - RETURN HOSE
3 - MOUNTING BRACKETS
4 - STEERING GEAR

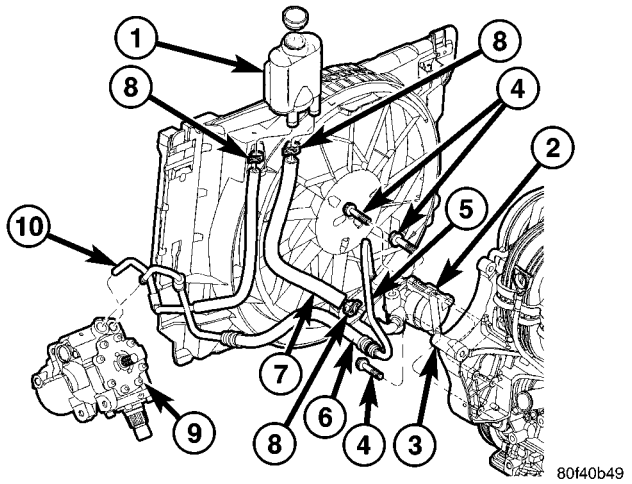

Fig. 3 POWER STEERING GEAR & PUMP - 2.4L

1 - REMOTE RESERVOIR
2 - POWER STEERING PUMP
3 - PUMP MOUNT BRACKET
4 - MOUNTING BOLTS (3)
5 - PRESSURE SWITCH LOCATION
6 - PRESSURE OUTLET HOSE (GEAR TO PUMP)
7 - RETURN HOSE (RESERVOIR TO PUMP)
8 - CLAMPS
9 - STEERING GEAR
10 - INLET HOSE (RESERVOIR TO GEAR)

(1) Place the front wheels in the straight ahead position with the steering wheel centered and locked.

(2) Siphon out as much power steering fluid as possible.

(3) Remove the bumper shield.

(4) Remove power steering hoses/tubes from steering gear.

(5) Remove the column coupler shaft from the gear.

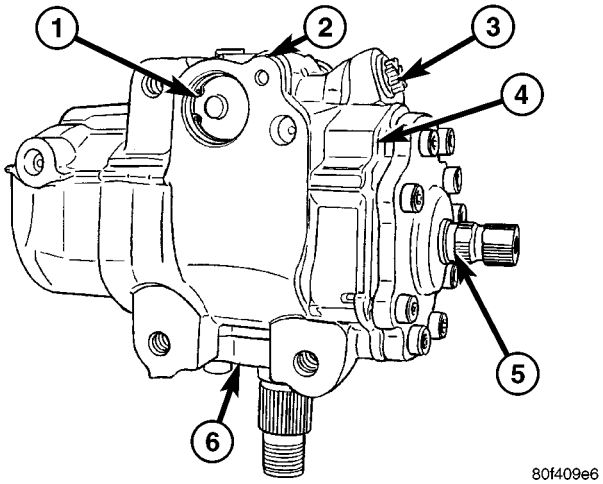

Fig. 4 STEERING GEAR

1 - VALVE HOUSING O-RING
2 - ADJUSTER NUT
3 - POWER STEERING LINE FITTINGS
4 - INPUT SHAFT HOUSING GASKET
5 - INPUT SHAFT SEAL
6 - PITMAN SHAFT SEAL HOUSING / COVER O-RING

(6) Remove pitman arm from gear. (Refer to 19 - STEERING/LINKAGE/PITMAN ARM - REMOVAL).

(7) Remove the steering gear retaining bolts and remove the gear (Fig. 5).

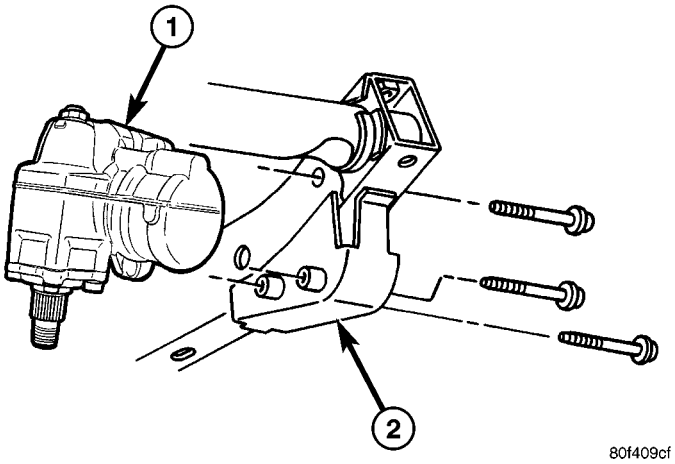

Fig. 5 STEERING GEAR REMOVAL/INSTALL

1 - STEERING GEAR
2 - FRAME MOUNT

INSTALLATION

(1) Install steering gear on the frame rail and tighten bolts to 95 N·m (70 ft. lbs.)

(2) Align and install the pitman arm and tighten nut to 251 N·m (185 ft. lbs.).

(3) Align the column coupler shaft to steering gear. Install a **new** coupler pinch bolt and tighten to 49 N·m (36 ft. lbs.).