LINKAGE (Continued)

SPECIFICATIONS

TORQUE CHART

TORQUE SPECIFICATIONS

DESCRIPTION	N·m	Ft. Lbs.	In. Lbs.
Pitman Arm Shaft	251	185	—
Drag Link Ball Studs	74	55	—
Drag Link Clamp	49	36	—
Tie Rod Ends Ball Studs	74	55	—
Tie Rod Ends Clamp	27	20	—
Tie Rod Ball Stud	88	65	—
Steering Damper Frame	74	55	—
Steering Damper Drag Link	74	55	—

SPECIAL TOOLS

STEERING LINKAGE

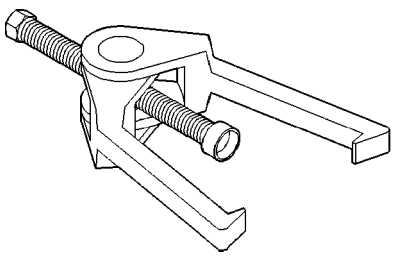

Puller C-3894–A

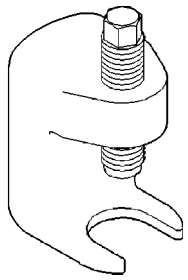

Remover Pitman C-4150A

DAMPER

REMOVAL

(1) Place the front wheels in a straight ahead position.

(2) Remove the steering dampener retaining nut and bolt from the axle bracket (Fig. 1).

(3) Remove the cotter pin and nut from the ball stud at the drag link.

(4) Remove the steering dampener ball stud from the drag link using C-3894-A puller.

INSTALLATION

(1) Install the steering dampener to the axle bracket and drag link.

(2) Install the steering dampener bolt in the axle bracket and tighten nut to 74 N·m (55 ft. lbs.).

(3) Install the ball stud nut at the drag link and tighten nut to 74 N·m (55 ft. lbs.). Install a new cotter pin.