DRAG LINK

REMOVAL

(1) Remove the cotter pins and nuts at the steering knuckle and drag link (Fig. 1).

(2) Remove the steering dampener ball stud from the drag link with a puller tool.

(3) Remove the drag link from the steering knuckle with a puller tool. Remove the same for tie rod and pitman arm.

(4) If necessary, loosen the end clamp bolts and remove the tie rod end from the link.

INSTALLATION

(1) Install the drag link adjustment sleeve and tie rod end. Position clamp bolts (Fig. 3).

(2) Position the drag link at the steering linkage. Install the drag link to the steering knuckle nut. Do the same for the tie rod and pitman arm.

(3) Tighten the nut at the steering knuckle to 47 N·m (35 ft. lbs.). Tighten the pitman nut to 81 N·m (60 ft. lbs.) and tie rod ball stud nut to 47 N·m (35 ft. lbs.). Install new cotter pins and bend end 60°.

(4) Install the steering dampener onto the drag link and tighten the nut to 74 N·m (55 ft. lbs.). Install a new cotter pin and bend end 60°.

PITMAN ARM

REMOVAL

(1) Remove the cotter pin and nut from the drag link at the pitman arm.

(2) Remove the drag link ball stud from the pitman arm with a puller.

(3) Remove the nut and washer from the steering gear shaft. Mark the pitman shaft and pitman arm for installation reference. Remove the pitman arm from steering gear with Puller C-4150A (Fig. 2).

INSTALLATION

(1) Align and install the pitman arm on steering gear shaft.

(2) Install the washer and nut on the shaft and tighten the nut to 251 N·m (185 ft. lbs.).

(3) Install drag link ball stud to pitman arm. Install nut and tighten to 81 N·m (60 ft. lbs.). Install a new cotter pin.

TIE ROD END

REMOVAL

(1) Remove the cotter pins and nuts at the steering knuckle and drag link (Fig. 1).

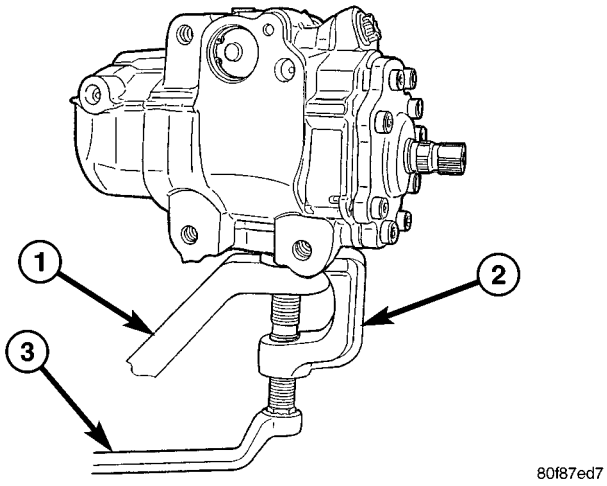

Fig. 2 PITMAN ARM PULLER

1 - PITMAN ARM
2 - SPECIAL TOOL C-4150-A
3 - WRENCH

(2) Remove the ball studs with puller tool C-4150R.

(3) If necessary, loosen the end clamp bolts and remove the tie rod ends from the tube.

INSTALLATION

(1) If necessary, install the tie rod ends in the tube. Position the tie rod clamp (Fig. 3) and tighten to 27 N·m (20 ft. lbs.).

(2) Install the tie rod on the drag link and steering knuckle.

(3) Tighten the ball stud nut on the steering knuckle to 47 N·m (35 ft. lbs.). Tighten the ball stud nut to drag link to 47 N·m (35 ft. lbs.) torque. Install new cotter pins.

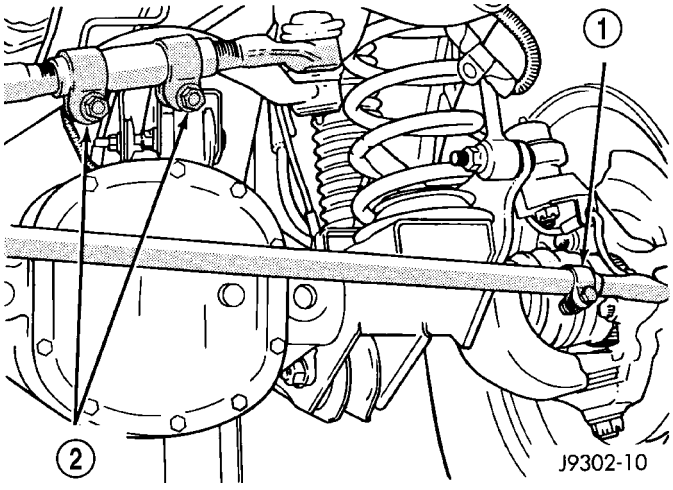

Fig. 3 Tie Rod

1 - TIE ROD CLAMP
2 - DRAG LINK CLAMPS