PUMP (Continued)

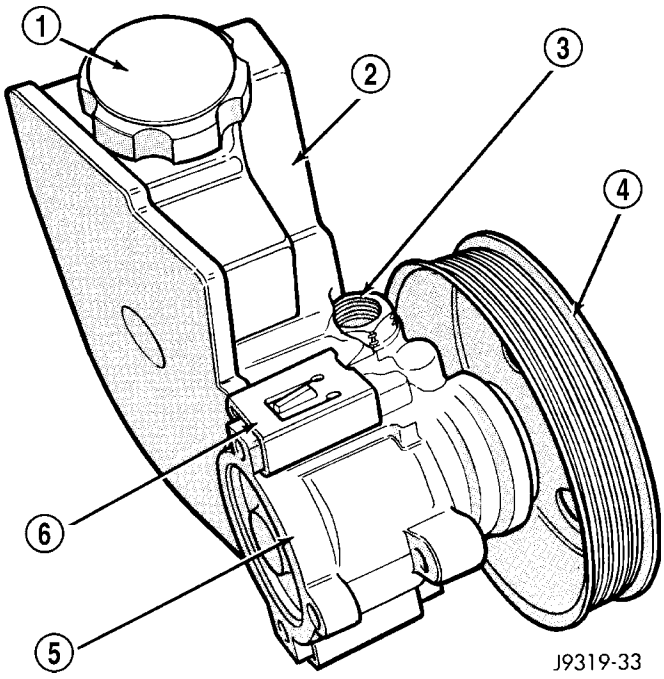

Fig. 1 Pump With Integral Reservoir

1 - CAP
2 - FLUID RESERVOIR (TYPICAL)
3 - HIGH-PRESSURE FITTING
4 - DRIVE PULLEY
5 - PUMP BODY
6 - RESERVOIR CLIP

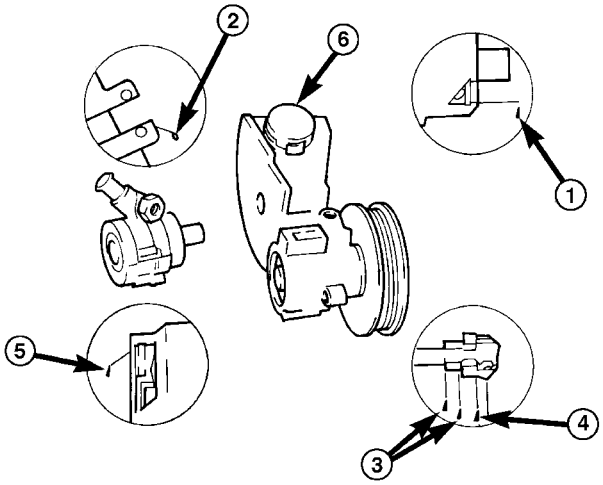

1. BUSHING (BEARING) WORN, SEAL WORN. REPLACE PUMP.
2. REPLACE RESERVOIR O-RING SEAL.
3. TORQUE HOSE FITTING NUT TO SPECIFICATIONS. IF LEAKAGE PERSISTS, REPLACE O-RING SEAL.
4. TORQUE FITTING TO SPECIFICATIONS. IF LEAKAGE PERSISTS, REPLACE O-RING SEAL.
5. REPLACE PUMP.
6. CHECK OIL LEVEL: IF LEAKAGE PERSISTS WITH THE LEVEL CORRECT AND CAP TIGHT, REPLACE THE CAP.

80a1c3c3

Fig. 2 Power Steering Pump

(3) Add fluid if necessary. Repeat the above procedure until the fluid level remains constant after running the engine.

(4) Raise the front wheels off the ground.

(5) Slowly turn the steering wheel right and left, lightly contacting the wheel stops at least 20 times.

(6) Check the fluid level add if necessary.

(7) Lower the vehicle, start the engine and turn the steering wheel slowly from lock to lock.

(8) Stop the engine and check the fluid level and refill as required.

(9) If the fluid is extremely foamy or milky looking, allow the vehicle to stand a few minutes and repeat the procedure.

CAUTION: Do not run a vehicle with foamy fluid for an extended period. This may cause pump damage.

REMOVAL

REMOVAL - 4.0L

(1) Remove serpentine drive belt, (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - REMOVAL).

(2) Remove pressure and return hoses from pump and drain the pump.

(3) Loosen the pump bracket bolt at the engine block.

(4) Remove 3 pump mounting bolts (Fig. 3) through pulley access holes.

(5) Tilt pump downward and remove from engine.

(6) Remove pulley from pump. (Refer to 19 - STEERING/PUMP/PULLEY - REMOVAL).

REMOVAL - 2.4L

(1) Remove serpentine drive belt, (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - REMOVAL).

(2) Remove pressure and return hoses from pump and drain the pump.

(3) Remove 3 pump mounting bolts (Fig. 4) through pulley access holes.

(4) Loosen the 3 pump bracket bolts.

(5) Tilt pump downward and remove from engine.

(6) Remove pulley from pump. (Refer to 19 - STEERING/PUMP/PULLEY - REMOVAL).

INSTALLATION

INSTALLATION - 4.0L

(1) Install pulley on pump. (Refer to 19 - STEERING/PUMP/PULLEY - INSTALLATION).

(2) Install pump on the engine mounting bracket.

(3) Install 3 pump mounting bolts and tighten to 27 N·m (20 ft. lbs.).