PUMP (Continued)

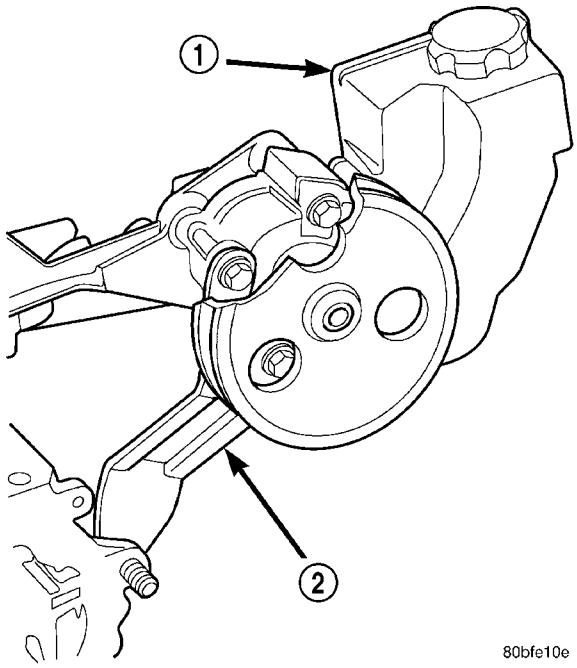

Fig. 3 Pump Mounting – 4.0L

1 - PUMP ASSEMBLY
2 - PUMP BRACKET

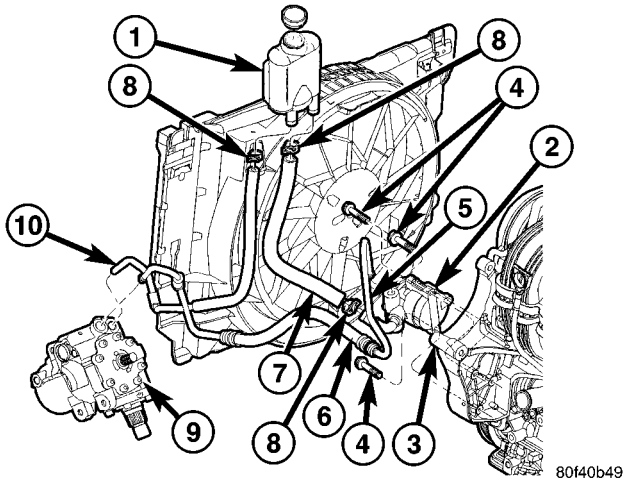

Fig. 4 POWER STEERING GEAR & PUMP - 2.4L

1 - REMOTE RESERVOIR
2 - POWER STEERING PUMP
3 - PUMP MOUNT BRACKET
4 - MOUNTING BOLTS (3)
5 - PRESSURE SWITCH LOCATION
6 - PRESSURE OUTLET HOSE (GEAR TO PUMP)
7 - RETURN HOSE (RESERVOIR TO PUMP)
8 - CLAMPS
9 - STEERING GEAR
10 - INLET HOSE (RESERVOIR TO GEAR)

(4) Tighten pump bracket bolt to 57 N·m (42 ft. lbs.).

(5) Install the pressure line on the pump and tighten to 28 N·m (21 ft. lbs.).

(6) Install return hoses on pump.

(7) Install drive belt, (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - INSTALLATION).

(8) Add power steering fluid, refer to Power Steering Pump Initial Operation. (Refer to 19 - STEERING/PUMP - STANDARD PROCEDURE).

INSTALLATION - 2.4L

(1) Install pulley on pump. (Refer to 19 - STEERING/PUMP/PULLEY - INSTALLATION).

(2) Install pump on the engine mounting bracket.

(3) Tighten pump bracket bolts to 47 N·m (35 ft. lbs.).

(4) Install 3 pump mounting bolts and tighten to 27 N·m (20 ft. lbs.).

(5) Install the pressure line on the pump and tighten to 28 N·m (21 ft. lbs.).

(6) Install return hoses on pump.

(7) Install drive belt, (Refer to 7 - COOLING/ACCESSORY DRIVE/DRIVE BELTS - INSTALLATION).

(8) Add power steering fluid, refer to Power Steering Pump Initial Operation. (Refer to 19 - STEERING/PUMP - STANDARD PROCEDURE).