POWER STEERING PRESSURE SWITCH (Continued)

When steering pump pressure exceeds 5860 kPa ± 690 kPa (850 psi ± 100 psi), the normally closed switch will open and the PCM will increase the engine idle speed. This will prevent the engine from stalling.

When pump pressure drops to approximately 1379 kPa (200 psi), the switch circuit will re-close and engine idle speed will return to its previous setting.

REMOVAL

This switch is not used with 4.0L six-cylinder engines.

The power steering pressure switch is installed in the power steering high-pressure hose (Fig. 5).

(1) Disconnect electrical connector from power steering pressure switch.

(2) Place a small container or shop towel beneath switch to collect any excess fluid.

(3) Remove switch. Use back-up wrench on power steering line to prevent line bending.

INSTALLATION

This switch is not used with 4.0L six-cylinder engines.

(1) Install power steering switch into power steering line.

(2) Tighten to 14–22 N·m (124–195 in. lbs.) torque.

(3) Connect electrical connector to switch.

(4) Check power steering fluid and add as necessary.

(5) Start engine and again check power steering fluid. Add fluid if necessary.

PULLEY

REMOVAL

CAUTION: On vehicles equipped with the 4.0L, Do not reuse the old power steering pump pulley it is not intended for reuse. A new pulley must be installed if removed.

(1) Remove pump assembly.

(2) Remove pulley from pump with Puller C-4333 or equivalent puller (Fig. 6).

INSTALLATION

NOTE: The pulley is marked front for installation.

CAUTION: On vehicles equipped with the 4.0L, Do not reuse the old power steering pump pulley it is not intended for reuse. A new pulley must be installed if removed.

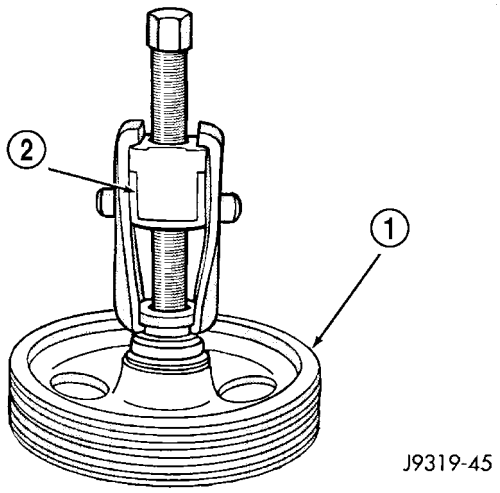

Fig. 6 Pulley Removal

1 - POWER STEERING PUMP DRIVE PULLEY
2 - SPECIAL TOOL C-4333

(1) Replace pulley if bent, cracked, or loose.

(2) Install pulley on pump with Installer C-4063-B or equivalent installer (Fig. 7). The pulley must be flush with the end of the shaft. Ensure the tool and pulley are aligned with the pump shaft.

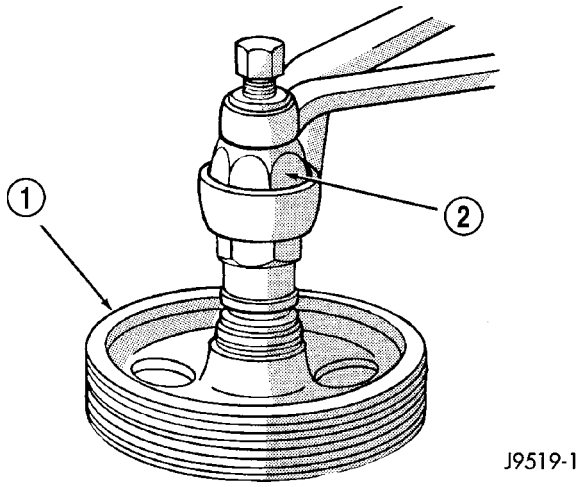

Fig. 7 Pulley Installation

1- POWER STEERING PUMP DRIVE PULLEY
2 - SPECIAL TOOL C-4063-B

(3) Install pump assembly.

(4) With Serpentine Belt, run engine until warm (5 min.) and note any belt chirp. If chirp exists, move pulley outward approximately 0.5 mm (0.020 in.). If noise increases, press on 1.0 mm (0.040 in.). **Be careful that pulley does not contact mounting bolts.**