MANUAL TRANSMISSION - NSG370 (Continued)

STANDARD PROCEDURE - DRAIN AND FILL

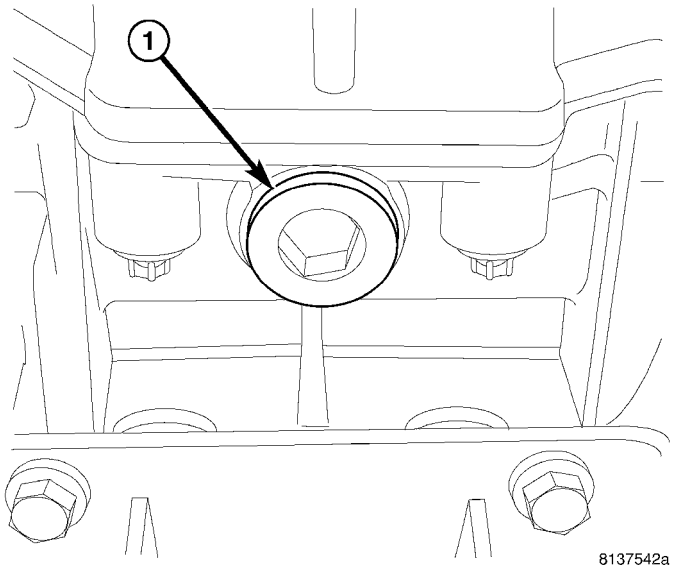

Fig. 1 DRAIN PLUG

1 - DRAIN PLUG

(1) With vehicle in neutral, position vehicle on hoist.
(2) Remove drain plug (1) (Fig. 1) and drain fluid.

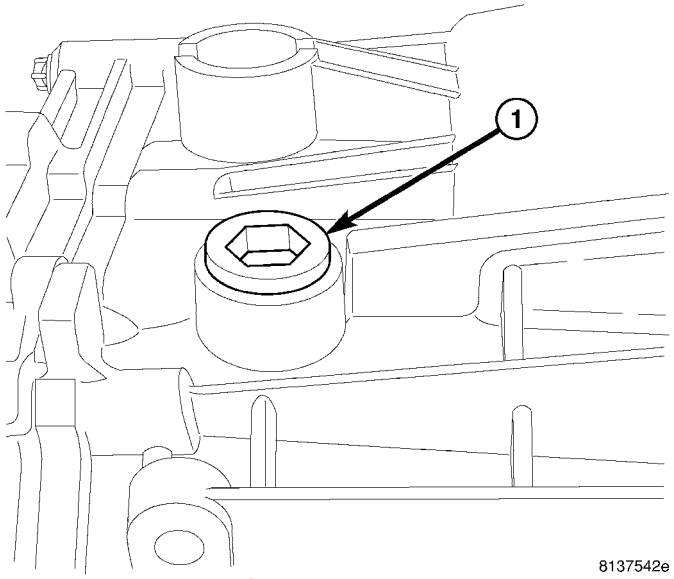

Fig. 2 FILL PLUG

1 - FILL PLUG

(3) Install drain plug and remove fill plug (1) (Fig. 2).
(4) Fill transmission with 1.5L (3.17 pts.) of Mopar® Manual Transmission Lubricant MS-9224 or to the bottom of the fill plug (1) hole.

REMOVAL

(1) Disconnect negative battery cable.
(2) With vehicle in neutral, position vehicle on hoist.
(3) Remove drain plug (1) (Fig. 3) and drain fluid.

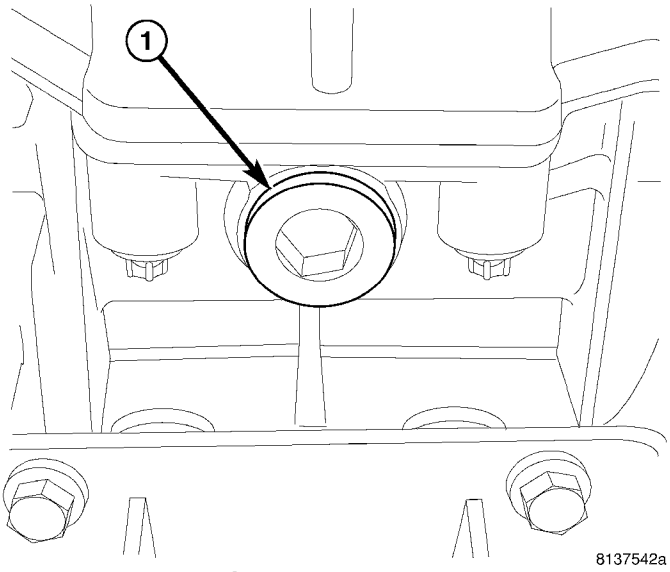

Fig. 3 DRAIN PLUG

1. DRAIN PLUG

(4) Mark installation reference marks on propeller shaft/shafts and remove shafts.
(5) Remove transfer case shift linkage, wiring connector, and vent hose, if equipped.
(6) Remove transfer case, if equipped.
(7) Support transmission with jack.
(8) Remove transmission mount (1) and crossmember (2).

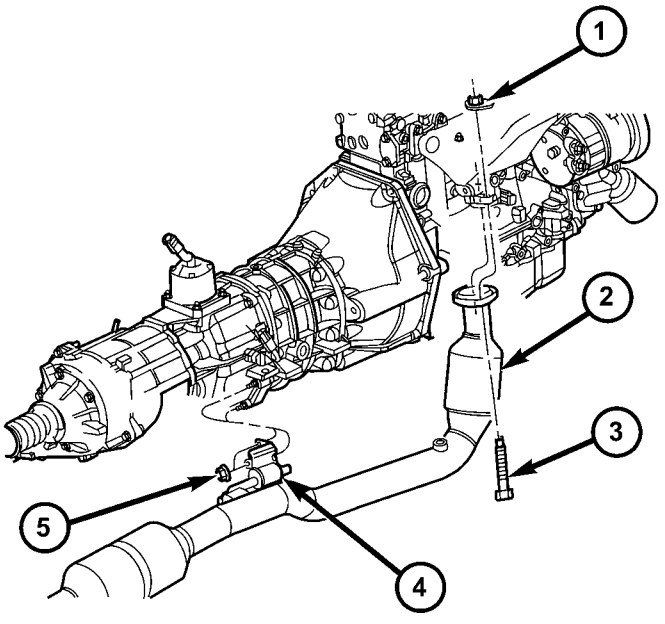

Fig. 4 2.4L CATALYST ASSEMBLY - 4x4

1- FLANGED NUT
2- CATALYST ASSEMBLY
3- BOLT
4- HANGER
5- NUT