MANUAL TRANSMISSION - NSG370 (Continued)

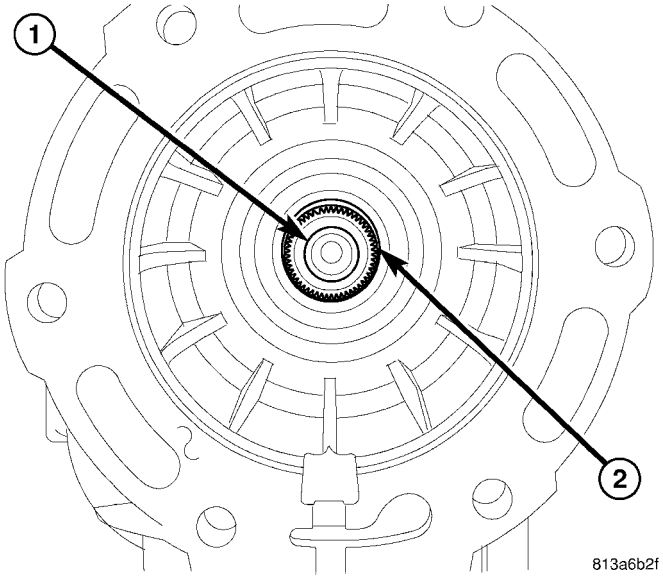


Fig. 13 OUTPUT SHAFT SNAP RING

1 - OUTPUT SHAFT
2 - SNAP RING

(6) Remove output shaft (1) (Fig. 13) snap ring (2) 4x4 only.

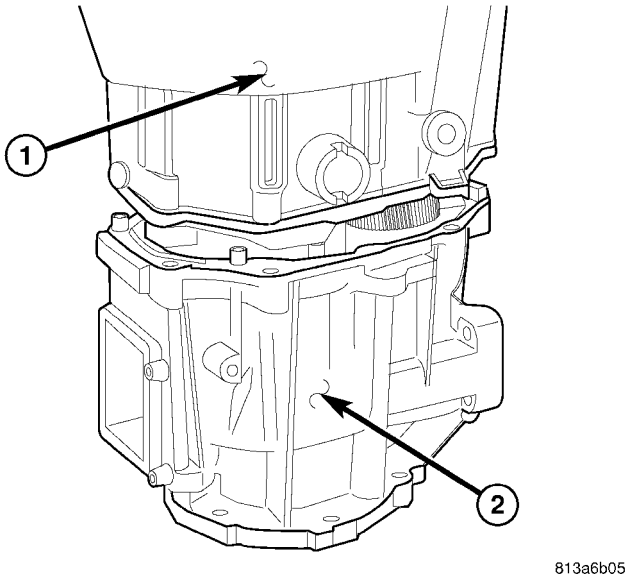


Fig. 14 SPLIT HOUSING

1 - FRONT HOUSING
2 - REAR HOUSING

(7) Stand transmission on the rear housing and remove the housing bolts.

(8) Remove front housing (1) (Fig. 14) from the rear housing (2).

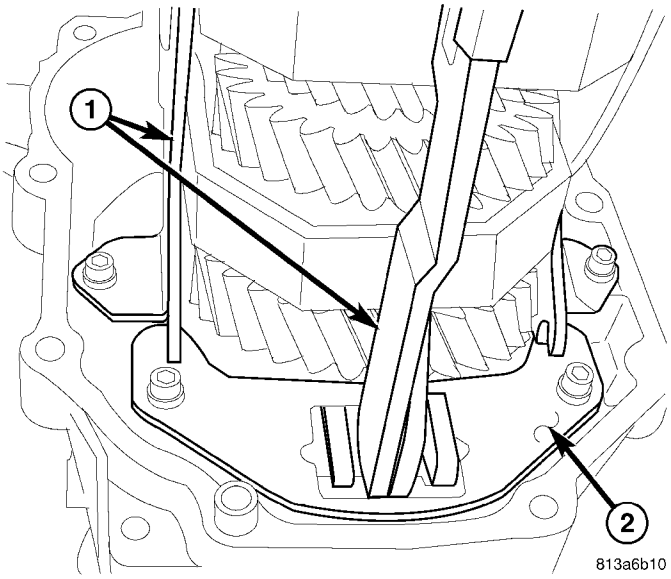


Fig. 15 SHIFT RAIL SUPPORT PLATE

1 - SHIFT RAILS
2 - SUPPORT PLATE

(9) Remove shift rails (1) (Fig. 15) support plate (2) bolts.

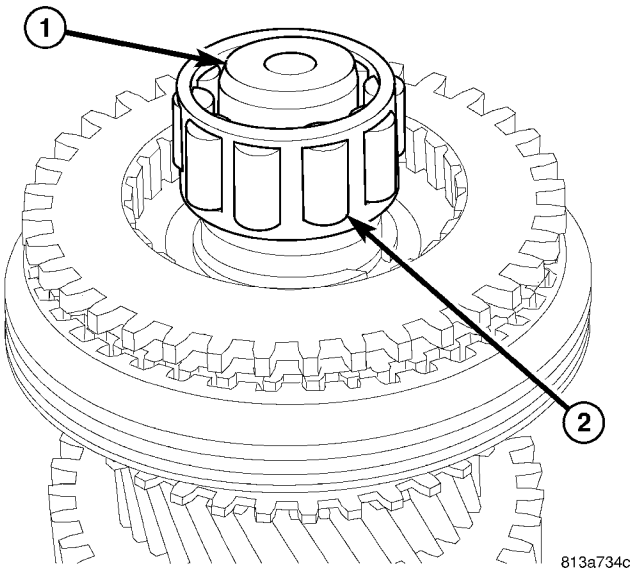


Fig. 16 INPUT SHAFT ROLLER BEARING

1 - INPUT SHAFT
2 - ROLLER BEARING

(10) Remove input shaft (1) (Fig. 16) roller bearing (2).