MANUAL TRANSMISSION - NSG370 (Continued)

(2) Push 5-6 synchronizer sleeve (1) (Fig. 20) down on hub and remove detents (2) springs and balls.

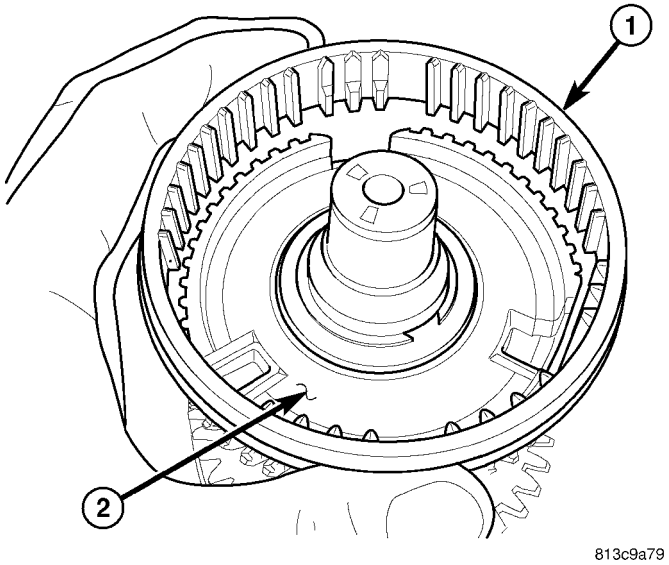


Fig. 21 5-6 SYNCHRONIZER SLEEVE

1 - SYNCHRONIZER SLEEVE
2 - HUB

(3) Remove 5-6 synchronizer sleeve (1) (Fig. 21) from hub (2).

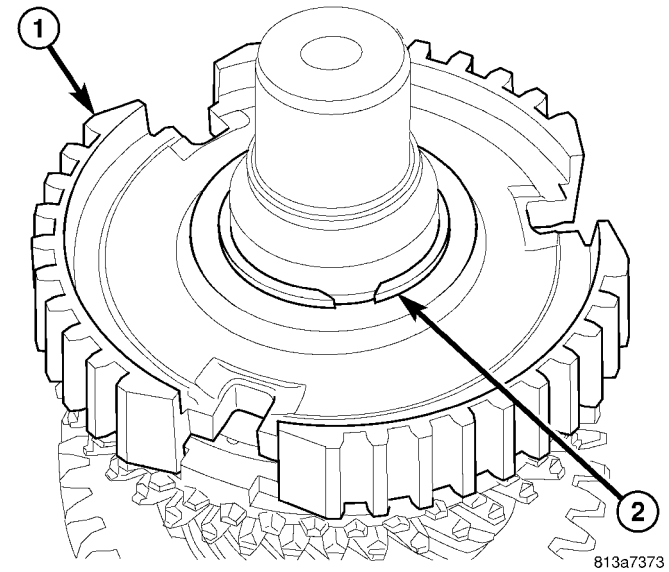


Fig. 22 5-6 SYNCHRO HUB SNAP RING

1 - SYNCHRONIZER HUB
2 - SNAP RING

(4) Remove 5-6 synchronizer hub (1) (Fig. 22) snap ring (2).

NOTE: All snap rings are select fit from the factory.

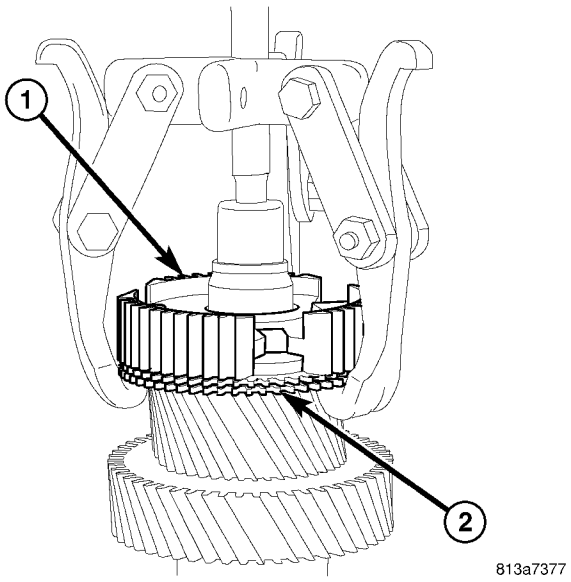


Fig. 23 5-6 SYNCHRO HUB

1 - 5-6 SYNCHRONIZER HUB
2 - SIXTH GEAR SYNCHRONIZER RINGS

(5) Remove 5-6 synchronizer hub (1) (Fig. 23) and sixth gear synchronizer rings (2) with a three jaw puller. Place puller jaws under sixth gear synchronizer rings (2).

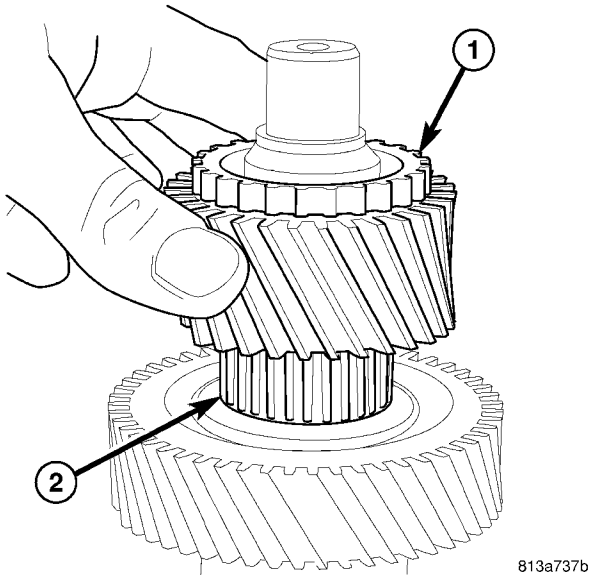


Fig. 24 SIXTH GEAR & BEARING

1 - SIXTH GEAR
2 - BEARING

(6) Remove sixth gear (1) (Fig. 24) and bearing (2).