MANUAL TRANSMISSION - NSG370 (Continued)

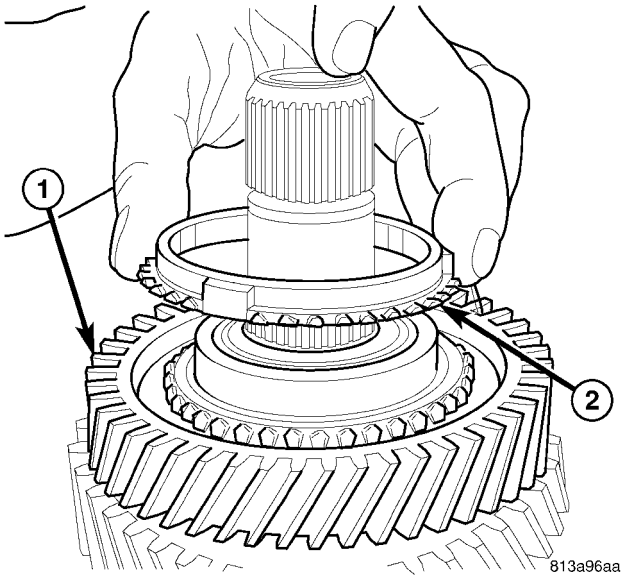



***Fig. 29 REVERSE SYNCHRONIZER***

1 - REVERSE GEAR
2 - SYNCHRONIZER FRICTION RING

(12) Remove reverse gear (1) (Fig. 29) synchronizer ring (2).

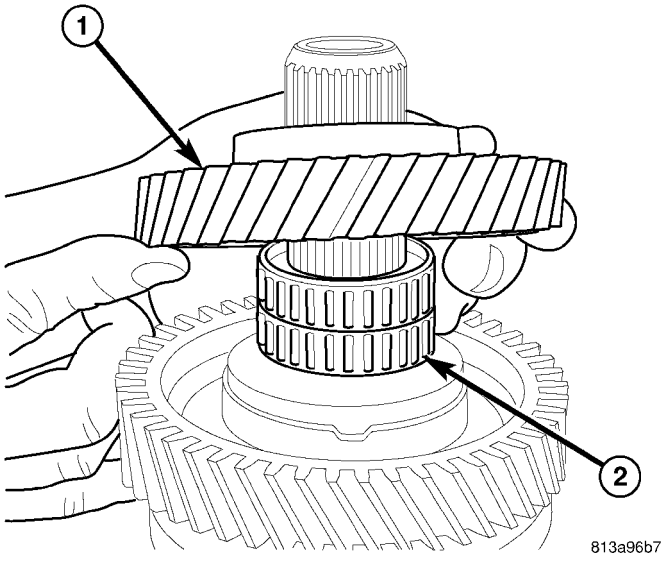



***Fig. 30 REVERSE GEAR***

1 - REVERSE GEAR
2 - BEARING

(13) Remove reverse gear (1) (Fig. 30) and bearing (2).

(14) Remove reverse gear bearing race (1) (Fig. 31), thrust washer (2) and first gear (3) with puller (4). Place puller jaws under first gear (3).

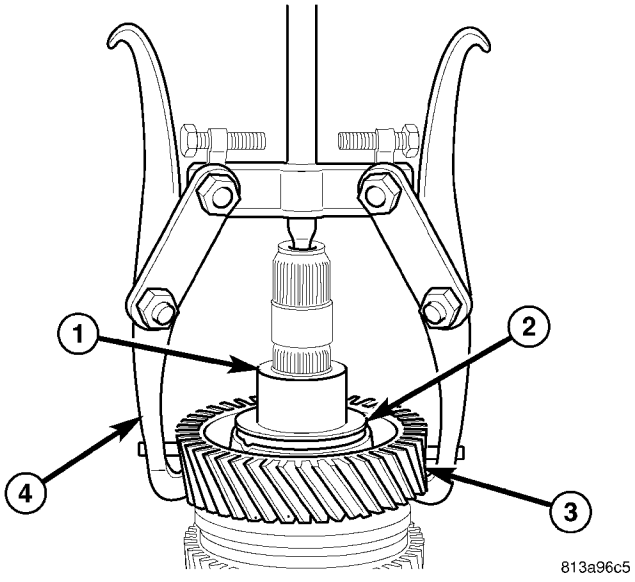



***Fig. 31 FIRST GEAR***

1 - BEARING RACE
2 - THRUST WASHER
3 - FIRST GEAR
4 - PULLER

(15) Remove first gear bearing.

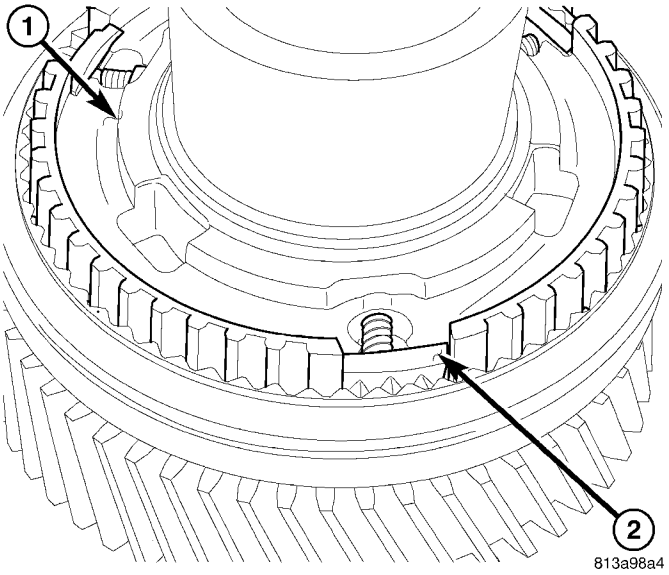



***Fig. 32 1-2 SYNCHRO DETENT***

1 - 1-2 SYNCHRONIZER HUB
2 - DETENTS

(16) Remove first gear synchronizer rings.

(17) Push 1-2 synchronizer sleeve down on hub. Remove 1-2 synchronizer hub (1) (Fig. 32) detents (2), balls and springs.