MANUAL TRANSMISSION - NSG370 (Continued)

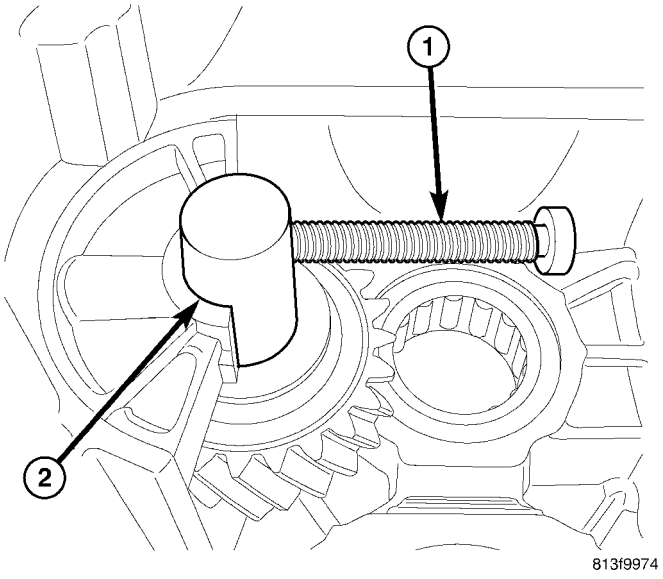


Fig. 45 PULL IDLER SHAFT

1 - IDLER GEAR SHAFT BOLT
2 - IDLER GEAR SHAFT

(2) Thread idler gear shaft bolt (1) (Fig. 45) into the shaft (2). Then work shaft (2) out of the idler gear.

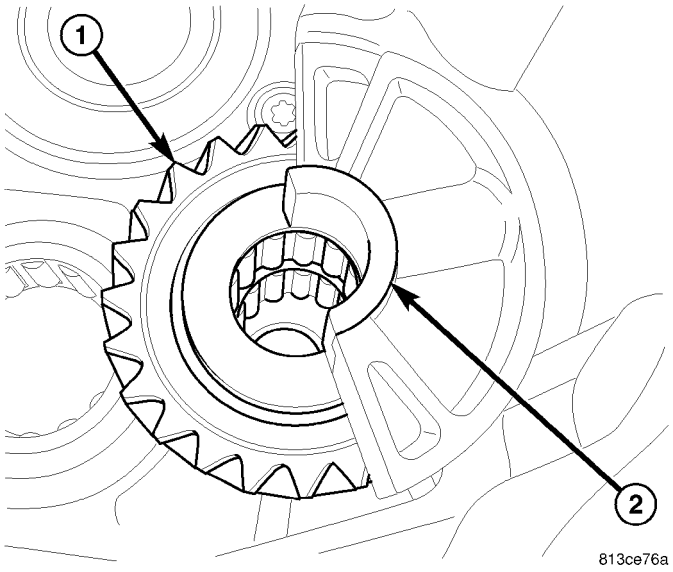


Fig. 46 IDLER SHAFT SUPPORT

1 - REVERSE IDLER GEAR
2 - SHAFT SUPPORT

(3) Remove reverse idler gear (1) (Fig. 46) shaft support (2).

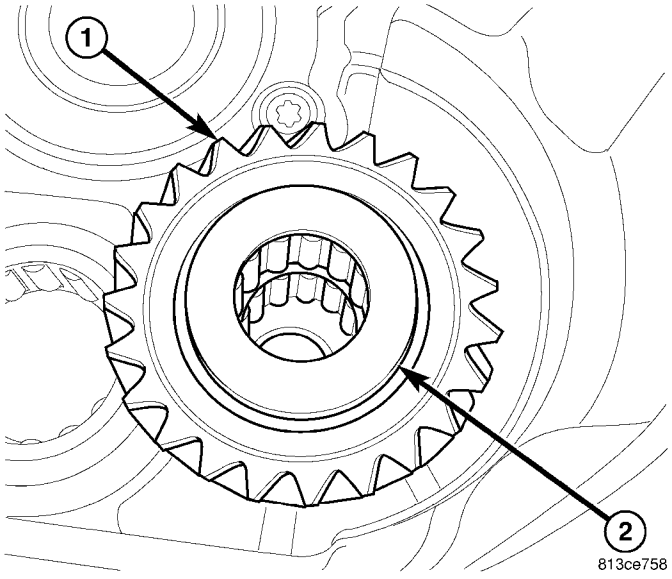


Fig. 47 IDLER GEAR THRUST WASHER

1 - REVERSE IDLER GEAR
2 - THRUST WASHER

(4) Remove reverse idler gear (1) (Fig. 47) thrust washer (2).

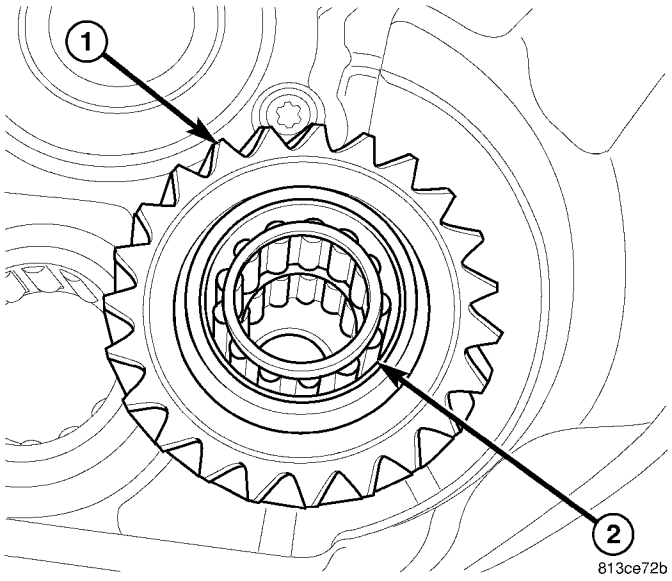


Fig. 48 IDLER GEAR BEARING

1 - REVERSE IDLER GEAR
2 - BEARING

(5) Remove reverse idler gear (1) (Fig. 48) and bearing (2).