MANUAL TRANSMISSION - NSG370 (Continued)

## INSPECTION

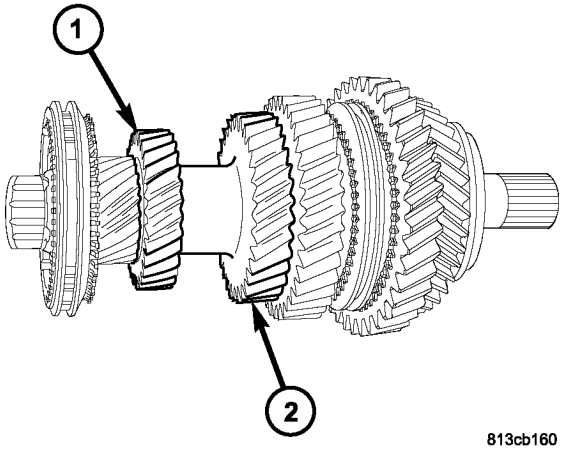


*Fig. 52 MAINSHAFT*

1 - THIRD GEAR
2 - FOURTH GEAR

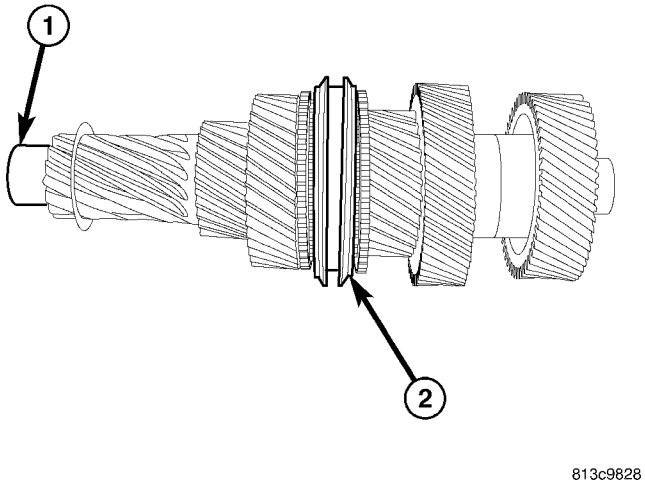


*Fig. 53 COUNTERSHAFT*

1 - BEARING SURFACES
2 - 3-4 SYNCHRONIZER ASSEMBLY

**NOTE: Minor corrosion, nicks, or pitting can be smoothed with 400 grit emery and polished out with crocus cloth.**

**Bearings:** Inspect for worn, cracked, flat-spotted or brinnelled.

**Gears:** Inspect for worn, chipped or cracked teeth. Inspect bearing surfaces for ware or flat-spotted.

**Mainshaft:** Inspect for worn splines, snap ring grooves and threads. Inspect bearing surfaces for ware or flat-spotted.**Third gear (1) (Fig. 52) and fourth gear (2) are serviced with mainshaft only.**

**Countershaft:** Inspect for worn, chipped or cracked teeth. Inspect bearing surfaces (1) (Fig. 53) for wear or flat-spots. Inspect 3-4 synchronizer assembly (2).**The countershaft is serviced as an assembly.**

**Input Shaft:** Inspect for worn, chipped or cracked teeth (1). Inspect bearing surface (2) for wear or flat-spots. Inspect for worn splines (3) (Fig. 54).

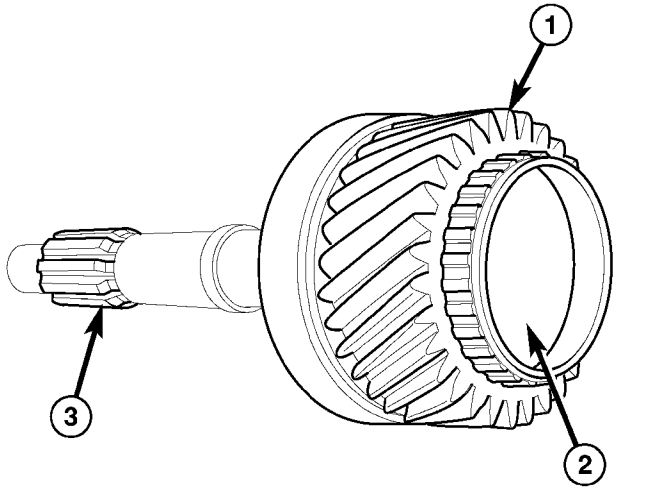


*Fig. 54 INPUT SHAFT*

1 - TEETH
2 - BEARING SURFACE
3 - SPLINE