MANUAL TRANSMISSION - NSG370 (Continued)

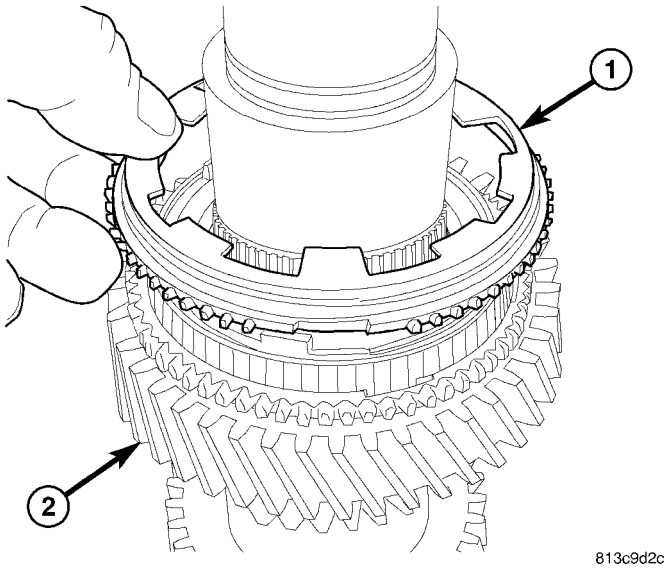



***Fig. 62 2ND BLOCKER RING***

1 - SYNCHRONIZER BLOCKER RING
2 - SECOND GEAR

(6) Install synchronizer blocker ring (1) (Fig. 62) on second gear (2).

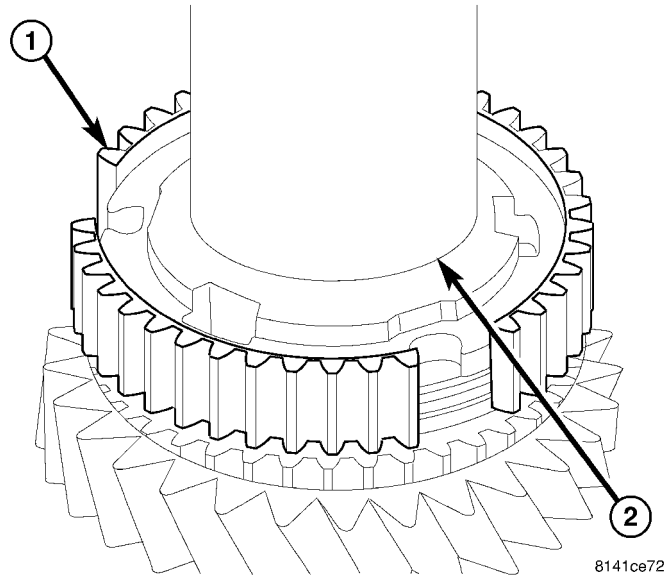



***Fig. 63 1-2 SYNCHRO HUB INSTALLER***

1 - 1-2 SYNCHRONIZER HUB
2 - INSTALLER

(7) Install 1-2 synchronizer hub (1) (Fig. 63) with Installer 8228 (2) and a press. Align hub detent openings with synchronizer rings.

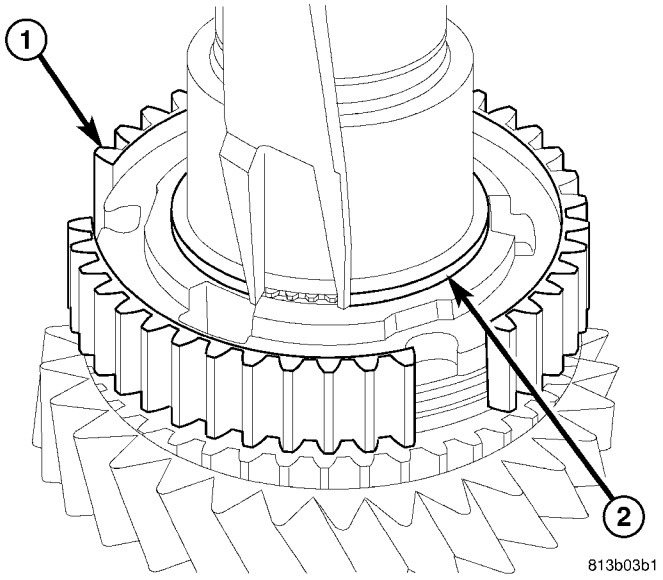



***Fig. 64 1-2 SYNCHRO HUB SNAP RING***

1 - SYNCHRONIZER HUB
2 - SNAP RING

(8) Install 1-2 synchronizer hub (1) (Fig. 64) snap ring (2).

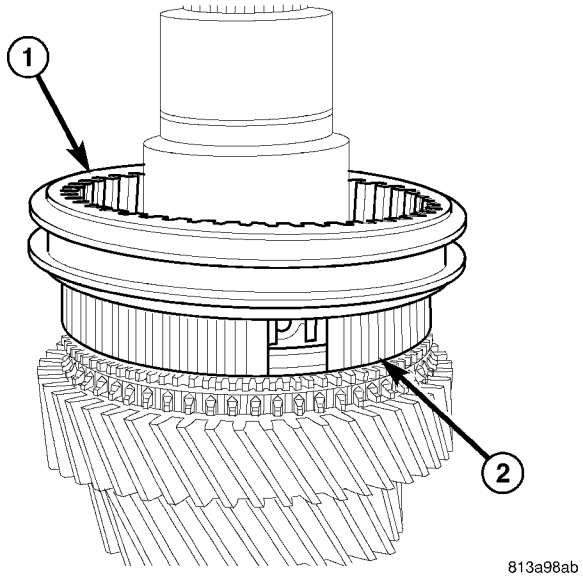



***Fig. 65 1-2 SYNCHRO SLEEVE***

1 - 1-2 SYNCHRONIZER SLEEVE
2 - SYNCHRONIZER HUB

(9) Install 1-2 synchronizer sleeve (1) (Fig. 65) and push to the bottom of the synchronizer hub (2).