MANUAL TRANSMISSION - NSG370 (Continued)

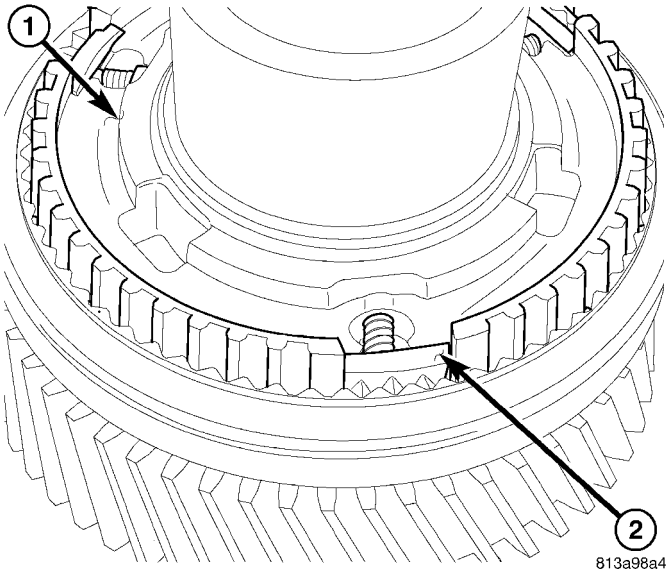



***Fig. 66 1-2 SYNCHRO DETENT***

1 - 1-2 SYNCHRONIZER HUB
2 - DETENTS

(10) Install 1-2 synchronizer detents, springs, and balls (2) (Fig. 66).

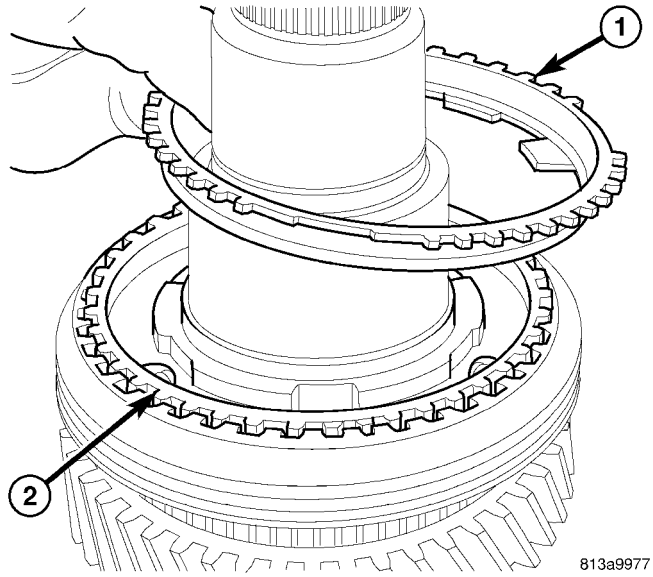



***Fig. 67 FIRST GEAR OUTER BLOCKER RING***

1 - FIRST GEAR BLOCKER RING
2 - SYNCHRONIZER HUB

(11) Install first gear blocker ring (1) (Fig. 67) into synchronizer hub (2).

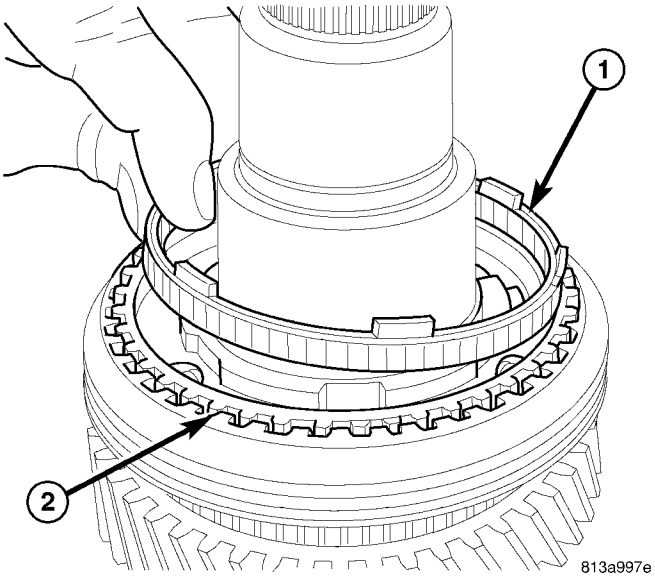



***Fig. 68 FIRST GEAR FRICTION RING***

1 - FIRST GEAR OUTER FRICTION RING
2 - SYNCHRONIZER HUB

(12) Install first gear outer friction ring (1) (Fig. 68) into synchronizer hub (2).

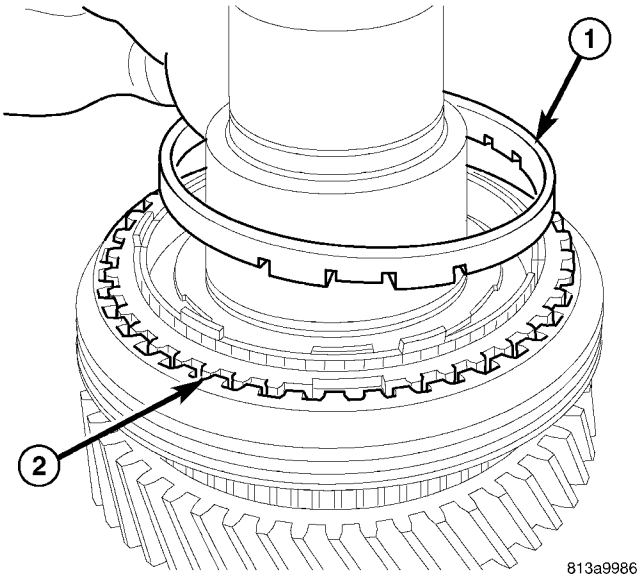



***Fig. 69 FIRST GEAR INNER BLOCKER RING***

1 - FIRST GEAR INNER BLOCKER RING
2 - SYNCHRONIZER HUB

(13) Install first gear inner blocker ring (1) (Fig. 69) into synchronizer hub (2).