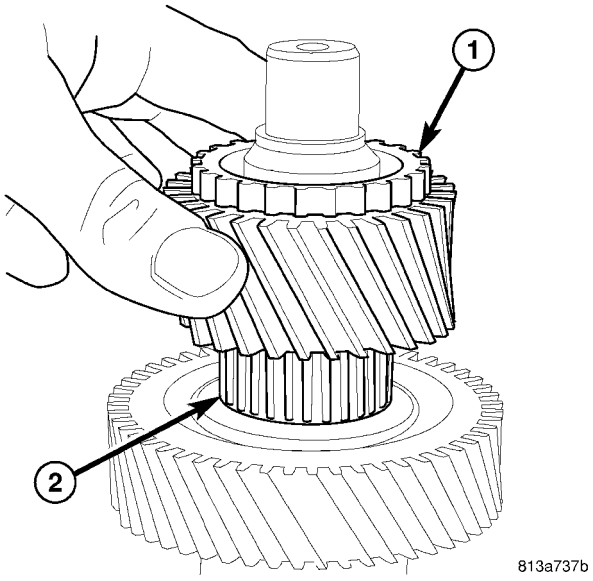



***Fig. 78 SIXTH GEAR AND BEARING***

1 - SIXTH GEAR
2 - BEARING

(23) Install sixth gear (1) (Fig. 78) and bearing (2).

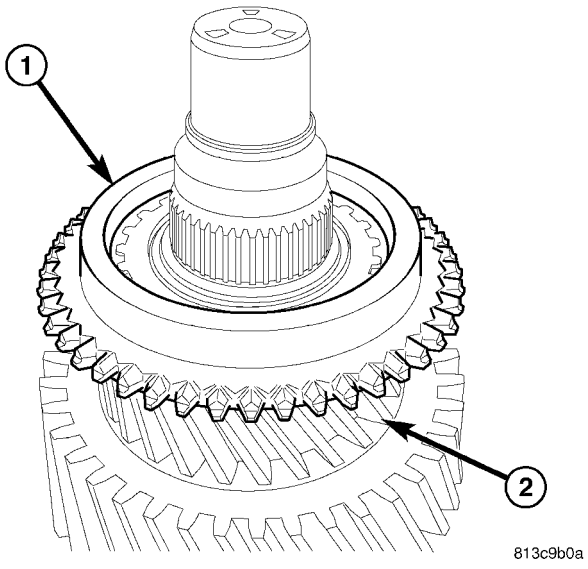



***Fig. 79 6TH GEAR BLOCKER RING***

1 - SIXTH GEAR BLOCKER RING
2 - SIXTH GEAR

(24) Install sixth gear synchronizer blocker ring (1) (Fig. 79) on sixth gear (2).

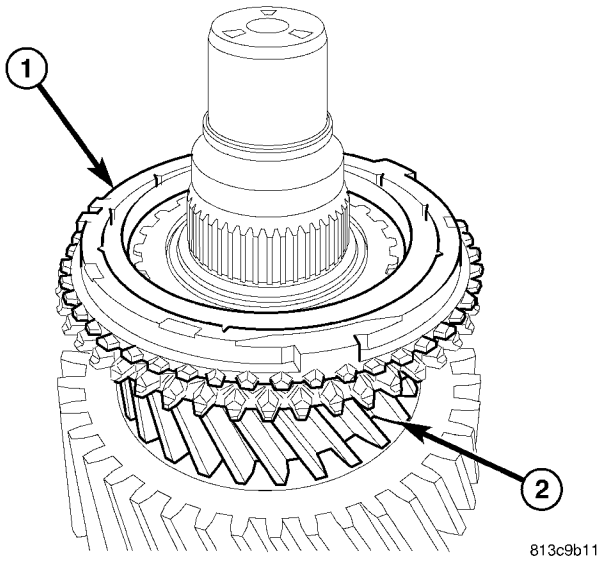



***Fig. 80 6TH GEAR FRICTION RING***

1 - SIXTH GEAR FRICTION RING
2 - SIXTH GEAR

(25) Install sixth gear synchronizer friction ring (1) (Fig. 80) on sixth gear (2).

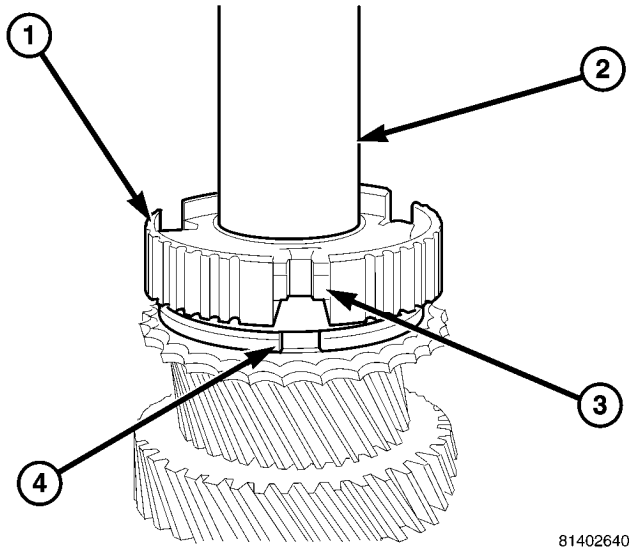



***Fig. 81 5-6 HUB INSTALLER***

1 - SYNCHRONIZER HUB
2 - INSTALLER
3 - DETENT OPENING
4 - FRICTION RING TAB

(26) Install 5-6 synchronizer hub (1) with Installer W-262 (2). Align hub detent opening (3) with friction ring lugs (4) and press hub on mainshaft (Fig. 81).

**NOTE: 5-6 synchronizer hub center, is offset and must be install large offset down.**