MANUAL TRANSMISSION - NSG370 (Continued)

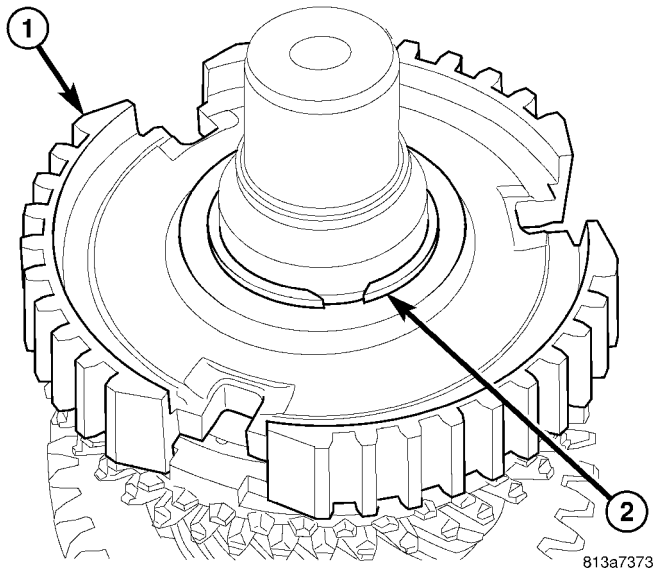

Fig. 82 5-6 SYNCHRO HUB SNAP RING

1 - SYNCHRONIZER HUB
2 - SNAP RING

(27) Install 5-6 synchronizer hub (1) (Fig. 82) snap ring (2).

(28) Install 5-6 synchronizer sleeve on hub (1).

REAR HOUSING

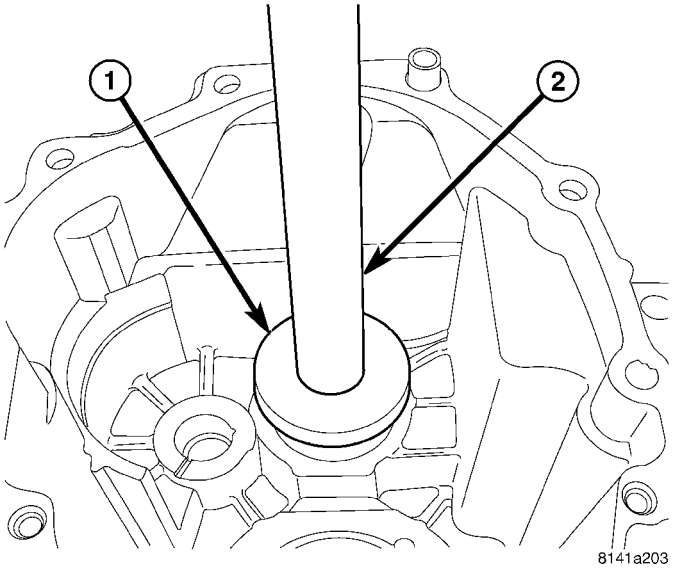

Fig. 83 REAR COUNTERSHAFT BEARING

1 - INSTALLER
2 - HANDLE

(1) Install countershaft bearing (Fig. 83) into rear housing with Installer 9643 (1) and Handle C-4171.

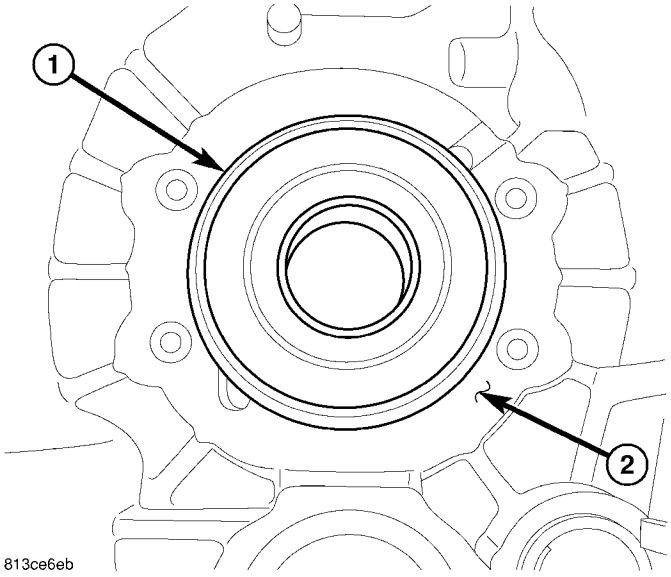

Fig. 84 REAR HOUSING MAINSHAFT BEARING

1 - MAINSHAFT BEARING
2 - HOUSING

(2) Install mainshaft bearing (1) (Fig. 84) into housing (2).

(3) Install bearing retainer and tighten bolts to 10 N·m (7.3 ft. lbs.).

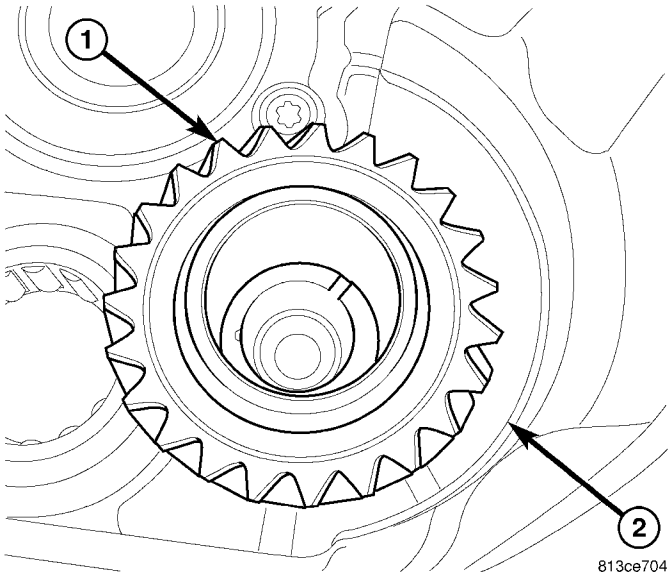

Fig. 85 REVERSE IDLER GEAR

1 - REVERSE IDLER GEAR
2 - HOUSING

(4) Install reverse idler gear (1) (Fig. 85) into housing (2).