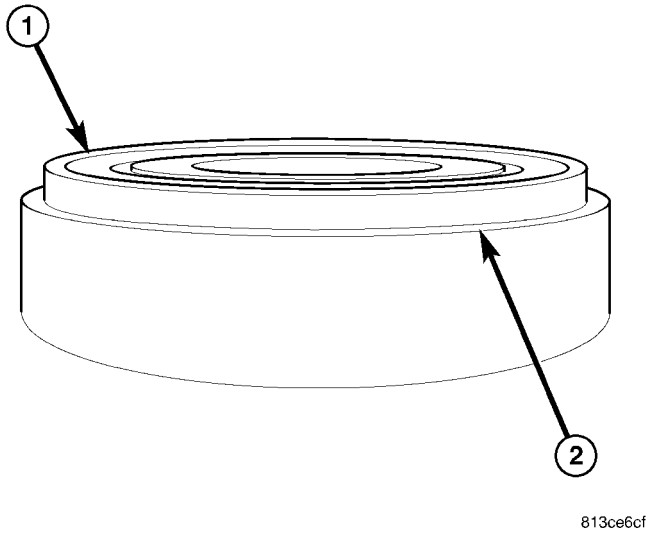

Fig. 98 BEARING RETAINER LIP

1 - COUNTERSHAFT BEARING
2 - BEARING RETAINER LIP

(5) Install countershaft bearing (1) (Fig. 98) into housing with bearing retainer lip (2) facing up.

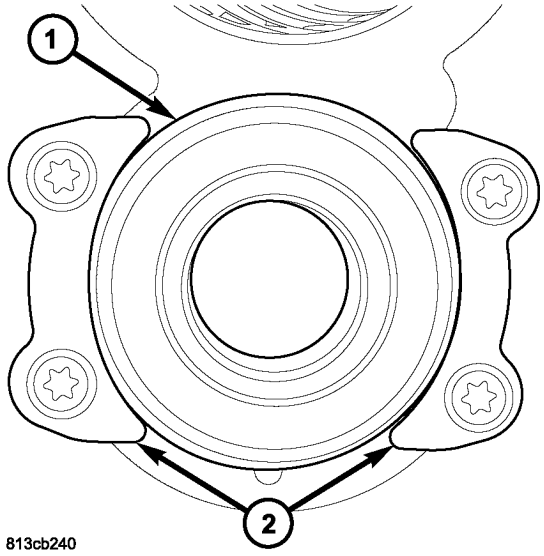

Fig. 99 COUNTERSHAFT BEARING RETAINER

1 - COUNTERSHAFT BEARING
2 - RETAINERS

(6) Install countershaft bearing (1) (Fig. 99) retainers (2) and tighten bolts to 10 N·m (88 in. lbs.).

FINAL ASSEMBLY

(1) Install mainshaft (1) onto Build Fixture 9633 (2) (Fig. 100).

(2) Install countershaft (1) onto Build Fixture 9633 (2) (Fig. 101).

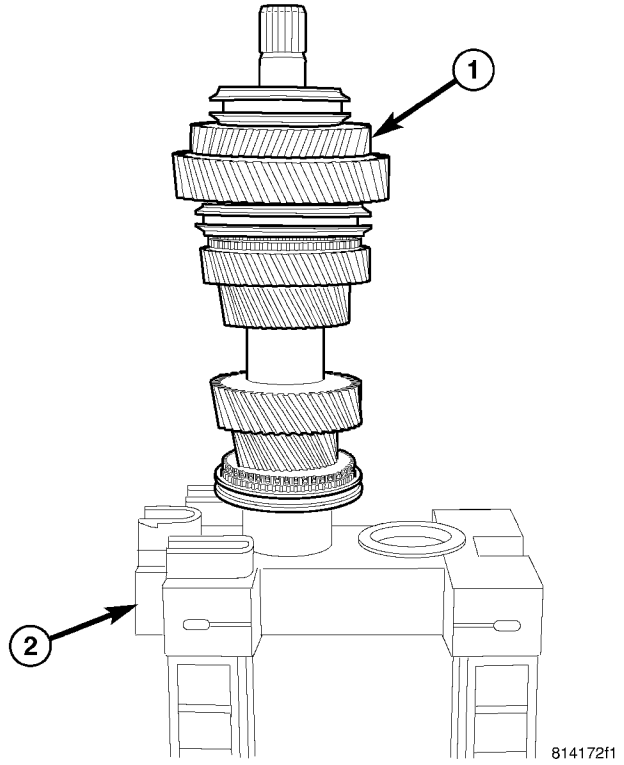

Fig. 100 MAINSHAFT IN FIXTURE

1 - MAINSHAFT
2 - FIXTURE

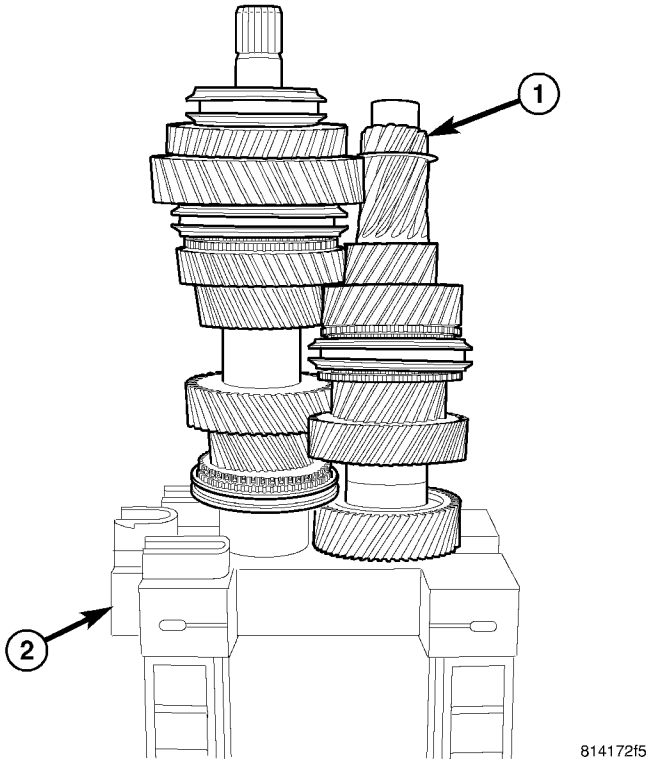

Fig. 101 COUNTERSHAFT IN FIXTURE

1 - COUNTERSHAFT
2 - FIXTURE