MANUAL TRANSMISSION - NSG370 (Continued)

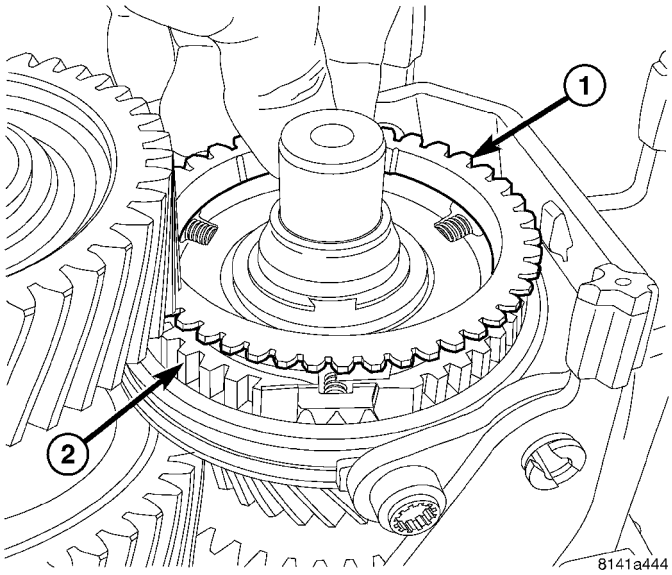


Fig. 106 FIFTH GEAR FRICTION RING

1 - FRICTION RING
2 - HUB

(8) Install fifth gear synchronizer friction ring (1) (Fig. 106) on 5-6 synchronizer hub (2).

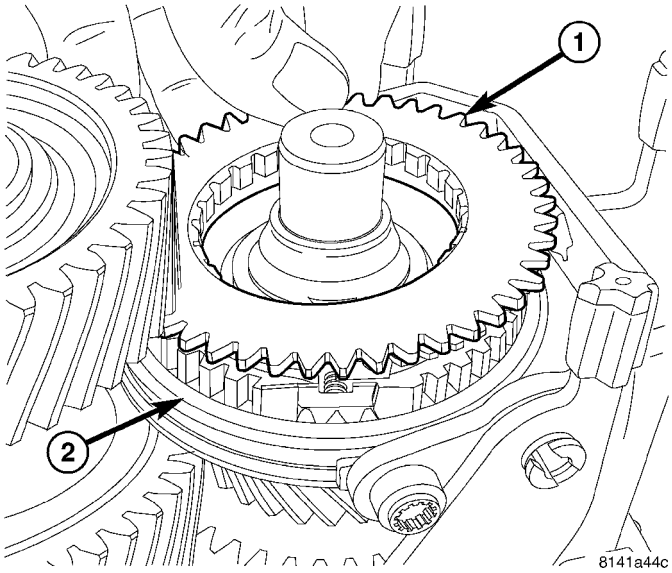


Fig. 107 FIFTH GEAR BLOCKER RING

1 - BLOCKER RING
2 - HUB

(9) Install fifth gear (Fig. 107) blocker ring (1) on 5-6 synchronizer hub (2). Then hold blocker ring and center synchronizer sleeve.

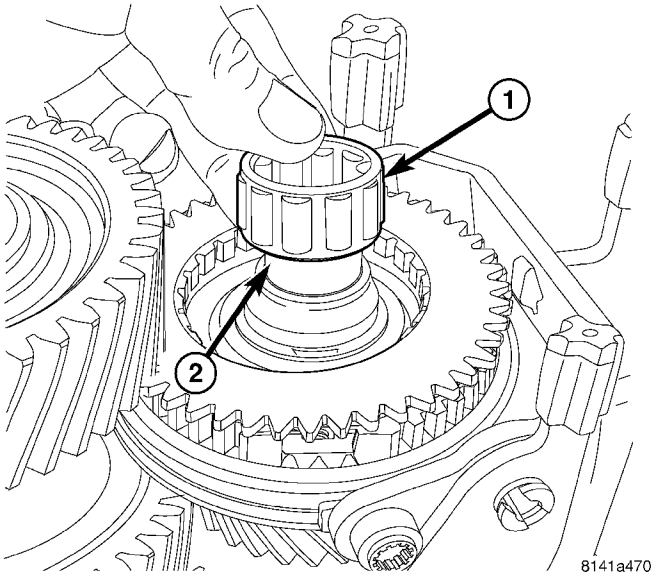


Fig. 108 INPUT SHAFT ROLLER BEARING

1 - ROLLER BEARING
2 - MAINSHAFT

(10) Install input shaft (Fig. 108) roller bearing (1) on mainshaft (2)..

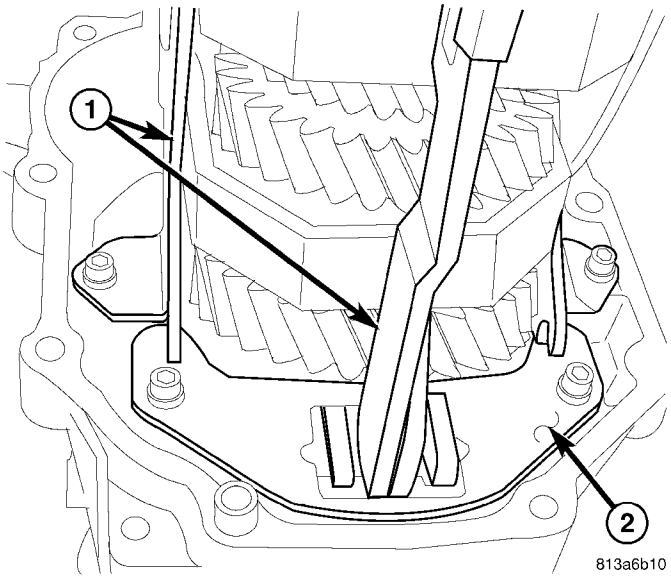


Fig. 109 SHIFT RAIL SUPPORT PLATE

1 - SHIFT RAILS
2 - SUPPORT PLATE

(11) Install shift rail (1) (Fig. 109) support plate (2) bolts and tighten to 8 N·m (71 in. lbs.).