MANUAL TRANSMISSION - NSG370 (Continued)

INSTALLATION

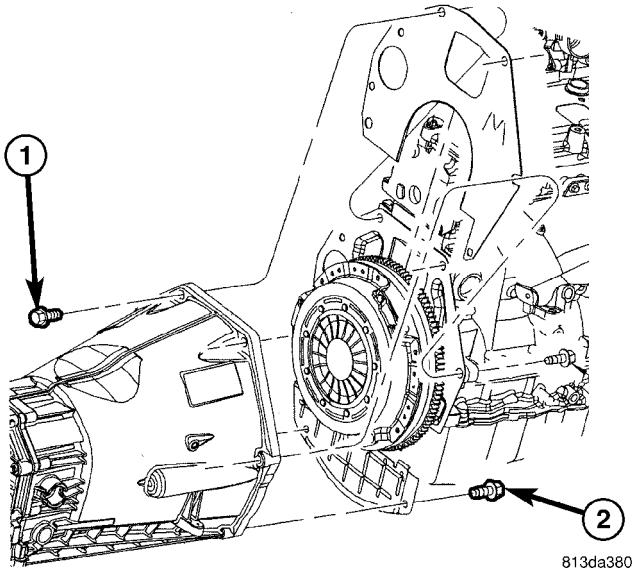


Fig. 118 2.4L ENGINE

1. TRANSMISSION BOLT
2. DUST SHIELD BOLT

(1) Install transmission on engine.

(2) On 2.4L engine tighten bolts (1) to 75 N·m (55 ft. lbs.). Install lower dust shield and tighten bolts (2) to 34 N·m (25 ft. lbs.) (Fig. 118).

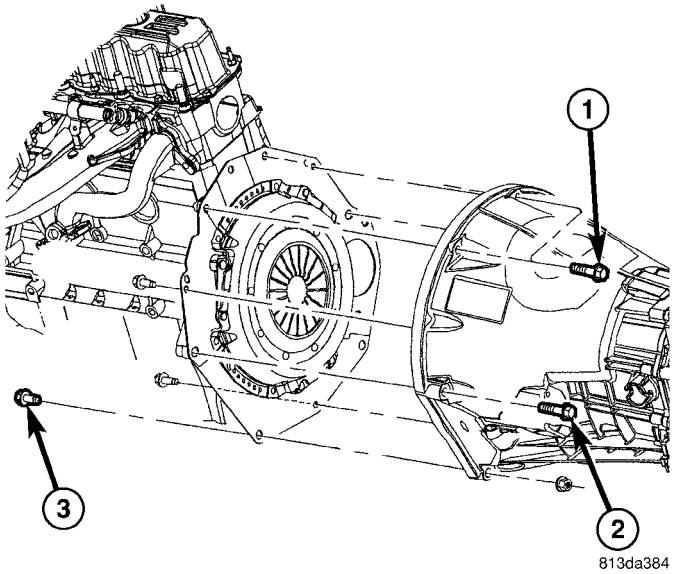


Fig. 119 4.0L ENGINE

1. UPPER TRANSMISSION BOLTS
2. SIDE DUST COVER BOLTS
3. LOWER DUST COVER BOLTS

(3) On 4.0L engine tighten bolts (1) to 37 N·m (27 ft. lbs.). Install side and lower dust shield and tighten bolts (2) (3) to 58 N·m (43 ft. lbs.) (Fig. 119).

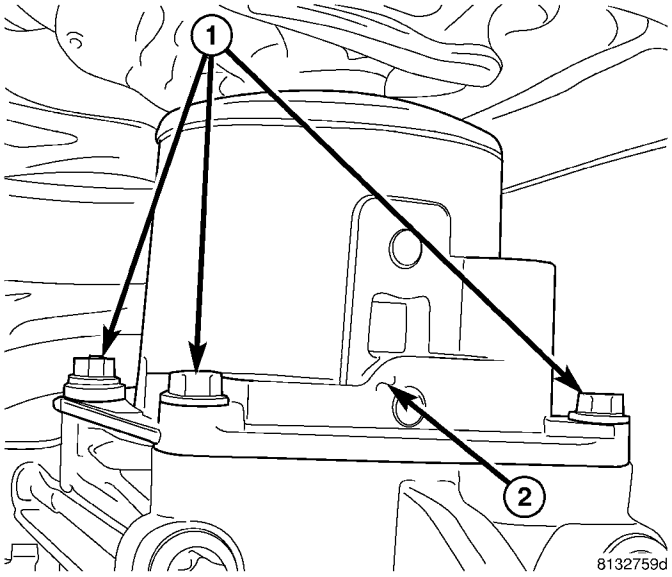


Fig. 120 SHIFT LEVER

1. BOLTS
2. SHIFT TOWER

(4) Clean shift tower and mating surface then apply Mopar® Gasket Maker to shift tower.

(5) Install shift tower (2) and tighten bolts (1) to 10 N·m (7 ft. lbs.) (Fig. 120).

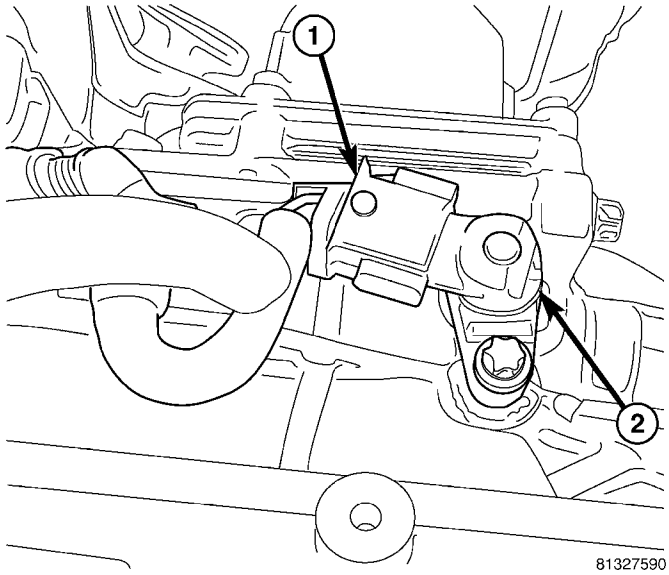


Fig. 121 BACKUP LAMP SWITCH

1. CONNECTOR
2. BACKUP LAMP SWITCH

(6) Install backup lamp (2) wiring connector (1) (Fig. 121).