MANUAL TRANSMISSION - NSG370 (Continued)

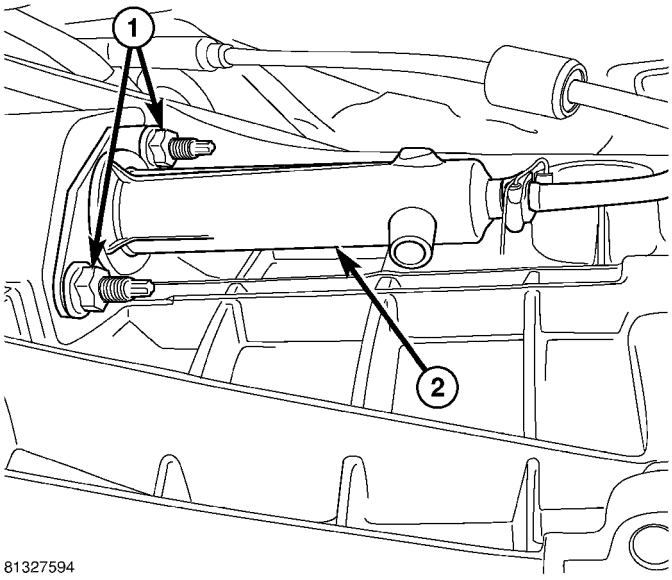

Fig. 122 CLUTCH SLAVE CYLINDER

1. BOLTS
2. SLAVE CYLINDER

(7) Install clutch slave cylinder (2) and mounting nuts (1) (Fig. 122).

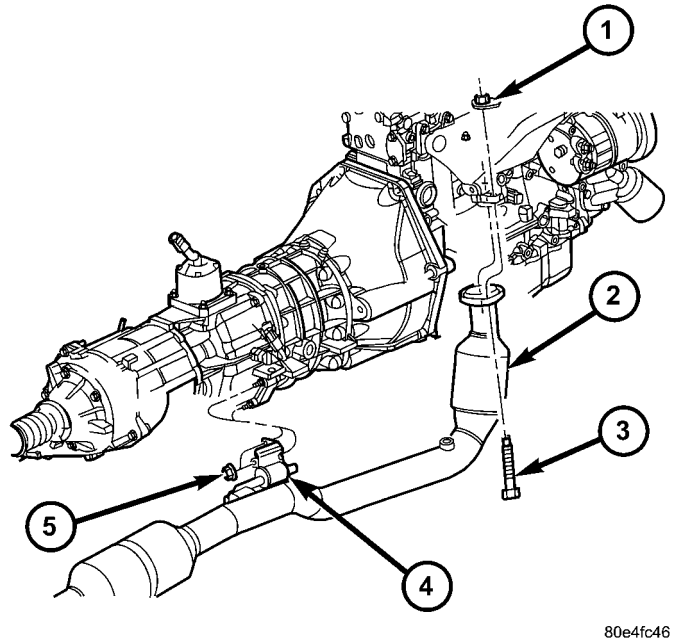

Fig. 123 2.4L CATALYST ASSEMBLY - 4x4

1- FLANGED NUT
2- CATALYST ASSEMBLY
3- BOLT
4- HANGER
5- NUT

(8) Install catalyst assembly (2) on 2.4L engine (Fig. 123).

(9) Install transmission crossmember and tighten bolts to 47 N·m (35 ft. lbs.). Install transmission mount bolts and tighten to 47 N·m (35 ft. lbs.).

(10) Install transfer case, if equipped.

(11) Install transfer case shift linkage.

(12) Install transfer case wiring connector and vent hose.

(13) Install propeller shaft/shafts with reference marks aligned.

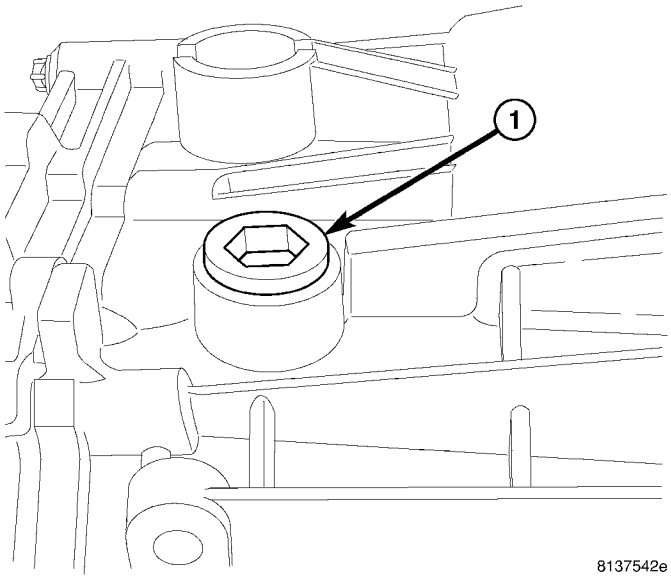

Fig. 124 FILL PLUG

1. FILL PLUG

(14) Remove fill plug (1) and fill transmission withn lubricant (Fig. 124).